

Nail Trimmer Instruction Manual



⚠ WARNING

- The following persons should not use this appliance: pregnant women or while nursing; children; persons with skin inflammation on the fingers or toes; persons with allergies; persons with reduced physical, sensory or mental skills.
- Immediately stop using the appliance and consult a doctor if you feel unwell.
- Do not use the appliance for any purpose other than nail care.
- Do not attempt to modify, disassemble or repair the appliance by yourself.
- **WARNING!** Do not look directly at the UV light.

⚠ CAUTION

- REMOVE BATTERIES FROM THE ITEM WHEN NOT IN USE FOR EXTENDED TIME OR WHEN THE BATTERIES BECOME EXHAUSTED.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- IT MUST ONLY BE SUPPLIED AT SAFETY EXTRA LOW VOLTAGE CORRESPONDING TO THE MARKING ON THE APPLIANCE.

KEYCODE: 43-140-732

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

KMART CUSTOMER SERVICE:

AU: 1800 124 125


NZ: 0800 945 995

Product components:

3 interchangeable rotating nail disc pads for babies



3 interchangeable tools for adults

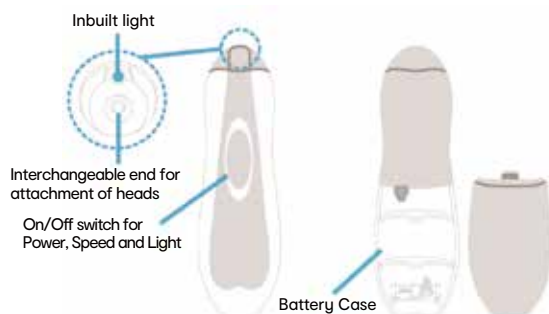

Interchangeable Heads For Different Ages:



Super Fine Grinding Head (Yellow)
0-3 months
Soft Disc Pad



Fine Grinding Head (Coral)
4-11 months
Medium Disc Pad



Coarse Grinding Head (Teal)
12+ months
Hard Disc Pad



Cylindrical Grinding Head
Smooths the edges of nails



Soft Metal Grinding Head
Removes the dead skin and calluses from around nails



Soft Polishing Head
Polishes and removes the dead skin at the base of nails

Instructions:



Insert 2 x AA batteries (not included)



Choose grinding head suitable to baby's age



Attach the grinding head to the interchangeable end of the unit. To change the current head, pull it off the unit and replace with desired head



Hold your baby's finger/toe and select the appropriate speed

Modes:



- R2 ~ Rotates clockwise on high speed
- R1 ~ Rotates clockwise on low speed
- L1 ~ Rotates anti-clockwise on low speed
- L2 ~ Rotates anti-clockwise on high speed
- LO ~ off mode

CARE INSTRUCTIONS:

CASE: Wash with warm soapy water and rinse with clear water.

INTERCHANGEABLE HEADS: Clean with a cotton wad dampened in disinfectant.

BATTERY PRECAUTIONS:

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE ITEM BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE ITEM WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

NOTE:

WARNING: THIS PRODUCT IS NOT A TOY. DO NOT ALLOW CHILDREN TO PLAY WITH IT.

RECYCLING:

Batteries contain substances harmful to our environment. Do not dispose of the appliance with the batteries inserted. Remove the batteries and take the product to your local council recycling point for environmental protection.

Troubleshooting

Problem	Possible Cause	Solution
Not working	Batteries incorrectly installed	Reinstall batteries correctly
	Low battery power	Install new batteries
Abnormal noise	Grind head incorrectly installed	Remove and reinstall the grinding head correctly
	Low battery power	Install new batteries
Poor manicure result	Incorrect grinding head	Replace with the correct grinding head