

# anko

**Cordless Water Kettle  
LD-K1045  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## **--Important Safety Instructions--**

### **Intended use**

- \* The kettle is intended solely for boiling water. Heating of milk, carbonated drinks or other liquids will cause malfunction or damage the appliance.
- \* The appliance is intended for household use only. It is not suitable for commercial use.

### **DANGER to children and infirm persons**

- \* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- \* Children should be supervised to ensure that they do not play with the appliance.
- \* Keep packing material out of children's reach. There is a risk of suffocation!

### **DANGER due to electricity**

- \* The base, plug and mains cord must not come into contact with water or other liquids. This could result in the risk of electric shock. You should therefore not, for example, place the kettle near a sink. Do not use the kettle outdoors.
- \* The kettle must never be immersed in water or other liquids. Water must not be allowed to come into contact with the electric parts from underneath.
- \* Do not use the appliance when your hands are wet.
- \* The kettle must only be connected to a properly installed and earthed wall socket with a mains voltage that matches the “Technical specifications” of the appliance.
- \* For safety reasons use of an extension cord with the kettle is not recommended
- \* Never leave the appliance unattended while in use.
- \* Keep the appliance and mains cord away from sources of heat such as cooking plates or open gas flames. This could cause melting.
- \* Keep the mains cord away from sharp surface edges.
- \* Unplug the kettle, ...
  - ... if a disturbance occurs,
  - ... if you are not going to use it for a prolonged period of time,
  - ... during thunderstorms and
  - ... before cleaning it.
  - ... when storing.To do so, always pull the plug and not on the mains cord.
- \* Do not use the appliance if the kettle, base or mains cord show any visible sign of damage.
- \* Do not make any modifications to the appliance and its mains cord or change the connection cable yourself.
- \* For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrical person only or the product must be disposed.

### **Warning - Risk of burns / scalding**


- \* Always stand the water kettle on a solid and even surface.  
Ensure that it cannot slip or be dropped and that the power cord does not hang down.
- \* The kettle becomes hot while in use. Do not move the kettle during operation and do not pull on the mains cord. Only hold the hot kettle by its handle.
- \* Contact with rising steam can cause scalding! Make sure the lid is always firmly closed and do not open it while water is boiling or while pouring water out.

- \* Do not fill the container with less than MIN. (0.5L) or more than MAX. (1.5L) of water. If there is not enough water in the kettle, the appliance may overheat. If too much water is filled, the boiling water may splash out.
- \* Be sure that the kettle is switched OFF before taking it off the power base.
- \* If the kettle is overfilled, boiling water may be ejected and cause scalding.
- \* The kettle is only to be used with the base provided.
- \* CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched ON.
- \* CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning outside surface, use a soft cloth and a mild detergent.
- \* CAUTION: Position the lid so that steam is directed away from the handle.
- \* WARNING: Avoid spillage on the electrical connector.
- \* WARNING: Misuse may cause injury.
- \* WARNING: The heating element surface is subject to residual heat after use.
- \* WARNING: Do not remove the lid while the water is boiling.
- \* This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments,
  - farmhouses,
  - by clients in hotels, motels and other residential type environments,
  - bed and breakfast type environments.
- \* For cleaning, please refer to section “Cleaning And Care”.

### **CAUTION - Material damage**

- \* Take care that any steam escaping from the appliance can damage wallpapers, wall cabinets or other items. Turn the spout away from furniture, walls, window blinds etc.
- \* Do not use caustic, aggressive or abrasive cleaning products for cleaning. Keep hard items away from the appliance.
- \* Although the kettle is protected from boiling dry, it must never be operated without water.
- \* If the cut-out switch switches off the kettle to prevent overheating and boiling dry, proceed as follows:
  - Remove the kettle from the base.
  - Allow the kettle to cool down for at least 15 minutes before refilling it with water or placing the kettle on the power base.
- \* Only use the kettle with the power base provided.
- \* Furniture today is often coated with a wide range of varnishes and plastics and is treated with various substances. Some of these products may contain substances that react adversely with the rubber feet on the kettle power base and soften them. This can cause staining on the surface. Therefore, we recommend placing a non-slip mat under the rubber feet of the kettle base.

## -Knowing Your Product -

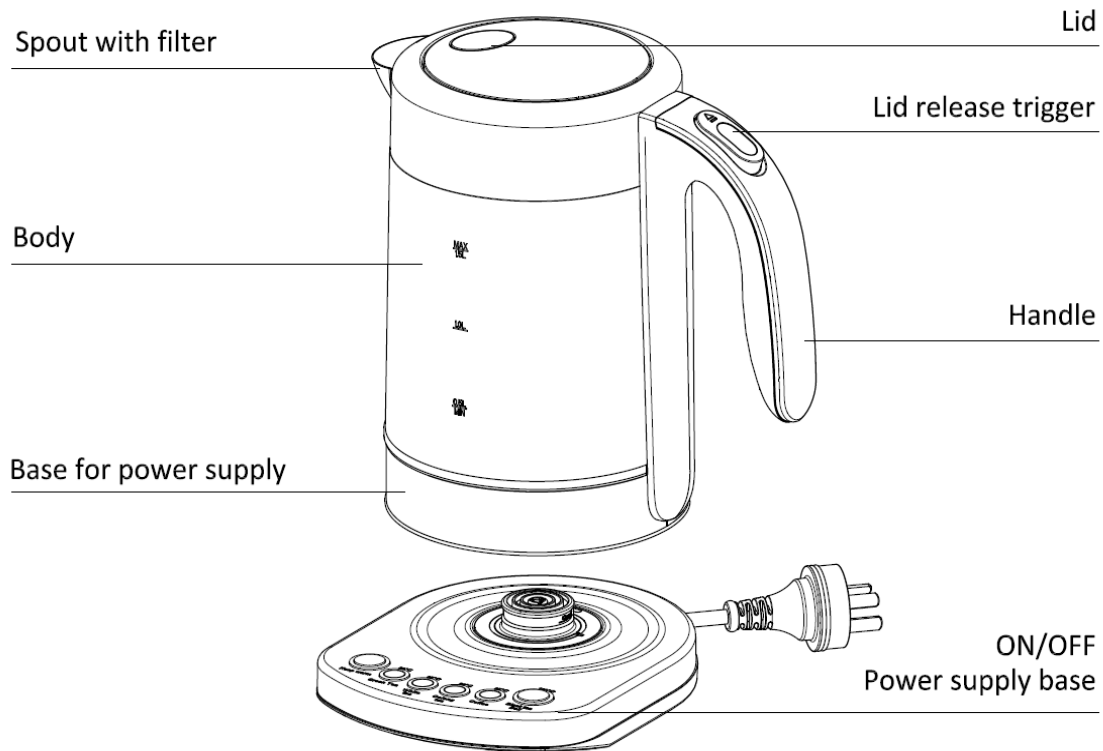

## -Technical Data--

### Electrical Parameter:

Model:	LD-K1045
Voltage:	220-240V~
Frequency:	50- 60Hz
Wattage:	1850-2200W
Rating Capacity:	1.5 L

### **Unpacking**

**CAUTION! DANGER** to children- danger to life due to suffocation/swallowing.

Keep all packing material and plastic bags out of reach of children. Dispose of it immediately.

\* Carefully remove all parts from the packaging and check that no parts are missing or damaged during shipping. If the product is damaged, do not use. Please return it to Kmart for replacement.

\* Remove all packaging material.

### **First time use**

**IMPORTANT!** During the below process, **DO NOT** fill the kettle more than the MIN. (0.5L) mark on the kettle.

Filling above the min. mark will cause over boil and spillage out of the spout.

To ensure a long service life of the water kettle and to remove any residue from manufacturing process, proceed as follows before using it for the first time:

1. Fill the kettle with water and add vinegar in a ratio of 1:3 (1 part vinegar / 3 parts water).

Note: Make the mixture in a separate container and then pour into the kettle, not more than the MIN. (0.5L) mark.

2. Bring to a boil (see Boiling water), then pour away.

3. Allow the kettle to cool down and then refill it fresh water, boil the water and then pour it away again



To avoid scale deposits, descale the water kettle at regular intervals (after about every 15th use) as described in the section "Descaling".

### **--How to use your kettle --**

The appliance can heat water to 80°C, 85°C, 90°C, 95°C, 100°C (boil) and has a keep warm function (Note: keep warm function cannot be used when 100°C boiling function is selected).

When the appliance is connected to mains power, all lights will be ON, and the appliance is in standby status. All the lights will switch OFF, if the appliance is not used after 5 minutes. If you touch any of the buttons, all the lights will switch back ON again to indicate standby status.

#### **1. Heating water**

- a. Press the button for 80°C in standby status, and the corresponding LED light will flash to indicate the water is heating up. The appliance will start to heat the water till it reaches the selected temperature. The LED light will stop blinking and remain steady ON when the water in the kettle has reached the selected temperature. The LED indicator light will turn OFF automatically after five minutes.
- b. The same working procedure applies to 85°C, 90°C, 95°C and 100°C function.

#### **2. Heat water and keep warm**

- c. Press the button for 80°C first, then press the keep warm button. The LED light for 80°C will flash while the keep warm button will be illuminated. The LED light will stop blinking and remain steady ON when the water in the kettle has reached the selected temperature. The appliance will stay in keep warm status for 30 minutes.

**NOTE:** During keep warm function, the kettle will switch ON & OFF to maintain the selected water temperature. This is normal.

- d. The same working procedure applies to 85°C+ keep warm, 90°C + keep warm, 95°C + keep warm.
- e. If the appliance is in the keep warm state and the body is removed from the base, the keep warm function will be paused and the keep warm LED will flash. Put the body back in 5 minutes, and the keep warm function will continue. Otherwise, the appliance will shut down.

**NOTE:** The keep warm function cannot be selected when boiling water at 100°C.

### **Boiling water**

**WARNING!** Risk of fire and burns:

- \* The kettle body and its lid become hot while in use. Do not touch them.
- \* The lid must be tightly closed during the boiling process. It must not be opened while pouring water out. Let the appliance cool down before opening the lid.

**CAUTION!** – boiling water can cause damage to property and cause injuries.

- \* Do not fill the water container with less than MIN. (0.5L) or more than MAX. (1.5L) of water.

## **IMPORTANT! This appliance is not intended to heat liquid other than water**

1. Press the lid release trigger. The lid will open automatically.
2. Fill the kettle with the amount of water required. You can check the water fill level on the water indicator on the kettle.
3. Press the lid front location down firmly to close it.



Make sure that the lid is tightly closed during use.

Otherwise, the water kettle may not switch OFF after boiling

4. Fully unwind the power cord and run it through the cable guide channel on the base.
5. Plug the mains cable into an earthed socket that is within easy reach.
6. Place the kettle on the base and press the 100°C (boil) button on the base.

The control blue lamp will blink to indicate that the kettle is ON.

When the kettle has finished boiling, the kettle switches off automatically and the control blue lamp will remain ON and switch OFF after 5 minutes.

7. If you wish to stop heating the water before it boils, press the selected temperature button again to switch off the kettle.

\* Be sure that the water kettle is switched OFF before removing it off the power base.

8. After the water has come to a boil, wait a moment, until the water has stopped simmering.

Remove the kettle from the water base.

**CAUTION!** Risk of burns from boiling water.

9. Pour the water out slowly to avoid splashing. Do not open the lid while pouring out the water.



\* The sieve insert in the spout prevents any larger particles of scale being poured out.

\* Do not re-boil stale water. Pour it away.

## **--Cleaning And Care--**

### **DANGER– risk of fatal electric shock**

- \* Remove the mains plug from the wall socket before cleaning the kettle.
- \* The power base, plug and mains cord must not come into contact with water or other liquids.
- \* The kettle must not be immersed in water or liquid.
- \* The product and its parts must not be cleaned in the dishwasher.

### **CAUTION- material damage**

- \* Do not use caustic, aggressive or abrasive cleaning products for cleaning.
- \* Do not use alkaline cleaning agents while cleaning, use a soft cloth and mild detergent.

### **Cleaning**

1. Remove the supply cord plug from mains power socket and let the water kettle cool down completely.
2. Wipe off the base and power cord with a dry cloth.
3. Wipe the outside of the jug with a slightly moistened cloth.
4. Pull the sieve out of the spout and off for cleaning if necessary.
5. Rinse it off under running hot water.

### **Decalcification**

**IMPORTANT!** during the below process DO NOT fill the kettle more than the MIN. (0.5L) mark on the kettle.

Filling above the min. mark will cause over boil and spillage out of the spout.

The kettle must be descaled at regular intervals, especially if the power base is visibly encrusted with lime scale. Regular descaling saves energy and increases the service life of the kettle.

For ecological reasons, we recommend using a three-to-one solution of water and vinegar or water and citric acid to descale the kettle.

- Fill the kettle with water and add vinegar in a ratio of 1:3 (1 part vinegar / 3 parts water).  
Note: Make the mixture in a separate container and then pour into the kettle, not more than the MIN. (0.5L) mark.
- Let the solution soak in the kettle for about an hour and then bring it to the boil.
- Thoroughly rinse out the kettle with fresh water.

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>