

User Guide

Product Details

File name: 5107_MAN_43157181_v
Artwork Proof Date: 22.02.2022

Printing Details

Print Colours: **BLACK**
Do Not Print: **Dieline, Info**

Special Instructions

Please use 80gsm bright white paper.

不要在原圖設計作任何修改

ARTWORK SHOULD NOT BE AMENDED
WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY
CREST PRIOR TO MASS PRODUCTION.
THANK-YOU.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

© The Crest Company 2022. All rights reserved.

Z-fold - printed both sides



CHANGE LOG CREST INTERNAL USE ONLY

V



LED Night Light Alarm Clock

Operating Instructions

Includes:

- › alarm clock with night light
- › USB cable
- › user manual



43-157-181

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

1692/2

- Alarm setting button to confirm first alarm setting.
- › Repeat above setting for following three alarms.

Snooze mode

- › When alarm clock rings, press **night light/snooze button** to enter snooze mode and flash, the alarm will sound again after 5 minutes.
- › Repeat times of snooze mode is not limited.
- › Press **Alarm setting button** to switch off current alarm clock.

Night light

- › Press **night light/snooze button** to turn on night light, press **night light/snooze** again to turn off night light.
- › Press **night light/snooze** twice to turn on night light timing off function, press **+ or - button** to select light off timing progress bar whose range is 10-60minutes, function active automatically after 5 second.
- › Press **night light/snooze** to turn off the light and exit the light off timing function.

Auto sound active function.

- › Sound control to wake up the clock automatically.

Timer function

- › Press **night light/snooze** twice to turn on timer function, press **+ or - button** to set the countdown time (up to 99 minutes), then press **night light/snooze** to run timer function.
- › Press **night/snooze** to pause timer count down, press **night/snooze** again to continue timer function. it will ring after counting down.
- › Press **night light/snooze** twice to cancel timer function at any time.

Specification:

Model No.: 43157181

Input Voltage: 5V/1A dc

Rechargeable Battery: 1200mAh


Power: 3W

Standby time: approx. 10 hours at most brightness light on
approx. 260hours at lowest brightness light on

SIDE 1

110

Function Overview

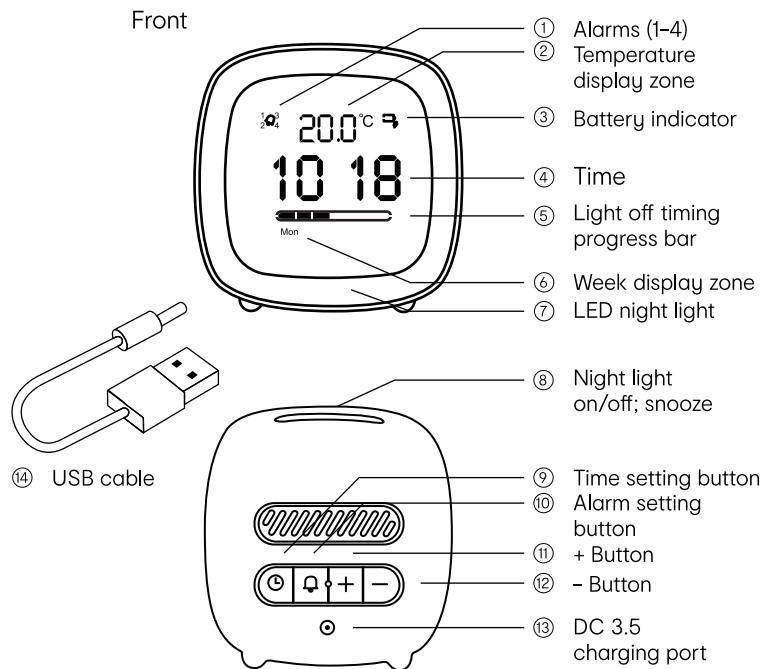

SIDE 2

How to use this product

Power on

- › Insert provided USB power cable into the port marked as DC 3.5 and connect the other end to an appropriate power source.


Power off

- › Press Snooze and - button together to power off.


Battery charging

- › The alarm clock must be fully charged on first use or when it is out of battery.
- › If all three bars in the battery symbol light up, the battery is 70%-100% charged.

Battery charging status

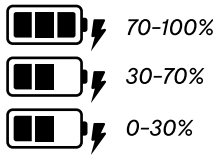

Battery indicator

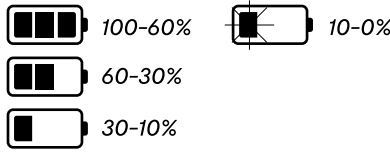

Time setting

- › Press and hold **Time setting button** to enter into time setting mode. 12/24H system symbol flashes after entering time setting, press **+ or - button** to switch between 12H or 24H display. Press **Time setting button** confirm 12/24H setting then to enter into Hour setting.
- › Press **+ or - button** to set the Hour. Press **Time setting button** confirm hour setting then to enter Minute setting.
- › Press **+ or - button** to set the Minute. Press **Time setting button** confirm minute setting then to enter Year setting.
- › Press **+ or - button** to set the Year. Press **Time setting button** confirm year setting then to enter Month setting.
- › Press **+ or - button** to set the Month. Press **Time setting button** confirm month setting then to enter Date setting.
- › Press **+ or - button** to set the Date. Press **Time setting button** confirm date setting then to enter Temperature Unit setting.
- › Press **+ or - button** to switch °C or F display. Press **Time setting button** confirm temperature setting and end time setting.

Alarm setting.

- › Press and hold **Alarm setting button** to enter alarm setting mode, first alarm symbol ¹⌚₂³₄ and alarm On/Off symbol will flash. A total of 4 alarms can be set on the device.
- › Select first alarm on, press **Alarm setting button** to confirm and enter hour setting.
- Note: When alarm selected off mode, press **Alarm setting button** to enter directly to next alarm setting.
- › Press **+ or - button** to set hour, then press **Alarm setting button** to confirm and enter minute setting.
- › Press **+ or - button** to set minute, then press **Alarm setting button** to confirm and enter alarm day of the week setting.
- › Press **+ or - button** to let the Day of the Week flash. Press **Snooze button** to switch on/off the selected alarm day. If the day of the week before the flash day setting disappeared, it is switched off (and vice versa). Press