anko

LED Night Light Alarm Clock


Operating Instructions

Includes:

- > alarm clock with night light
- > USB cable
- > user manual



Function Overview

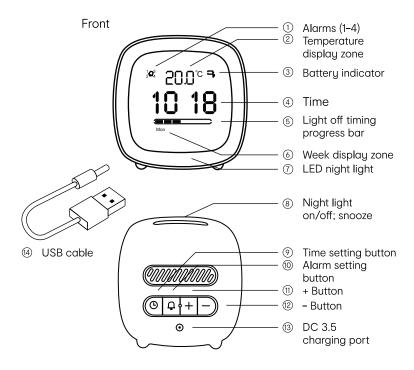

How to use this product

Power on

Insert provided USB power cable into the port marked as DC 3.5 and connect the other end to an appropriate power source.

Power off

> Press Snooze and - button together to power off.

Battery charging

- > The alarm clock must be fully charged on first use or when it is out of batteru.
- > If all three bars in the battery symbol light up, the battery is 70%–100% charged.

Auto sound active function

The clock display screen will disappear after 5 seconds for power saving purpose, sound control to wake up the clock automatically.

Battery charging status Battery indicator 100-60% 100-60% 100-0% 100-0% 30-10%

Time setting

- Press and hold Time setting button to enter into time setting mode. 12/24H system symbol flashes after entering time setting, press + or button to switch between 12H or 24H display. Press Time setting button confirm 12/24H setting then to enter into Hour setting.
- > Press + or button to set the Hour. Press Time setting button confirm hour setting then to enter Minute setting.
- > Press + or button to set the Minute. Press Time setting button confirm minute setting then to enter Year setting.
- > Press + or button to set the Year. Press Time setting button confirm year setting then to enter Month setting.
- > Press + or button to set the Month. Press Time setting button confirm month setting then to enter Date setting.
- > Press + or button to set the Date. Press Time setting button confirm date setting then to enter Temperature Unit setting.
- > Press + or button to switch °C or F display. Press Time setting button confirm temperature setting and end time setting.

Alarm setting

- > Press and hold Alarm setting button to enter alarm setting mode, first alarm symbol ¹ooa³ and alarm On/Off symbol will flash. A total of 4 alarms can be set on the device.
- > Select first alarm on, press Alarm setting button to confirm and enter hour setting.
 - Note: When alarm selected off mode, press Alarm setting button to enter directly to next alarm setting.
- > Press + or button to set hour, then press Alarm setting button to confirm and enter minute setting.
- Press + or button to set minute, then press Alarm setting button to confirm and enter alarm day of the week setting.

- Press + or button to let the Day of the Week flash. Press Snooze button to switch on/off the selected alarm day. If the day of the week before the flash day setting disappeared, it is switched off (and vice versa). Press Alarm setting button to confirm first alarm setting.
- Repeat above setting for following three alarms.

Snooze mode

- > When alarm clock rings, press night light/snooze button to enter snooze mode and flash, the alarm will sound again after 5 minutes.
- Repeat times of snooze mode is not limited.
- > Press Alarm setting button to switch off current alarm clock.

Night light

- Press night light/snooze button to turn on night light, press night light/snooze again to turn off night light.
- > Press night light/snooze twice to turn on night light timing off function, press + or button to select light off timing progress bar whose range is 10-60 minutes, function active automatically after 5 second.
- > Press night light/snooze to turn off the light and exit the light off timing function.

Timer function

- > Press night light/snooze twice to turn on timer function, press + or button to set the countdown timer (up to 99 minutes), then press night light/snooze to run timer function.
- > Press night light/snooze to pause timer countdown, press night light/snooze again to continue timer function. It will ring after counting down.
- > Press night light/snooze twice to cancel timer function at any time.

Specification:

Input Voltage: 5V/1A dc Standby time: approx. 10 hours at most Brightness light on standard brightness light on

Power: 3W approx. 260 hours at lowest brightness light on

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above. from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE: KMART AU: 1800 124 125 KMART NZ: 0800 945 995 TARGET AU: 1300 753 567