

Assembly Instructions

43158515 HAVEN WIDE ENTRYWAY UNIT

CARE INSTRUCTIONS:












 
 





For indoor and domestic use. Keep away from water and direct sunlight. Wipe clean with a soft dry cloth. Check and tighten all parts regularly.


WARNING:

Do not stand on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.


MAXIMUM SAFE LOAD: 100kgs/seat ; 3kgs each hook

Hardware list


	A	7.8 x 30mm	62 PCS		J		4 PCS
	B	7.8 x 40mm	8 PCS		K	3 x 14mm	8 PCS
	C	7.8 x 50mm	8 PCS		L	3 x 14mm	14 PCS
	D	7.8 x 20mm	2 PCS		M		2 PCS
	E	Ø5 x 50mm	23 PCS		N		1 PCS
	F	Ø4 x 24mm	3 PCS		O		2 PCS
	G		34 PCS		P	4 x 12mm	2 PCS
	H		42 PCS		Q	4 x 40mm	2 PCS
	I		4 PCS		R		9 PCS

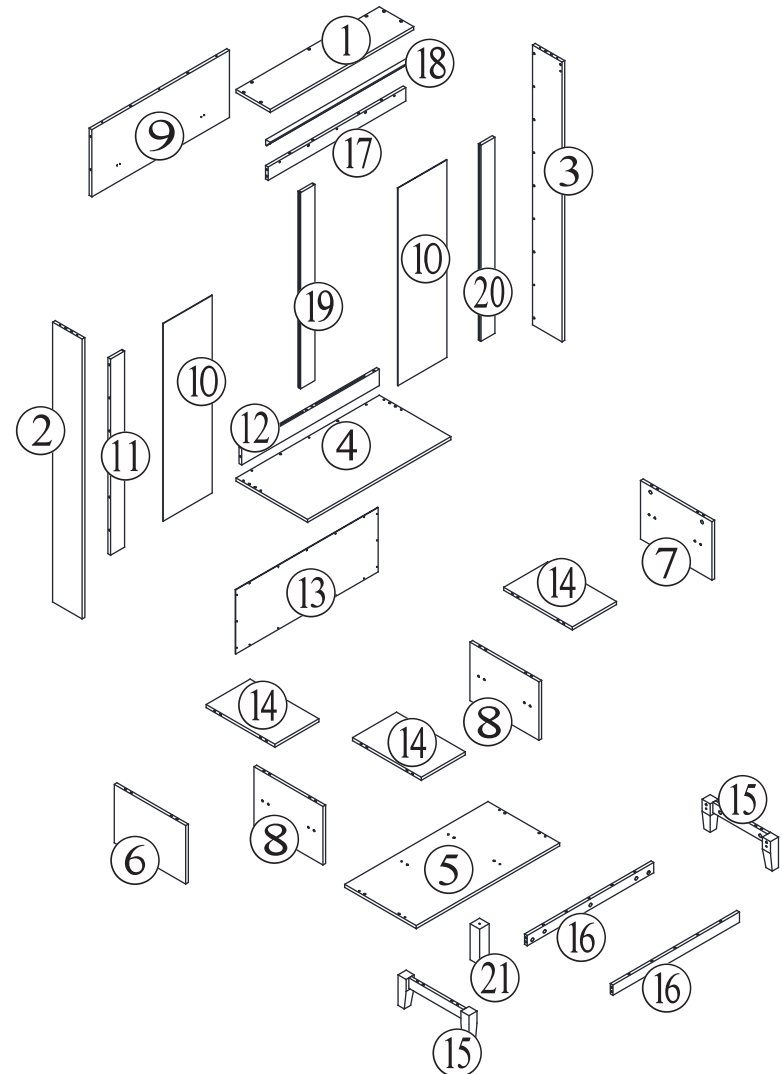 

 
STEP 1




A x 8

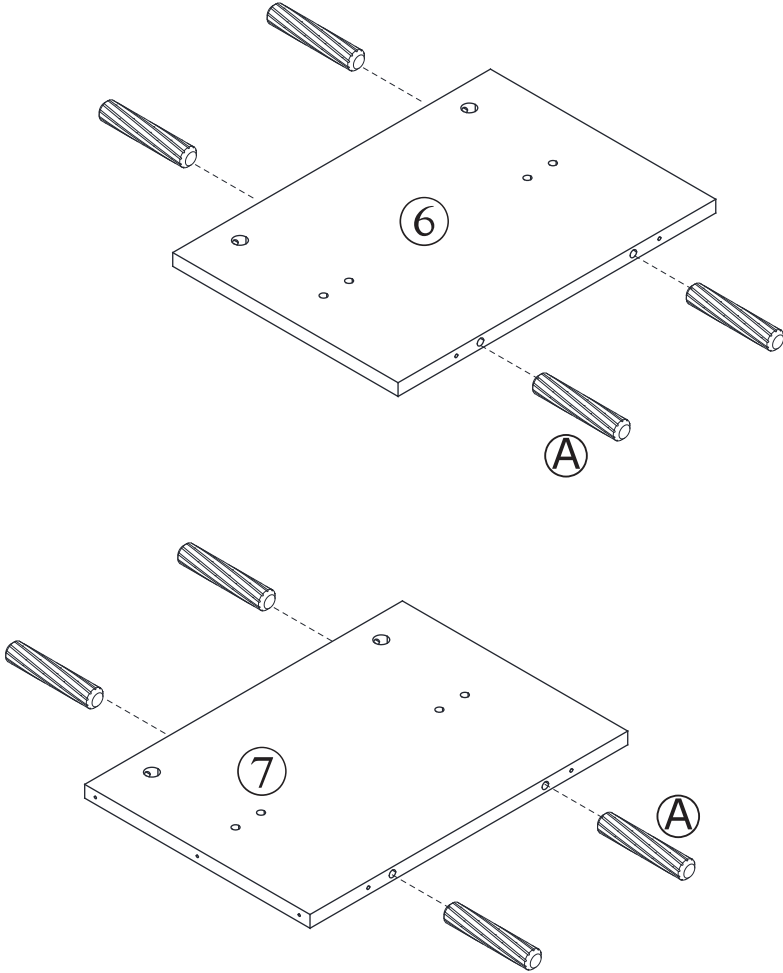 

 
STEP 1




A x 8

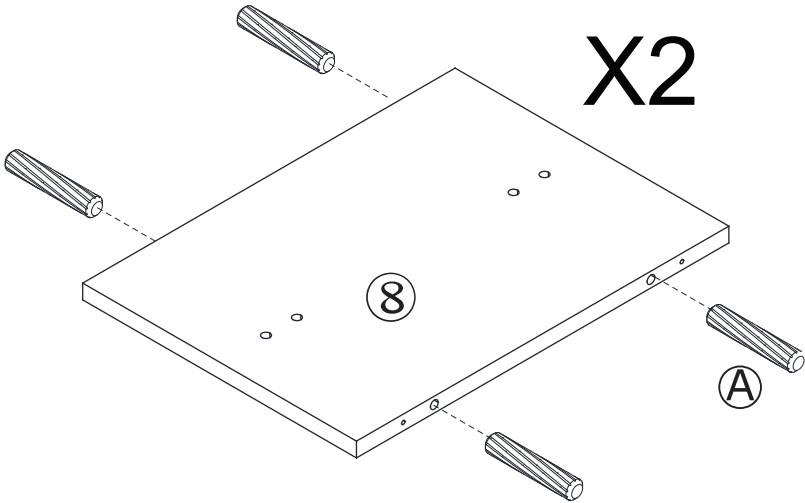 

 STEP 2




A x 8

 


C x 8

 For all the vertical panels, the side without edge banding face up

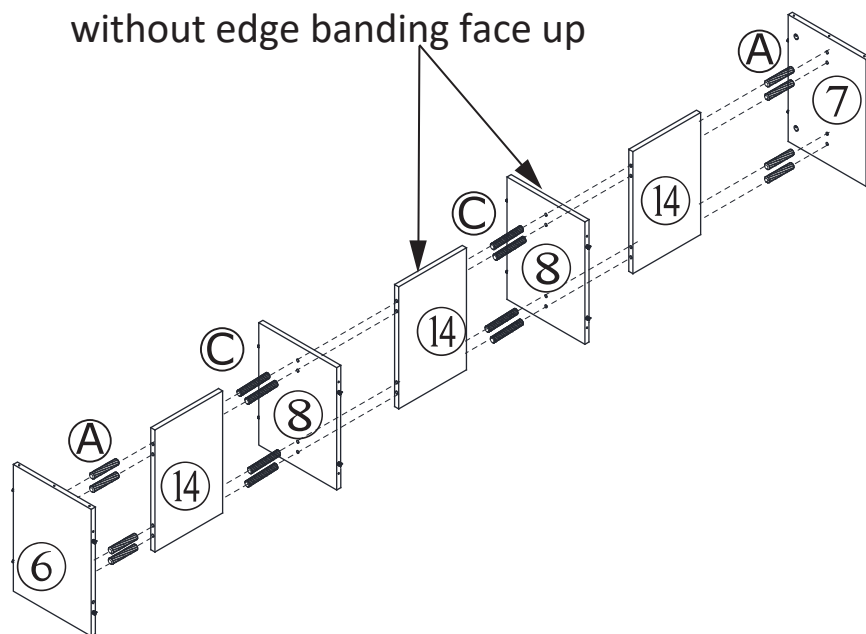

 STEP 3





G x 10



E x 1



  
R x 1

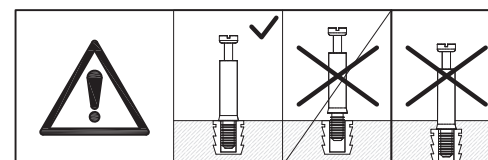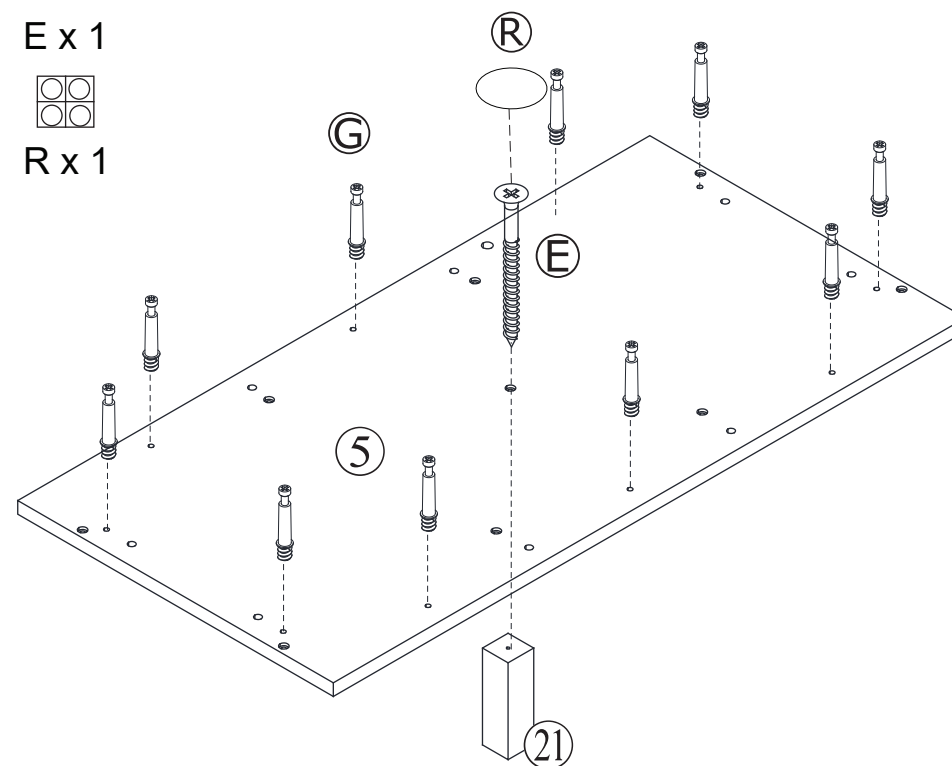


STEP 4



 
E x 8

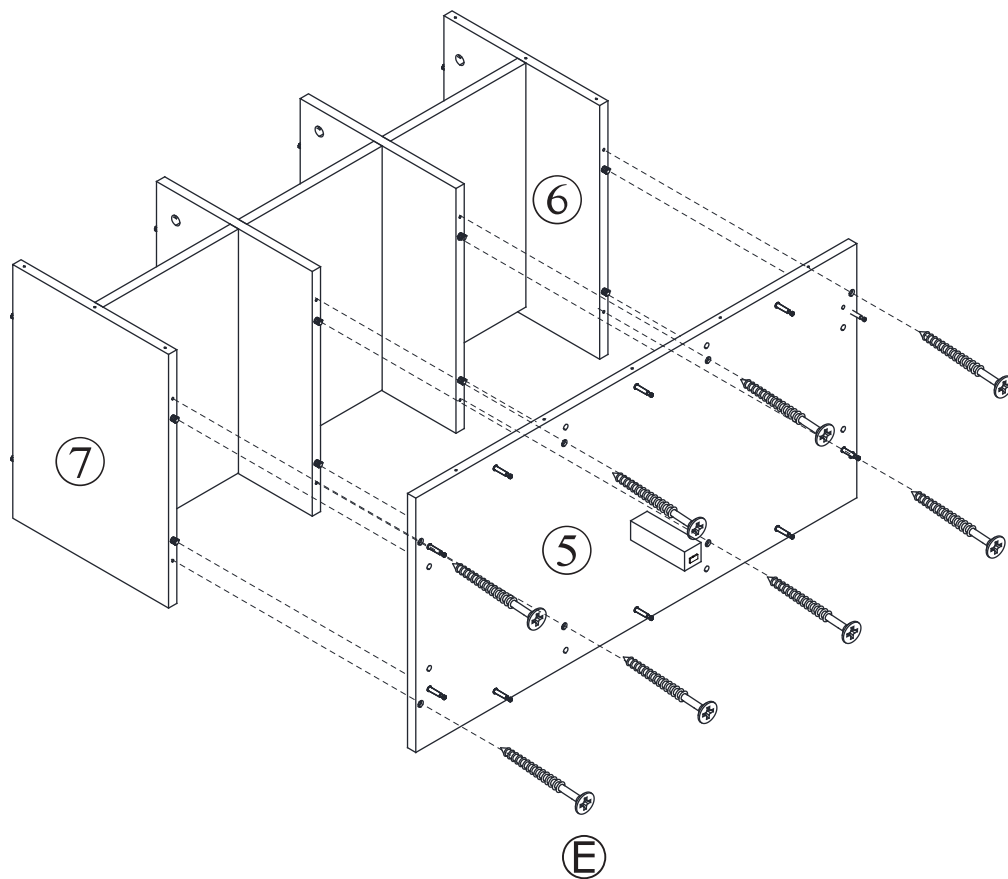


 
STEP 5



A x 12

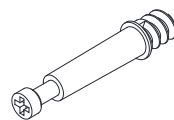 



G x 4

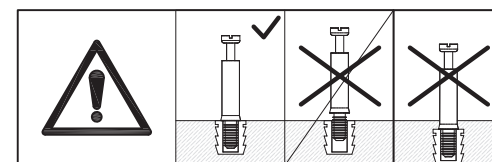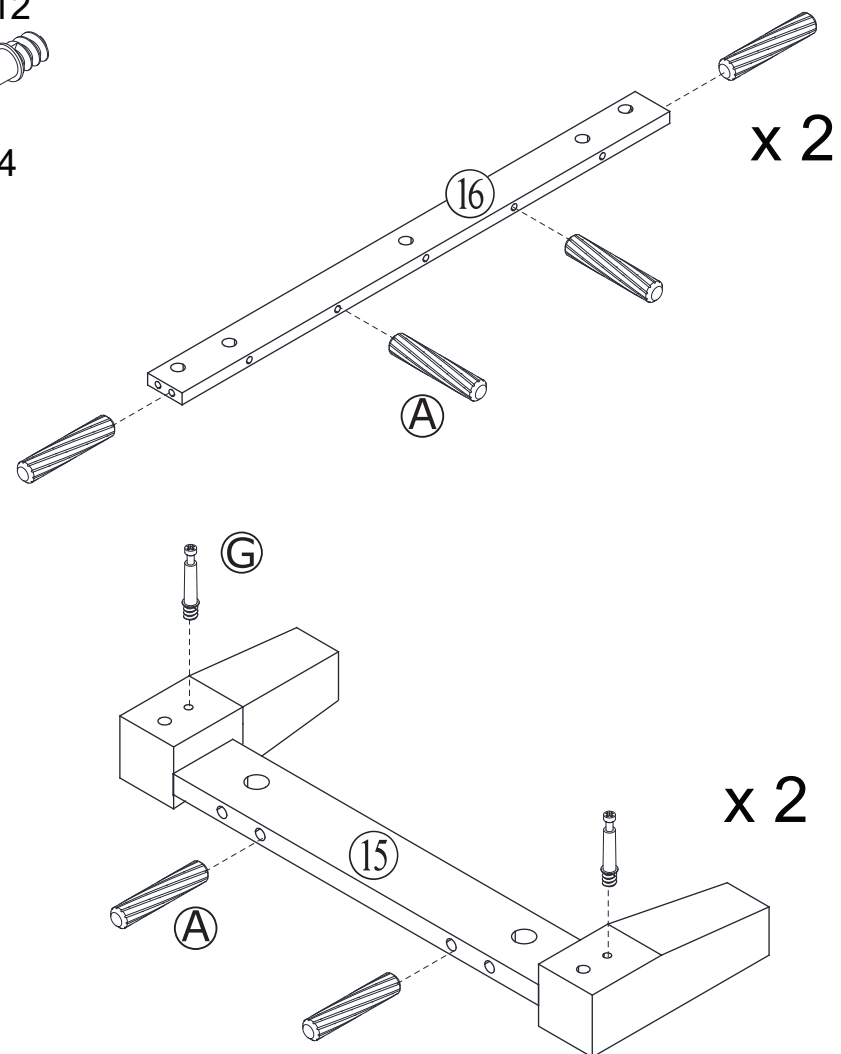  

STEP 6



 
 
H x 4

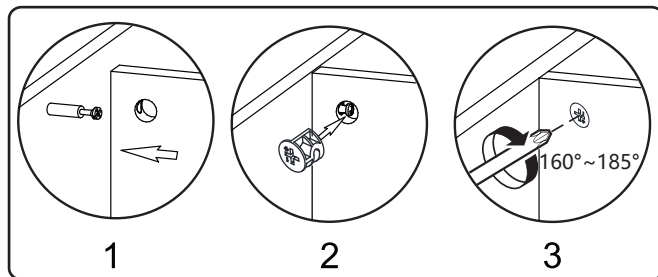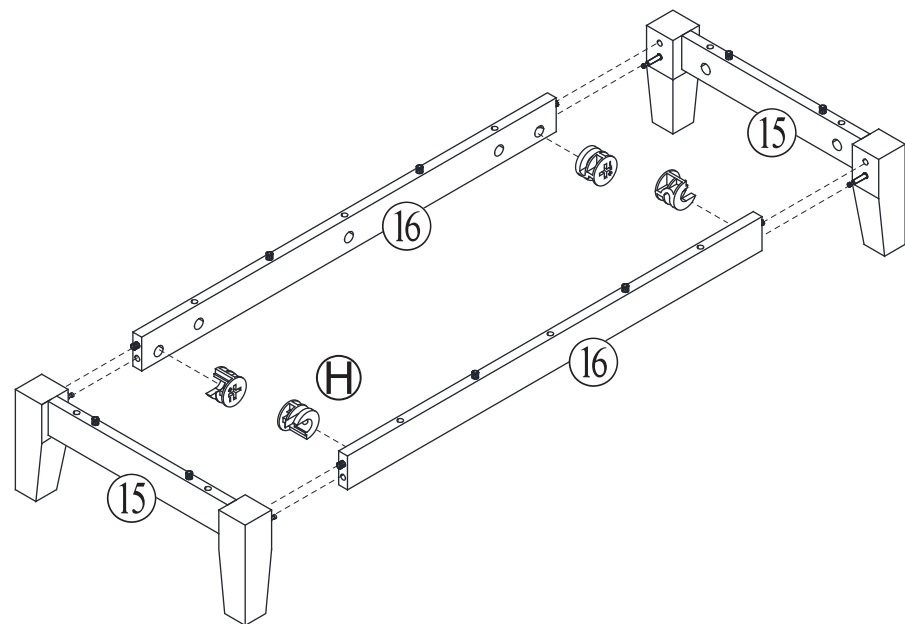


STEP 7



  
H x 10

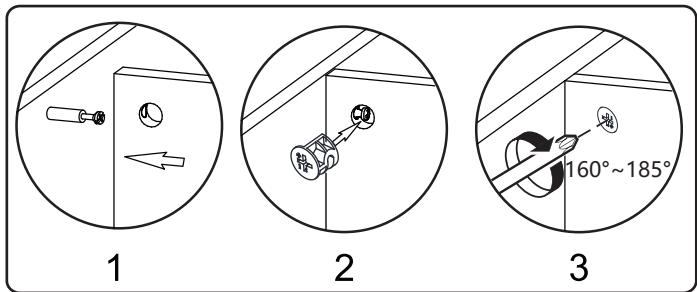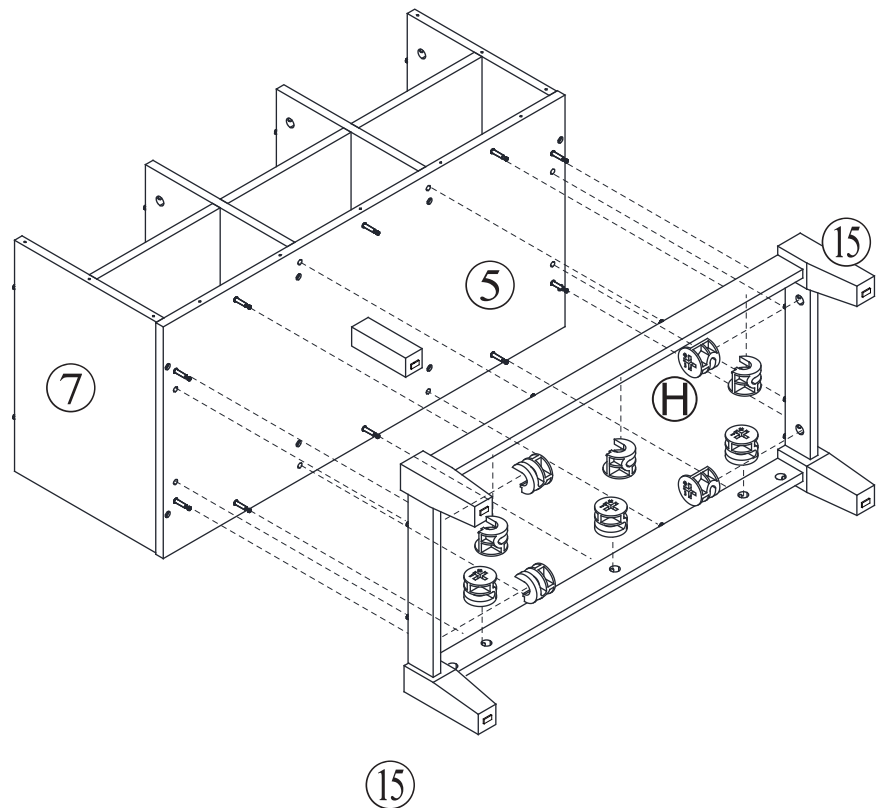

 
STEP 8




A x 6

 


B x 8

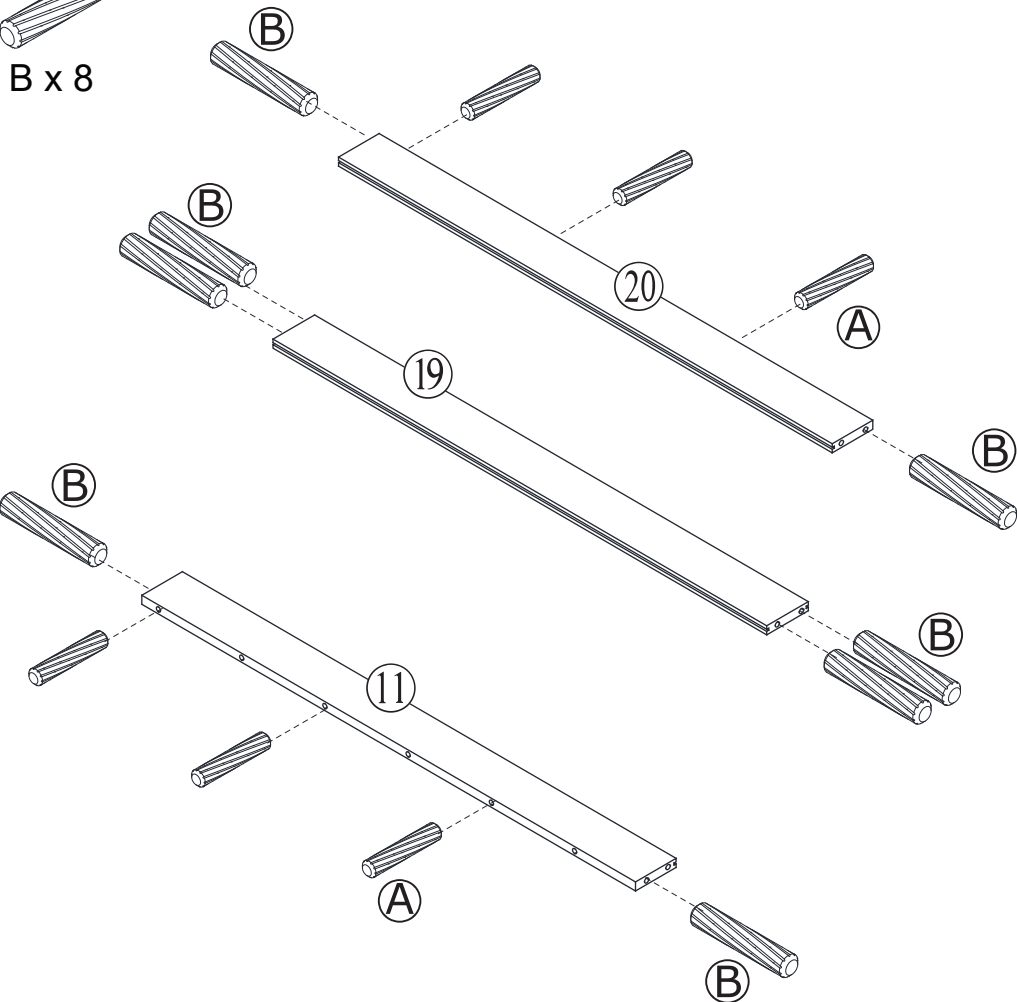 

 STEP 9




A x 8

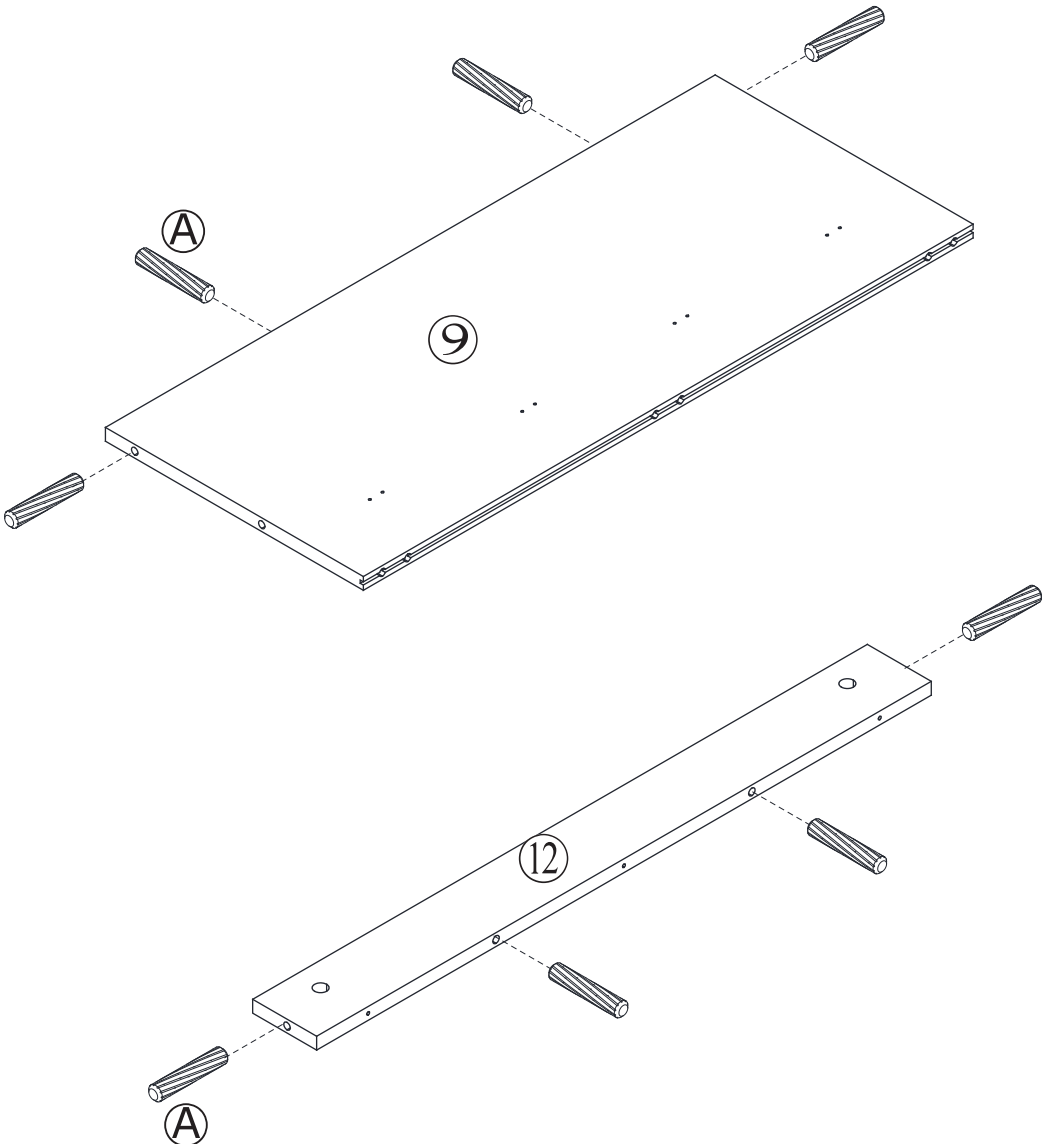 



STEP 10



 H x 4




I x 2

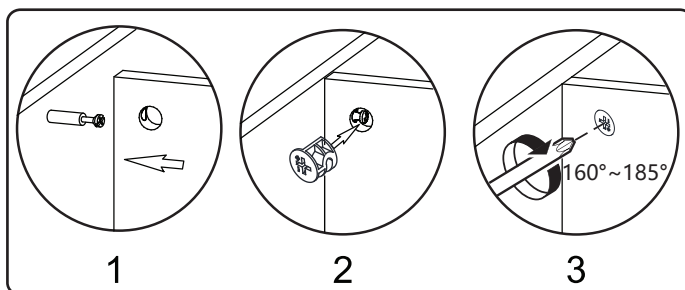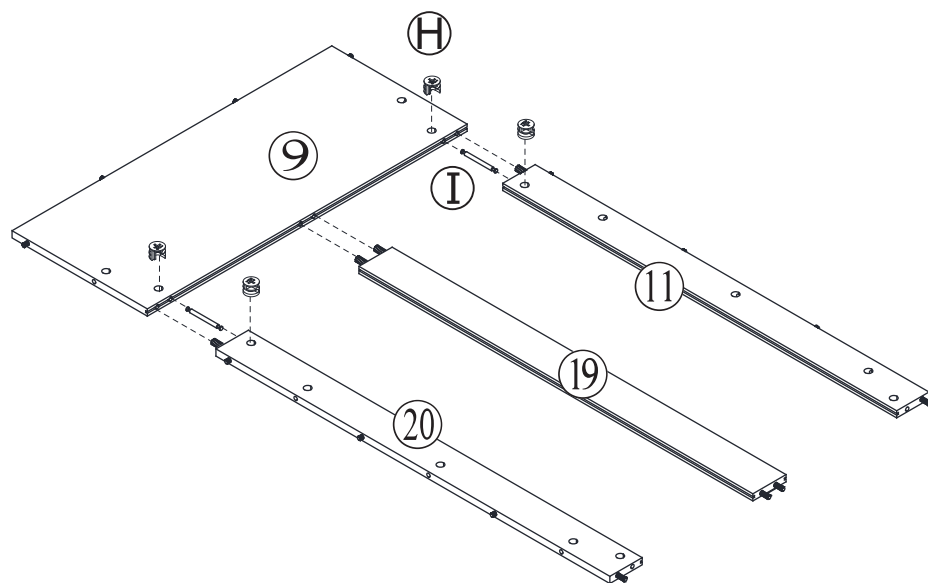  



STEP 11



 
H x 4



I x 2

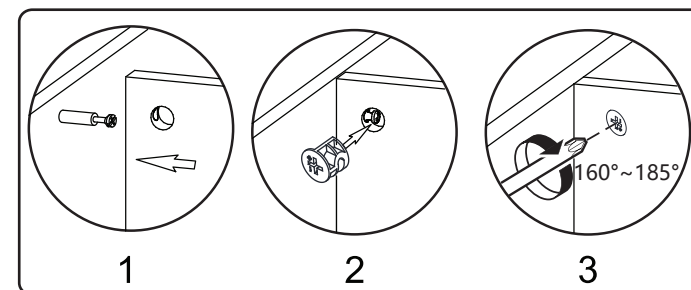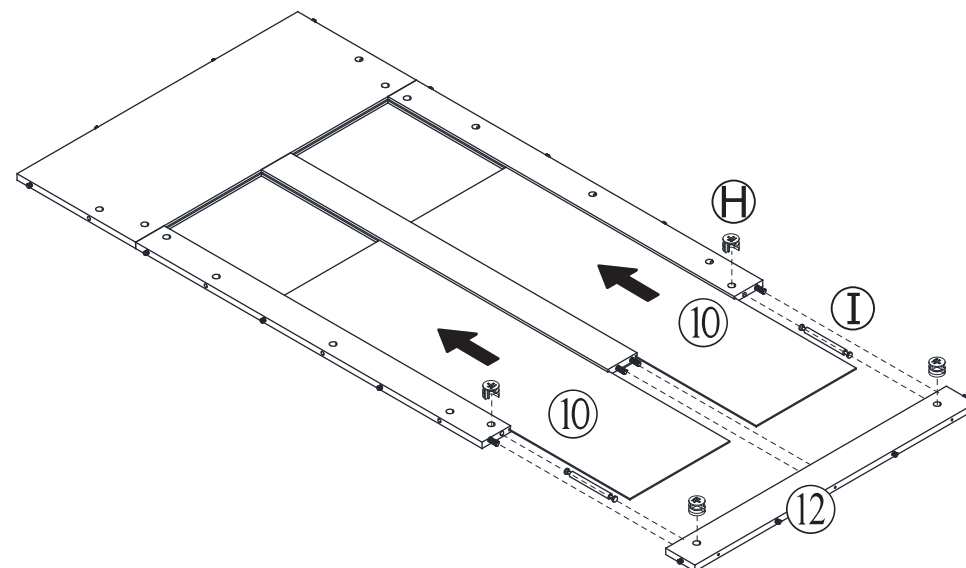  

 STEP 12




A x 4




D x 2



 
F x 3

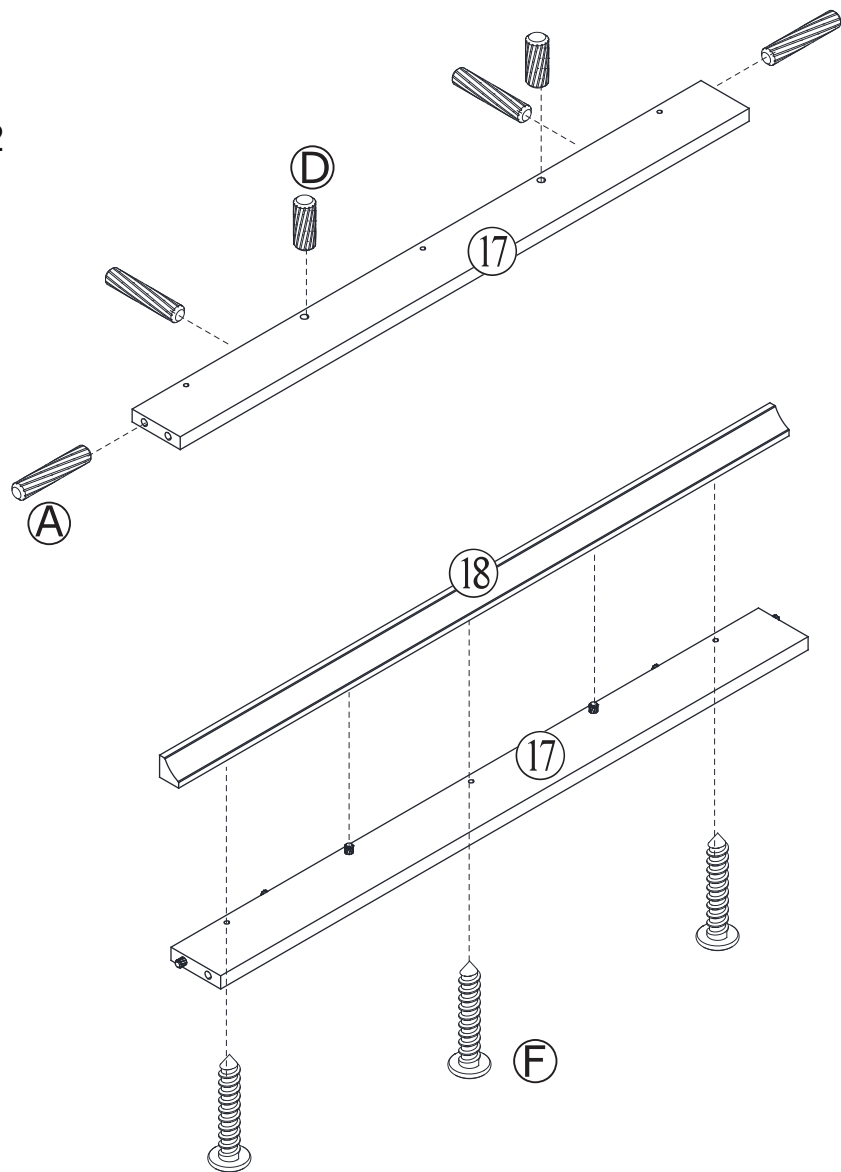


 
STEP 13



A x 8

 

G x 10

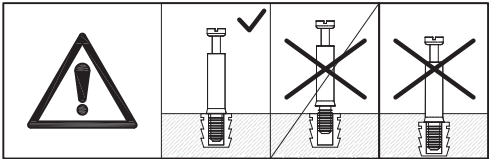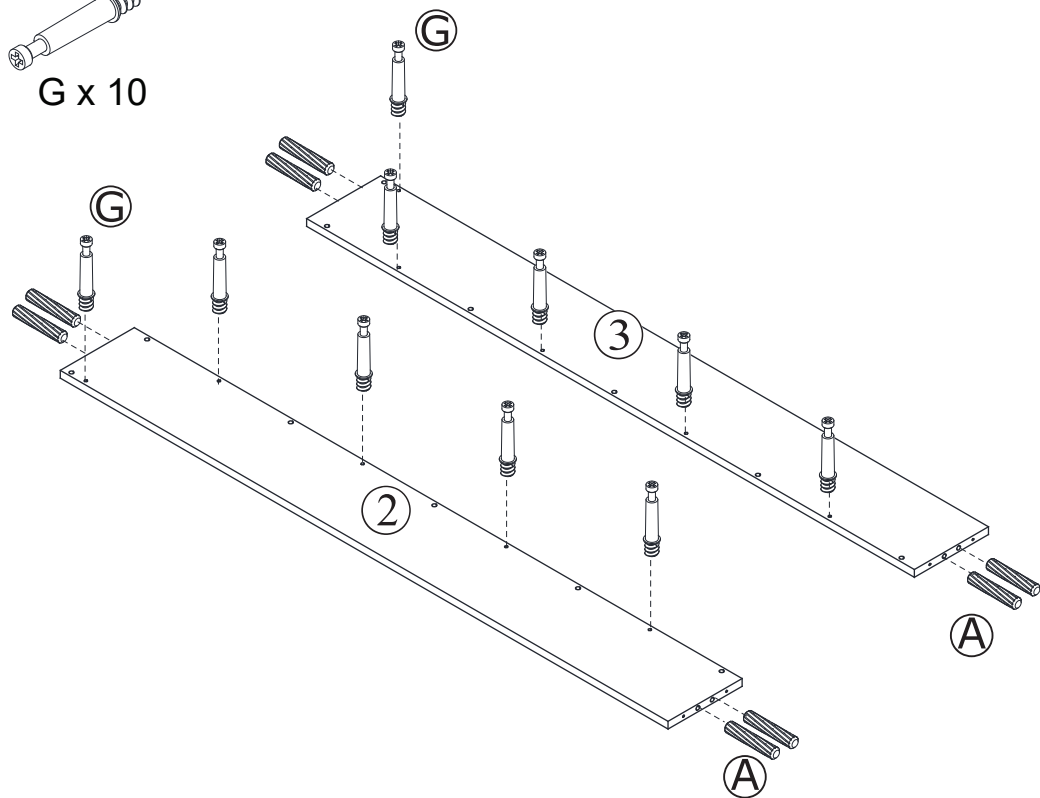  



STEP 14



H x 5



  N x 1

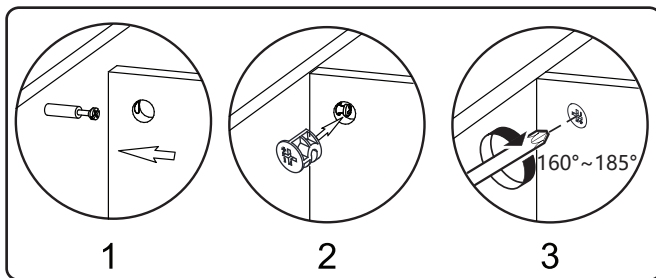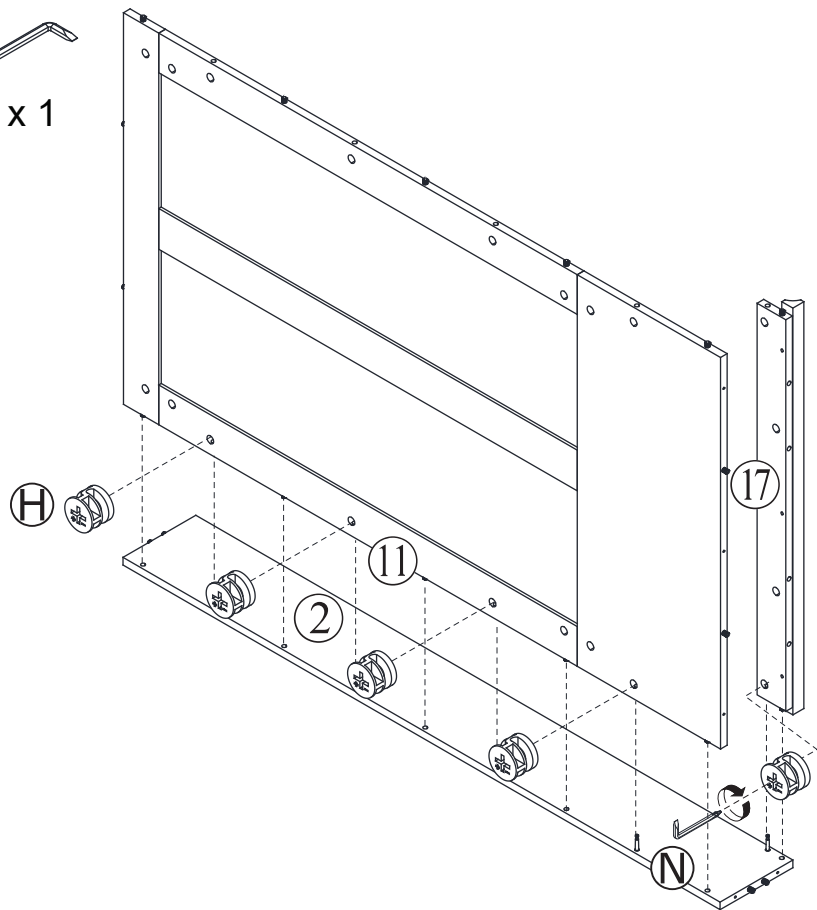



STEP 15





H x 5



  N x 1

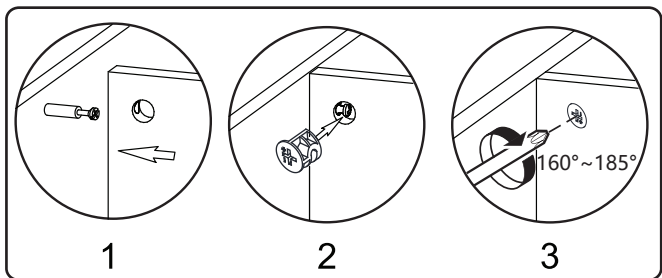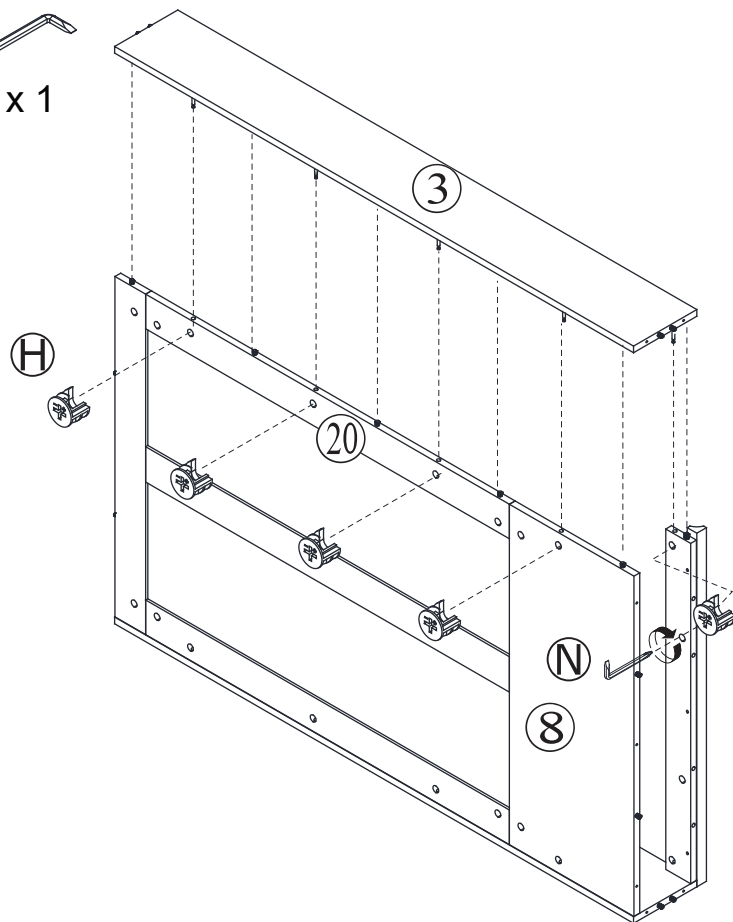

  STEP 16

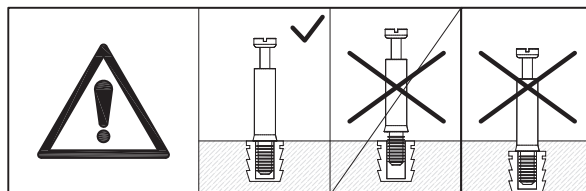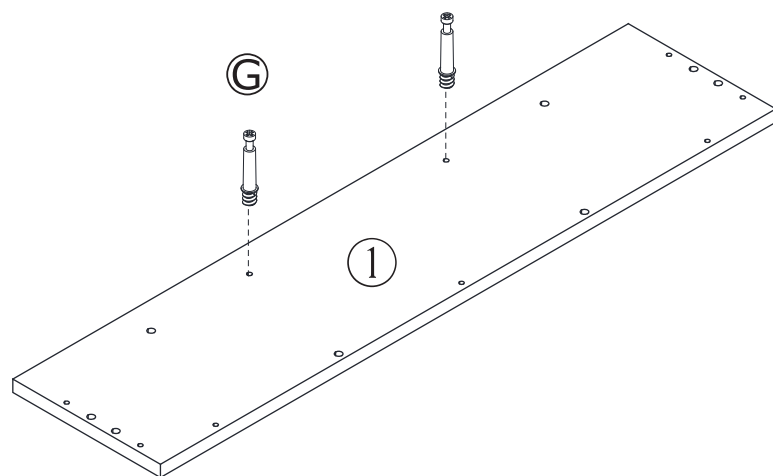

STEP 17



 
 
H x 2




J x 4





K x 8

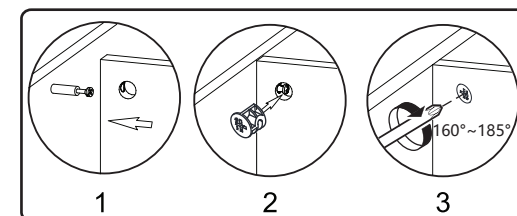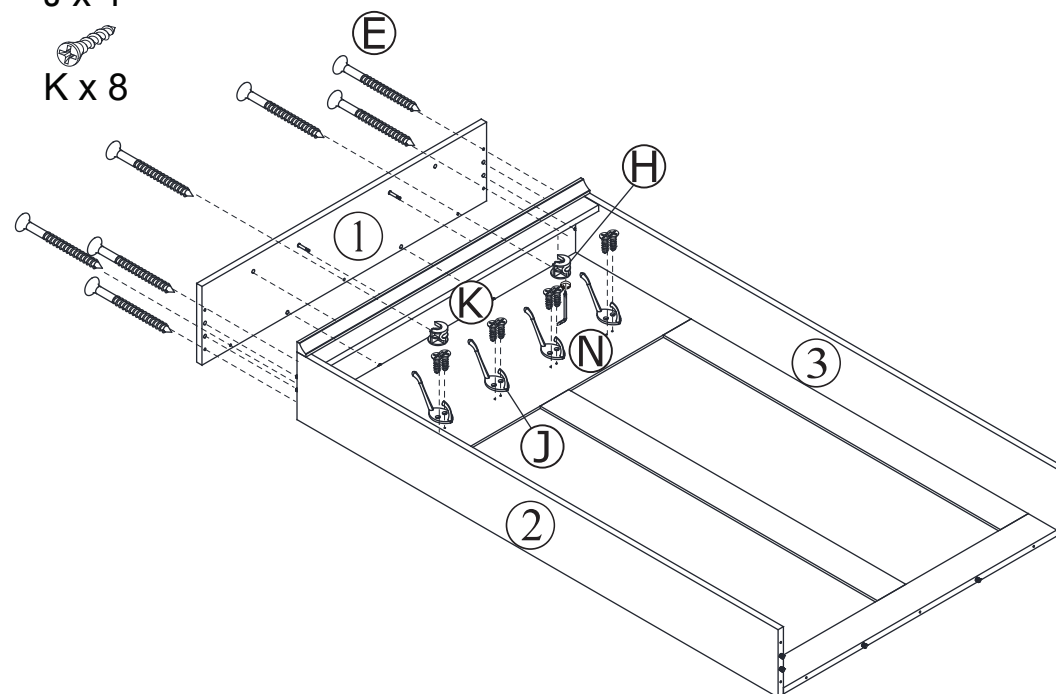

 
STEP 18




G x 8

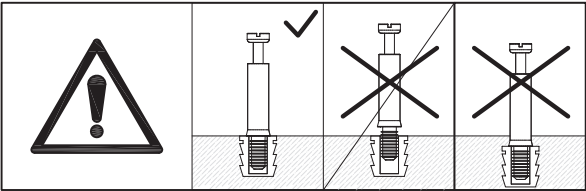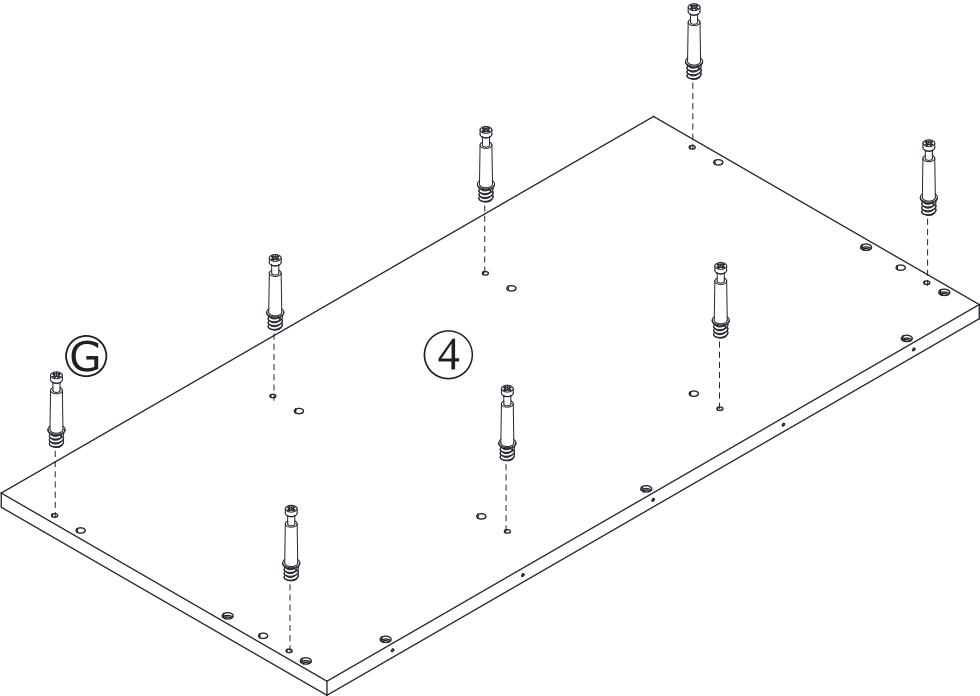  

 STEP 19



E x 7

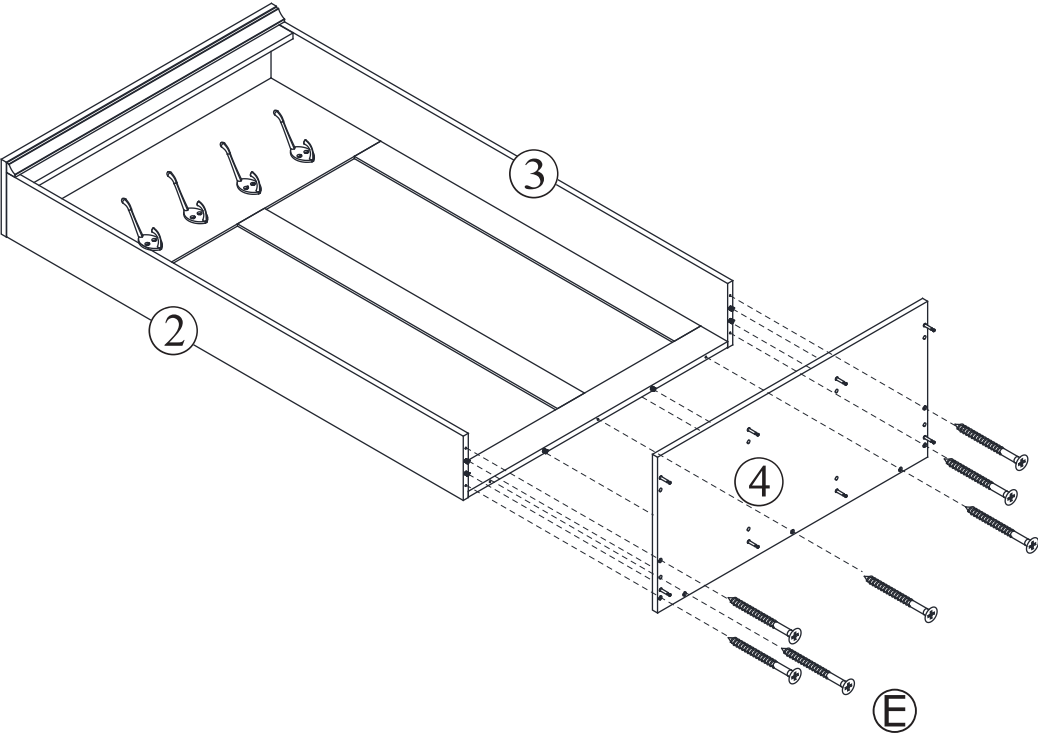 



STEP 20



H x 8



  
R x 8

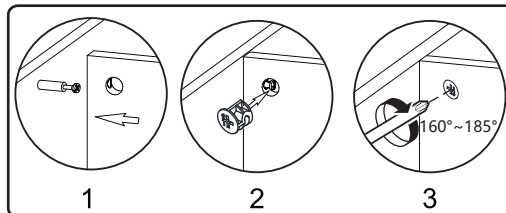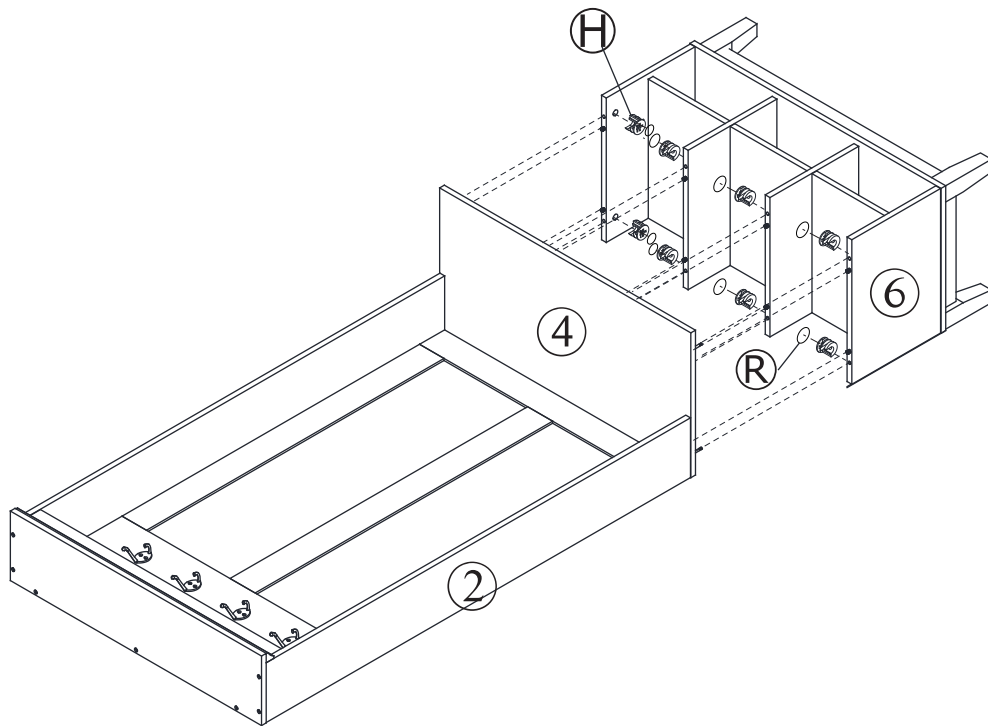

STEP 21



 L x 14

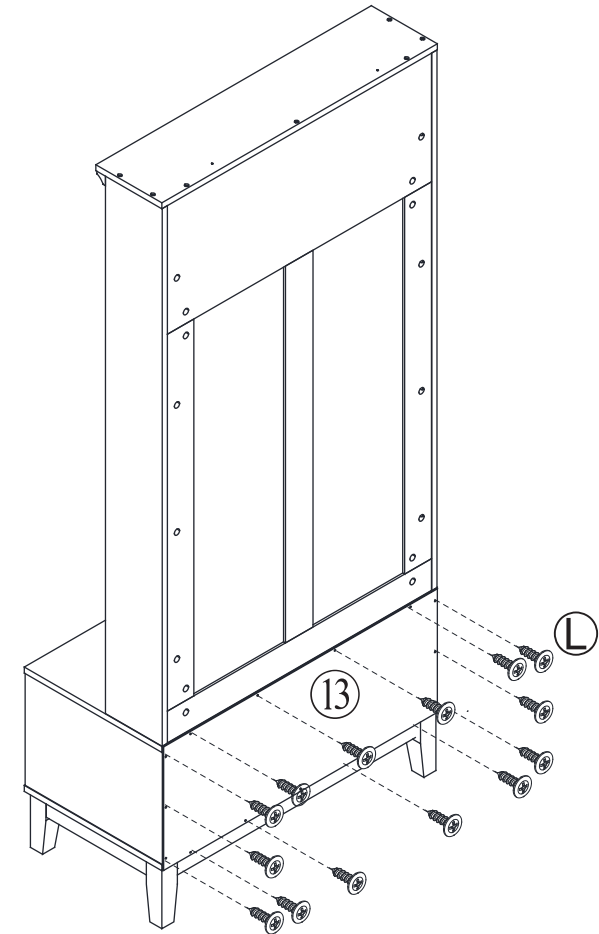

STEP 22



M x 2



 
 
O x 2



P x 2



Q x 2

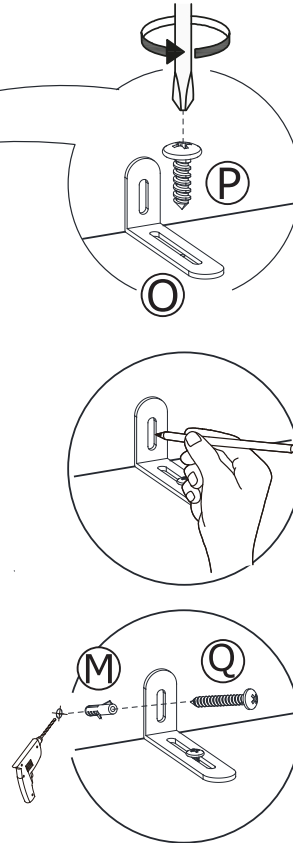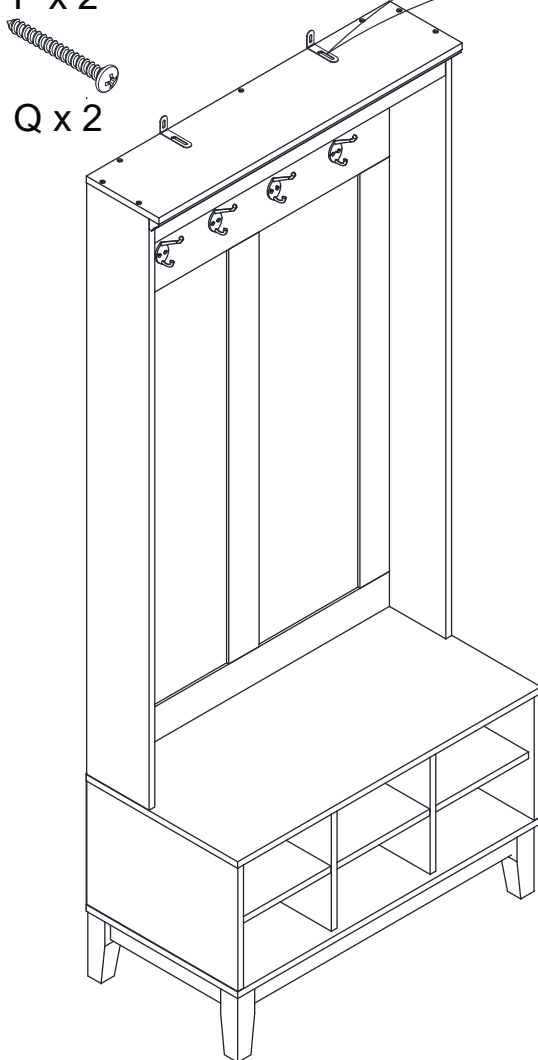

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors
- Do not place unanchored televisions on furniture

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

