

anko

KARAOKE PARTY SPEAKER WITH RGB + MIC
43233861 User Manual



Please read all instructions carefully and keep for future use.

Important Precautions:

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Minimum distances 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items, such as news papers, table-cloths or curtains.
4. No naked flame sources such as lighted candles, should be placed on the apparatus.
5. When the mains plug or and appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
6. Working temperature: 40 °C.
7. The use of apparatus in moderate climates.
8. Do not use this apparatus near the water.

Avoids to use battery in following conditions:

1. Attention should be drawn to the environmental aspects of battery disposal.
2. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
3. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
4. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
5. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
6. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
7. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
8. The internal battery is non-user replaceable.


Product Specification

Charging input rating: 5V 1A
Charging time: 4.2 Hours
Playback time at 50% volume: 6 Hours
Power: 5 W
Speaker: 3 Inch
FM Radio: 87.5-108MHz
AUX In: 3.5mm
Microphone Input: 6.5mm


Product feature:

- Multi-lighting effects
- Bluetooth version 5.0, compatible with all audio devices with Bluetooth function, as MP3/4, mobile, computer, iPad.
- Built-in rechargeable lithium battery

Button and interface:

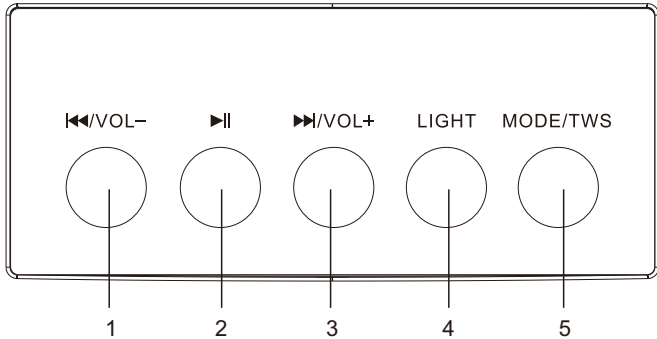

1. Previous/Volume- Key: Short press switch to the previous track in USB/BT mode or switch to the last station in FM mode. Long press for the volume decrease.
2. Play/Pause Key: Short press to play or pause the track in USB or BT mode. Long press for searching the FM radio stations.
3. Next/Volume+ Key: Short press switch to the previous track in USB/BT mode or switch to the last station in FM mode. Long press for the volume decrease.
4. Light Key: Press for switching different light effects.
5. Mode/TWS Key: Short press to switch to different modes. Long press to turn on the TWS pairing in BT mode.

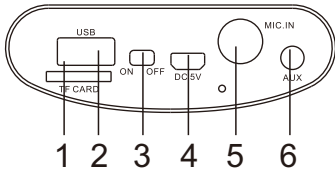

1. TF Card input slot
2. USB input slot
3. Power ON/ OFF
4. DC 5V charging port
5. Microphone input jack
6. AUX input jack

Charging the Speaker

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V charging port, another end plug into a wall outlet to start charge.
2. The battery indicator will show RED on the top and turn off when fully charged.
3. When the speaker battery is lower power, the playing will become abnormal indicating that need to charge.

Powering ON/OFF

1. Make sure that the speaker has been charged.
2. Switch the Power button to ON to turn on the speaker and will enter Bluetooth pairing mode.
3. The speaker may automatically re-pair to any nearby, previously paired device.
4. Switch the Power button to OFF to turn off the speaker.

Changing Function Modes

1. Press the [MODE] button on the front panel of the speaker to switch function modes.
Note: You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.
- Please note that Bluetooth will be disconnected when switching to other modes.

Adjusting Volume & Playback

1. Long press the ◀◀/VOL- or ▶▶/VOL+ keys to decrease or increase the volume; or the controls on a connected device.
2. Short press the ◀◀/VOL- and ▶▶/VOL+ keys on the speaker to switch the tracks in Bluetooth/USB mode or stations in FM mode.
3. Press the ▶|| key to pause and resume playback in Bluetooth/USB mode.

TF Card Playing

This speaker has a TF card input slot for play back MP3 music.

1. Insert your TF card into the input slot and speaker will start playing automatically.
2. Press the [MODE] button to switch to TF card mode if the speaker is on other mode.
3. Press the ◀◀ or ▶▶ keys to the previous or next track.
4. Press the ▶|| key to play or pause music.

USB Playing

This speaker has a USB input slot for play back MP3 music.

1. Insert your USB device into the input slot and speaker will start playing automatically.
2. Press the [MODE] button to switch to USB mode if the speaker is on other mode.
3. Press the ◀◀ or ▶▶ keys to the previous or next track.
4. Press the ▶|| key to play or pause music.

Connecting with Bluetooth

1. Power on the speaker and will enter into the Bluetooth mode.
2. Open the Bluetooth on your mobile device and search Bluetooth name 43233861 to pair.
3. In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the top panel of the speaker.

Switching the Speaker Light Effects

1. The LED light effects will automatically turn on when the speaker is powered on.
2. Press the [LIGHT] key on the front panel to switch LED light effects and turn the lights off.

Using the FM Radio (FM Antenna cable the same as AUX cable, included)

1. Insert the FM/AUX cable into the AUX jack.
2. Press [MODE/TWS] switch to FM mode.
3. Long press the ▶|| key to start scanning and saving available stations.
4. Press the ▶▶ and ◀◀ key to the switch to the saved stations.

Connecting to an AUX Device

1. Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input jack on the top of the speaker. Insert the other connector into the headphone jack or audio output jack of your media playing device.
2. In AUX mode, all playback will be controlled by your connect device.

TWS Connecting (only for Bluetooth mode)

*This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.

1. Long press [MODE/TWS] button on two speakers to turn on the TWS pairing function, there is a DI sound from the speaker.
2. The TWS will pair automatically once both speakers turn on the TWS function.
3. Long press the ◀◀ or ▶▶ on the front panel of any speaker increase or decrease the music volume.
4. If not using the TWS function, please long press [MODE/TWS] to disconnect TWS.

Note: the speaker support memory function and will auto re pairing the TWS after power on again.

Connecting to Wired Microphone (included)



Insert 6.5mm wired microphone, and use control to adjust the sound level.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.