Basketball Hoop Double Shot

Key Code: 43270859

Warning

- CHOKING HAZARD, small parts. Not suitable for children under 3 years.
- Adult assembly required.
- Don't aim at face or eyes.
- To play the game, suggest to hang the unit at the top of a door after assembled well.
- Suitable for indoor domestic use only.
- Take out the batteries from battery box when not in use an extended time.
- Please keep this instruction for future reference.



WARNING: IMPROPER INSTALLATION OR SWINGING ON THE RING MAY CAUSE SERIOUS INJURY OR DEATH!

Parts List







Foldable rim B x 2pcs



Net C x 2pcs



Ball ocs D x 2pcs



Connection plate E x 2pcs



Bolt Wrench F x 8pcs G x 1pc



Pump H x 1pc

Assembly Instructions

Step 1. Fold the 2pcs foldable rims (B) by pressing the plate with force to form a L-shaped part (Fig.1).

Step 2. Put the 2pcs connection plates (E) at the back of the back board, and put the folded rim at front of the Back board, then connect them together with bolt (F) using wrench (G) (Fig.2).

Step 3. Assemble the net (C) to the rim (Fig.3).

Use hand-operated pump (H, Needle inside the handle) to inflate the balls properly.







Folding Instructions


Pull down the rim with force until the spring slide out of middle plate, then release the rim slowly.





Battery replacement


This toy uses 3x AAA batteries (Not included). If the light or the sound is becoming more and more weak, It's suggested to change the batteries. Use screw driver to unscrew the bolt on the lid of battery box, take out the lid, replace the batteries as the image shows, then put the lid back on the box and screw the bolt into the hole firmly.

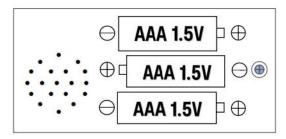

Please note:

- ◆ Batteries are to be inserted with the correct polarity (+ and -).
- Different types of batteries or new and used batteries are not to be mixed.
- ◆ Non-rechargeable batteries are not to be recharged.
- ◆ The supply terminals are not to be short-circuited.
- Rechargeable batteries should be charged under adult supervision.
- Exhausted batteries are to be removed from the toy. Do not dispose of batteries in fire, batteries may explode or leak.

How to play

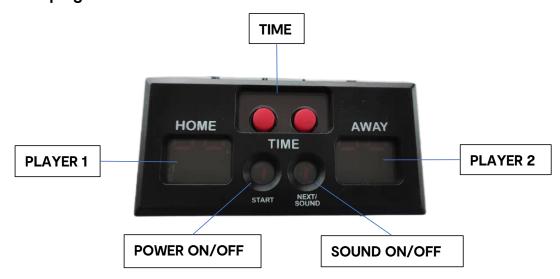

- 1). Suitable for 1 or 2 player to play the game.
- 2). Turn on the START button to power up your game.
- 3). Set play time in a round and choose PLAYER 1 or PLAYER 2 mode.
- 4). Press START button again, the game will begin.
- 5). Whoever hits the most shots within the given time wins the game.