

anko

MINI RGB BOOMBOX

## 43277445 User Manual



Please read all instructions carefully and keep for future reference.

### Warning:

- 1.Keep the unit away from liquids and moisture.
2. Allow a minimum distance of 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items.
4. Keep away from naked flames and other heat sources.
- 5.The apparatus is only suitable for mounting at height < 2m.
- 6.This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- 7.The marking located on the bottom of the apparatus..

### Rechargeable Battery Safety Information:

- 1.Dispose of this product in accordance with local regulations.
- 2.Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- 3.Do not attempt to remove or replace the internal battery.
- 4.Exposure of the battery to fire, extreme heat, cutting or crushing may result in fire or explosion.
- 5.A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.


### Product Specification

Charging input rating: 5V 1A  
Charging time: 4.2 Hours  
Playback time at 50% volume: 5.5 Hours  
Power: 2x5 W  
Speaker: 1.5Inchx2  
FM Radio: 87.5-108MHz  
AUX In: 3.5mm

### Product feature:

- Multi-lighting effects
- Bluetooth version 5.0
- Built-in rechargeable lithium battery

### Button and interface:

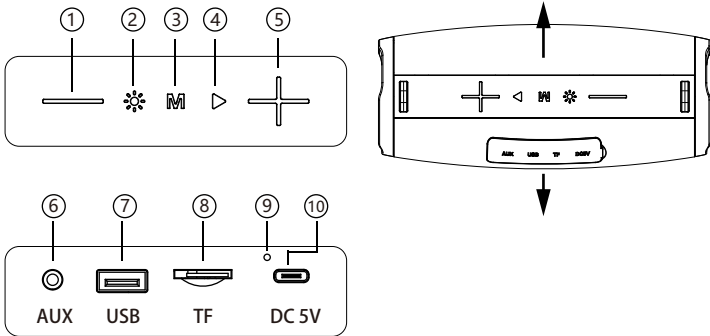

1. 【—】 : Short press to decrease volume/long press to previous song.
2. 【☀️】 : Short press can switch lighting effect, seven kinds of lights can be switched when music is playing.
3. 【M】 : Short press mode conversion:Bluetooth mode, FM mode, AUX mode, U disk mode, TF card mode, long press in FM mode to automatically search for channels.
4. 【▶️】 : Long press to power ON/OFF, short press to play or pause.
5. 【+】 : Short press to increase volume/long press to next song.
6. 【AUX】 : Insert AUX line for external power supply.
7. 【USB】 : Insert U disk to play MP3 music.
8. 【TF】 : Insert TF card to play MP3 music.
9. 【Charging indicator】 : The red light is on when charging,red light is off when fully charged.
10. 【DC 5V】 : Charging port.

### Charging the Speaker

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

- 1.Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V charging port, another end plug into a wall outlet to start charge.
- 2.The battery indicator will show RED on the back and turn off when fully charged.
- 3.When the battery is low, the speaker would prompt 'low battery' tone to advise user to charge the speaker.

### Powering ON/OFF

- 1.Make sure that the speaker has been charged.
2. Long press the ▶️ button on top panel to switch on the speaker and will enter Bluetooth pairing mode.
- 3.The speaker may automatically re-pair to any nearby, previously paired device.
- 4.Long press the ▶️ button switch off the speaker.

Please note that Bluetooth will be disconnected when switching to other modes.

### Changing Function Modes

- 1.Press the [ M ] button on the top panel of the speaker to switch function modes.  
Note: You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

### Adjusting Volume & Playback

- 1.Short press the - button or the + button on top panel decrease or increase the volume; or the controls on a connected device.
- 2.Long press the - button or the + button on top panel to switch the tracks in Bluetooth/ USB mode.
- 3.Press the ▶️ key to pause and resume playback in Bluetooth/USB mode

### TF Card Playing

This speaker has a TF card input slot for play back MP3 music.

1. Insert your TF card into the input slot and speaker will start playing automatically.

- 2.Press the [M] button to swith to TF card mode if the speaker is on other mode.
- 3.Long press the - button or the + button on top panel switch to the previous or next track.
- 4.Press the ▶️ key to play or pause music.

### USB Playing

This speaker has a USB input slot for play back MP3 music.

1. Insert your USB device into the input slot and speaker will start playing automatically.
- 2.Press the [M] button to swith to USB mode if the speaker is on other mode.
- 3.Long press the - button or the + button on top panel switch to the previous or next track.
- 4.Press the ▶️ key to play or pause music.

### Connecting with Bluetooth

- 1.Power on the speaker and will enter into the bluetooth mode.
- 2.Open the bluetooth on your mobile device and search Bluetooth name 43277445 to pair.
- 3.In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the toppanel of the speaker.

### Switching the Speaker Light Effects

- 1.The LED light effects will automatically turn on when the speaker is powered on.
- 2.Press the [☀️] key on the front panel to switch LED light effects and turn the lights off.

### Using the FM Radio (No need external FM antenna)

- 1.Press [ M ] switch to FM mode.
- 2.Long press the M button on the top panel to start scanning and saving available stations.
- 3.Long press the - button or the + button on top panel to the switch to the saved stations.

### Connecting to an AUX Device

- 1.Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input . Insert the other connector into the headphone jack or audio output jack of your media playing device.
- 2.In AUX mode, only the ▶️ / - and + can be controlled.

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.