

Soundbar with Wired Sub

Operating instructions



Includes:

 
- › Bluetooth® HDMI soundbar
- › subwoofer (with built-in audio connection cable)
- › AC adaptor
- › 3.5mm audio cable
- › remote control (AAA × 2 batteries required, not included)
- › user manual



This product shall be supplied by a power source not exceeding PS1 only. › This Bluetooth Speaker shall be charged by the supplied charging unit only.

 
CAUTION › The batteries in this product are not replaceable. › During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. › If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. › Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

IMPORTANT SAFETY INSTRUCTIONS

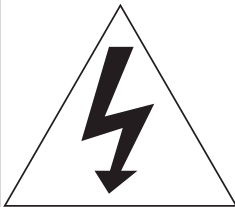

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

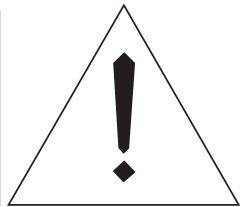

WARNING: HIGH VOLTAGE. DO NOT OPEN IT.

DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



WARNING: HIGH VOLTAGE. DO NOT OPEN IT.

DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 


ATTENTION: THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE, ENTRUSTING A QUALIFIED SERVICE PERSONNEL TO CHECK AND REPAIR.

 
- › Examine devices and make sure the battery compartment is correctly secured, e.g. that the mechanical fastener is tightened.
- › Do not use if compartment is not secure.
- › Dispose of used batteries immediately and safely. Batteries can still be dangerous.
- › Batteries must NOT be exposed to excessive heat such as sunshine or fire. Danger of explosion if battery is incorrectly replaced. Replace battery with the same or equivalent type.
- › Use the device only as directed.
- › To reduce the risk of fire or electric shock, DO NOT expose this device to liquids or moisture. Do not place near vessels containing liquids of any kind.
- › Use caution when inserting/removing the plug from the electrical outlet.
- › Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's warranty.
- › DO NOT place this unit directly on to items with soft, porous or sensitive finishes.
- › Use of the unit's remote near fluorescent lighting may cause erratic behavior. If so, move away from the source of the lighting and the remote should behave as normal.
- › SHOCK HAZARD - DO NOT OPEN. Do not remove the cover (or the back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

Function Overview:

- 1. Power & Mode button: press and hold to switch the soundbar ON/OFF; press to change between modes: Bluetooth/HDMI/Line In.
- 2. Play/Pause & Mute: press to play or pause music; press and hold to mute the soundbar.
- 3. Vol+ & Next: press to increase volume; press and hold to skip to next track.
- 4. Vol- & Prev: press to decrease volume; press and hold to skip to previous track.
- 5. HDMI ARC port
- 6. USB port
- 7. Line In port
- 8. SUB connection port
- 9. DC IN port

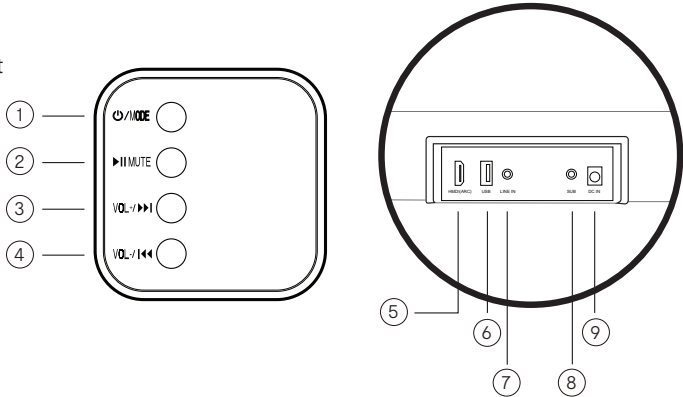

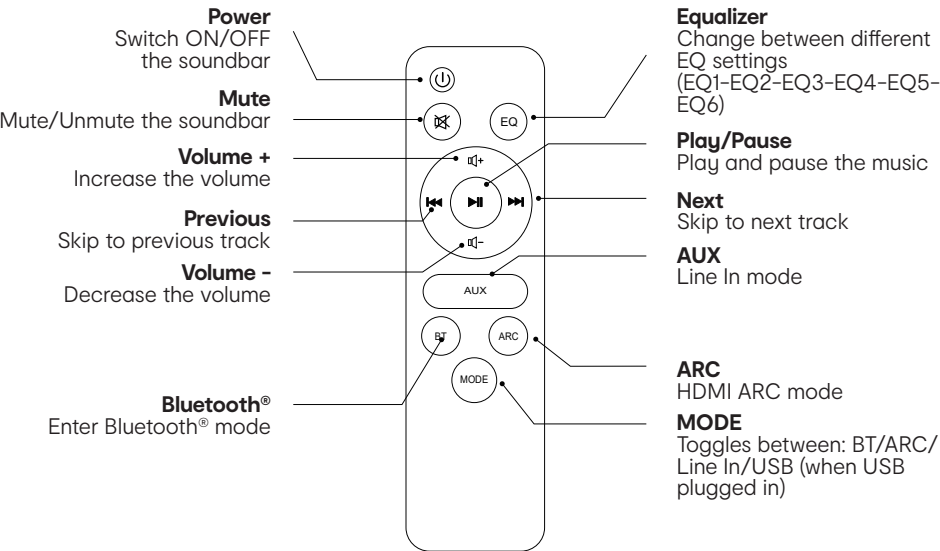

Remote Control



 
BATTERY: 2 x AAA batteries required (not included)

How to use this Speaker





Connecting the AC Adaptor:

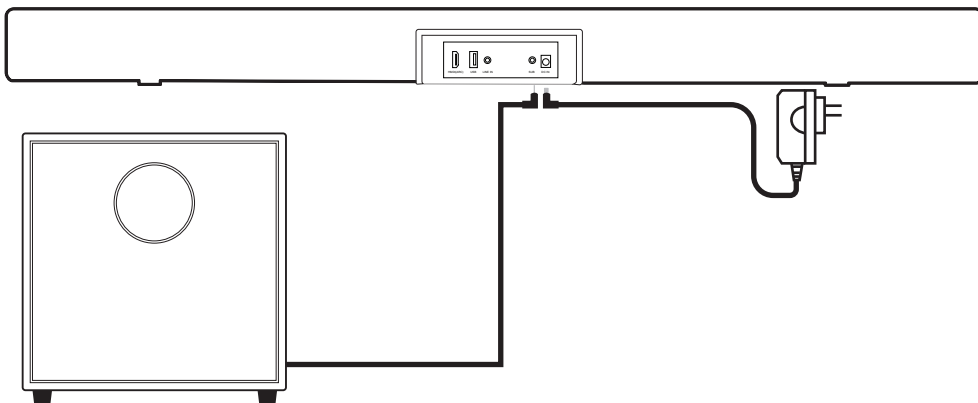- › Connect the small end of the AC adaptor to the DC IN port on the side of the soundbar.
- › Plug the AC adaptor to the available power outlet.
- › Press and hold  button or press  on the remote control to turn on or off the soundbar.

Connection Diagram



Bluetooth Pairing:

- › Press and hold  button or press  on the remote control to switch the soundbar on to Bluetooth® pairing. The soundbar will produce sound alerts and the red indicator  light will flash to indicate it is ready to pair.
- › In the Bluetooth menu on the media device, search for “KM43277469” and connect. Type Password “0000” or “1234” if password requested.
- › You will hear a prompt sound once the soundbar is connected successfully. The red  indicator will stay on.

Line In Function:

- › Plug in the included 3.5mm to 3.5mm audio cable into the line in port, and other side into the source device.
- › Press **⏻** button on the soundbar or **MODE** button on the remote control to change to Line In mode. The red indicator **⏻** will stay on.

HDMI Function

- › Connect the HDMI cable (not included) into the HDMI ARC port located on the rear of the soundbar then plug the other side into a TV or other device with HDMI (ARC) port.
- › Press **Mode** button on the soundbar or **ARC** button on the remote control to switch to HDMI mode. The red indicator **⏻** will stay on.
- › Refer to the TV or other devices user manual for HDMI ARC output setting.

USB Function

- › Plug in USB player to the USB port at the rear panel of the soundbar.
- › Press **MODE** button on the soundbar or **MODE** on the remote control to change to USB Mode. The red indicator **⏻** will display.

Note:

- › *When Line In and USB is plugged in at the same time, it will play USB driver automatically*
- › *USB port can not be used to charge other device through a cable.*

Specification:

Pairing Name: KM43277469

Bluetooth® Version: V5.2

Working Distance: 10 Metres

Output Power: 40W

Powered by AC Mains

Frequency Response: 20Hz-20kHz

AC Adaptor Model: 43157198

For use with anko Audio/Video & IT Equipment

Power Input: 100-240V~, 50-60Hz, 1.5A

Output: 13V= 3.5A

USB Output: 5V=150mA (*no charging function*)

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.