Model: BA-341

USER MANUAL



PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

95 mm

⚠ WARNING!

- This device is not a toy, keep out of reach of children.
- Please ensure the product is not damaged before use. Do not use if there is
- any damage.

 Please keep the USB cable and the device charging port clean and dry.
- IMPORTANT! Do not use the device while charging.
 IMPORTANT! The following persons should not use this device: People with allergies; people with facial nerve disorders; people who have fractures or implants with metal, silicone, or plastic; people with open wounds, chapped or swollen skin on the area of use; people with severe skin diseases on the face. If unsure, please seek medical advice
- prior to use of this product.

 This device is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.
- Immediately stop using the device and consult a doctor if you feel any
- Regularly clean the device and the accessories to extend its lifetime.
- Do not share the same device with others.
- Do not attempt to disassemble, repair, or modify the device by yourself to avoid accidents.
- Remove any jewelry/accessories and tie your hair back when using the device, to prevent hair and jewelry from interfering with the device.
- This device has a lithium battery. Do not place or store the device for long periods in hot or humid environment.
- If you do not intend to use the device for a long time, store it after it is fully charged. Do not throw the device into a fire or put it in the general household
- Please dispose of the device responsibly at your local recycling facility.

WARNING: Do not recharge non-rechargeable batteries.


WARNING: For electrical safety, before charging the product make sure

2

SPECIFICATIONS

Input: 5V === 1A Type of Battery: Li-ion 1,5V 350mAh Charging Time: Approximate 1,5hours Working Time: Up to 30minutes

STRUCTURE

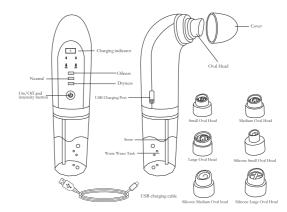

- 1. There are 6 kinds of probes, including 3 kinds of soft probes and 3 kinds of hard probes. Small probes are suitable for parts with small operating area (such as nose, alar etc.), large probes are suitable for parts with larger operating area (such as cheeks, forehead etc.), and soft probes are suitable for people with thin and tender skin. Please choose the appropriate probe according to your experience, skin types and operating
- parts.

 2. It is strictly forbidden to shake or stand upside down during the operation of the instrument,

CHARGING THE DEVICE

· Please charge the device for minimum of 1.5 hours prior to using to extend

Make sure the device is turned OFF.

Charging the device takes approximately 1.5 hours. When the battery is fully charged, the device can be use continuously for 30 min.

INSTRUCTION

Notes: To operate this product correctly, please read the following carefully

- Recommend you use device when your pores open such as after applying a
- Remove any makeup from your face, leaving your skin bare.
- Never use the appliance on skin coated with cleansing lotion or facial soap.

Note: It is normal that your skin might appear red after using the pore cleaner. The temporary redness will reduce within a few hours, depending on your skin type, if the redness lasts more than 3 days, seek

HOW TO USE





- purified water
- 2. Connect the water tank to the device. Make sure the straw is inserted to the filled water chamber.



3. Press and hold the On/Off button to turn it on, the device will operate a neutral skin level as default. Press On/Off button again to adjust different skin types (dryness or oiliness). Understand your type of skin first and test on back of your hand for a few seconds before applying on your face. Move the device in the corner of the eye, nose, lips, and other parts of care, according to the need to adjust the mode.

DO NOT focus on any one spot for more than 2 seconds. The whole

deansing process should not take more than 2 minutes.

4. After cleaning, turn off the product by holding the On/Off switch for 2 seconds. Rinse your face with facial cleanser. Use a cool towel or cold water to restore the skin. For the best effect, use moisturizing lotion or any other skin conditioner to keep your face sufficiently moisturized.

CLEANING & MAINTENANCE

head to ensure best performance from the device.

-Before cleaning, make sure this product is turned off.

Do not immerse the product in water for cleaning Clean the appliance with dry cloth or th a cloth moistened with water.
-Dry the device in a well-ventilated place. Do not dry it in direct sunlight.

-Do not use alcohol, steel wool, abrasive cleansers, chemicals, or corrosive

-Do not use lubricants, detergents, polishing agents, or air fresheners on this

If the Pore Cleaner is to be disposed the batteries should be removed from the appliance before it is scrapped. The device must be disconnected from USB power when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed with normal

IMPORTANT: Always fully discharge the batteries before removal and ensure the USB charging cable is disconnected from power.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The device does not	The battery is running low or	Charge the device for 1.5
work properly.	out of power.	hours.
Abnormal Noise.	The suction head not	Turn OFF the device and
	installed incorrectly.	install the suction head
		correctly.
The charging indicator	The USB cable is not plugged	Insert the USB cable
does not light up.	correctly.	correctly into a suitable
		USB power source.

Note: If the device still does not work properly after going through the above solutions, please stop using the device and contact Kmart for replacement or

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.