

Inflatable 3 Stack Pumpkin



Contents:

<p>A.</p>  <p>Main unit with power cord X1</p>	<p>B.</p>  <p>Rope X2</p>	<p>C.</p>  <p>Clip X2</p>	<p>D.</p>  <p>Tent-stake X4</p>
---	--	--	--

Instructions:

- Step 1.** Carefully unpack your Inflatable 3 stack pumpkin. Make sure you do not discard any packaging material until all parts of the unit have been found.
- Step 2.** Place Inflatable 3 stack pumpkin on a clean, open area, free from obstruction or debris.
- Step 3.** Roll out fabric and lay out the all the parts. Make sure the air intake located on the bottom of unit is clear of fabric and free of obstruction.
- Step 4.** Fully close the zipper on the bottom of the unit.
- Step 5.** Tie the clips on one end of tethers, attach the clips to the rings on both sides of the unit.
- Step 6.** Secure the four tent-stakes into ground, attach the one end of the two tethers and two rings on bottom of the unit to the tent-stakes.
- Step 7.** To inflate product, plug the unit into a mains power outlet socket.
- Step 8.** To deflate product, unplug the cord from the electrical outlet and unzip the unit.

Adaptor Manual

1. Please use the equipment's according to the rated voltage and current.

Model No.	Input Rated			Output Rated	
	Voltage	Frequency	Current	Voltage	Power
RKPO-AU1200600IP44-1	100-240VAC	50-60Hz	0.30A Max	12V AC	7.2W

2. Do not open the cover of the equipment's.

3. For use with LED lighting equipment.

4. The input and output voltage should be checked before use to ensure correct use.


5. This is the Class II product, only for indoor use.

6. The product is not a toy, keep it where children cannot reach.


7. The lamp control gear does not rely upon the luminaire enclosure for protection against accidental contact with live parts.

8. If applicable: an indication that the control gear is suitable for operation with LED modules.

9. Do-not-cover classification

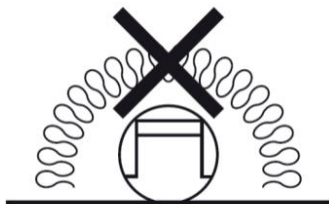

The power supply that can be used where normally flammable materials. Including building insulation, are or may be present, but cannot be abutted against any material and cannot be covered in normal. Minimum clearance distance from the top and sides of the control gear to normally flammable building element is 75mm; as shown in below picture, A=B=C=Min.75mm.

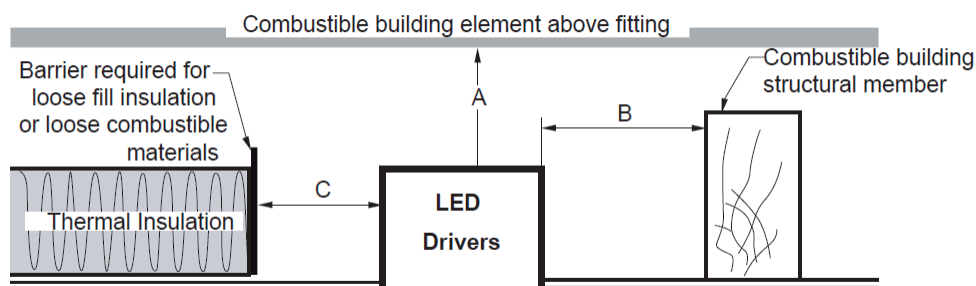

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference.

Before You Start

- Decide on an appropriate location for your product (see Installation instructions below).
- If you have any doubt about installing this product, consult a qualified electrician.

Installation instructions:

- 1) This inflatable product is suitable for **INDOOR AND OUTDOOR USE**.
- 2) The AC adaptor **MUST** be installed **INDOORS** away from weather.
- 3) Do not position or place near heaters of any other direct sources of heat.
- 4) This product is suitable for positioning on surfaces which have normal flammability, e.g., wood, plasterboard, masonry. However, this does not include highly flammable surfaces (e.g. Polystyrene, textiles).
- 5) Always position cables and extension leads so that they will not be a hazard to the elderly, pets, and children.
- 6) **DO NOT** position this inflatable product where it may become covered by other items e.g., curtains, nets or bedding.
- 7) Ensure the unit is positioned so that you have enough cable to reach an indoor mains power socket.

Warning:

- This inflatable product is suitable for **INDOOR AND OUTDOOR USE**.
- This product is **NOT** designed for permanent or long-term use.
- The AC adaptor **MUST** be installed **INDOORS** away from weather.
- The supplied adaptor is suitable for operation of LED Modules only.
- Only operate this light chain with the supplied adaptor, **Model No. RKPO-AU1200600IP44-1**.
- Do not connect this inflatable product electrically to another inflatable product.
- Do not connect this light chain to the power supply while it is in the packaging.
- Please refer to the packing or product rating label for product class, specifications and rating.
- Never allow any part of the set to come into contact with a source of heat or flame.

- Care must be taken to avoid damage the cable or fittings.
- If any part of light set or cable is damaged, the light set **MUST** be discarded.
- This product is for use as a decoration only. Not to be used by children as a toy. Keep out of reach of children.
- Do not position this light chain where it will be exposed to extreme wet weather or submerged in water.
- Always switch off this light set or unplug an adaptor if unattended.
- DO NOT overload power sockets or extension leads.
- DO NOT pierce the cable when securing in place, bend or stand on the light chain, as this will damage the bulbs or wiring.
- The light source of this luminaires is not replaceable; when the light source reaches its end of life the whole luminaires shall be replaced.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

LED Bulbs

This light set is constructed with non-replaceable bulbs. DO NOT attempt to replace any of the bulbs in the light set.

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**