



Hair Clipper and Trimmer Pack User Manual



Model No.: MR-8101 and MY-706
Rev 1

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Safety Instructions	4
2	Components	7
3	Hair Clipper - Instructions for Use	8
3.1	Charging the Hair Clipper	8
4	Lock Function	9
5	Tap Symbol	10
6	Operation	10
6.2	Fine Height Adjustment	11
6.3	To use the Clipper:	11
6.4	Variable Speed	11
7	Care and Cleaning	12
7.1	Cleaning	12
7.2	Lubrication	13
8	Storage	14
9	Technical Specifications	14
10	Nose Trimmer - Instructions for Use	14
11	Battery Fitment / Replacement	14
11.1	To use the Nose Trimmer:	15
11.2	Light	16
12	Care and Cleaning	16
12.1	Cleaning	16
12.2	Lubrication	18
13	Storage	18
14	Technical Specifications	18
15	Warranty Against Defect	19

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:



Carefully read this instruction manual before using the appliance and USB cable.

- Keep the appliance, accessories and USB cable out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the Appliance and/or USB cable.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do not disassemble the Appliance and/or the USB cable. There are no user-serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that the charger (not supplied) and/or USB cable does not get wet (water splashes etc.).
Do not use your charger or the USB cable with wet hands.
Do not immerse the USB cable in water or other liquids or use near sinks, baths or showers.
- Only Charge the Appliance with the USB cable that was supplied with the Appliance.
- Only Charge the Appliance from an Extra Low Voltage Battery Charger (not supplied) with an output rating the same as indicated on the Appliance's rating label.
- Position the USB cable properly so that it will not be walked on or pinched by items placed on or against them.
- Use the Appliance, accessories and USB cable only for its intended use. The Appliance, accessories and USB cable are intended for household use only and not for commercial or industrial use.
- Inspect the USB cable, Appliance and accessories for damage before every use.
- Do not use the appliance if it has been dropped or any part of the Appliance, accessories and/or the USB cable has been damaged.
- If the USB cable is damaged, call our customer service for a replacement.

- The use of accessories not intended for use with this Appliance may cause injuries to the user or damage to the Appliance, components and/or the USB cable.
- Do not sit the Appliance on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.

The Appliance USB cable must not be used outdoors if raining, near water, placed near a hot gas or electrical burner or placed in a heated oven.

- Do not place or leave near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate or charge the Appliance underneath or near flammable or combustible materials (e.g., curtains).
- Always switch off and unplug the USB charger cable when finished charging the appliance, or during lightning storms or when unused for long periods.
- Do not cover the appliance or charger when charging or when in use.
- Turn off and unplug before cleaning or storing.
- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user-serviceable parts in this Appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If this Appliance and USB cable is used by a third party, please supply the instruction manual with it.
- Do not misuse the USB cable. Never carry the Appliance by the USB cable or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter any openings as this may cause damage to the Appliance and/or injury to the user.
- Do not leave the Appliance running or charging unattended.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the Appliance or USB cable.
- This product has not been designed for any uses other than those specified in this manual.
- **ONLY** for domestic use. Industrial or commercial use invalidates the warranty.



WARNING

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

Read and Save These Instructions

2 Components



1	Hair Clipper	6	USB Charging Cable (Hair Clipper Only)
2	Nose Trimmer On / Off Switch	7	Hair Clipper LED Display
3	Nose Trimmer	8	Cleaning Brush
4	Hair Clipper Combs	9	Hair Clipper On / Off Button
5	Storage Bag	10	Lubricating Oil

3 Hair Clipper - Instructions for Use

IMPORTANT: Refer to the Section “Lubrication” before first use.

NOTE: The Clipper Head is waterproof.

This means, other than the USB cable, the clipper head (not the body) can be rinsed under a running tap but cannot be used whilst in the shower.

3.1 Charging the Hair Clipper

Read the Safety Instruction first.

IMPORTANT: This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

Always switch off and unplug the USB cable when charging is completed or when not in use.

DO NOT allow to charge for more than 4 hours.

Normal charge takes approximately 3 - 4 hours

If any abnormality occurs during charging, (such as a burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

 
IMPORTANT: The Appliance must be fully charged before first use.

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.



- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch on.

- The LED numerical display will light up and indicate the level of charge and the symbol “” will illuminate Red colour indicating the battery is charging.
- When fully charged, the LED numerical display will show “100”.
- Unplug the USB charging cable from the appliance.

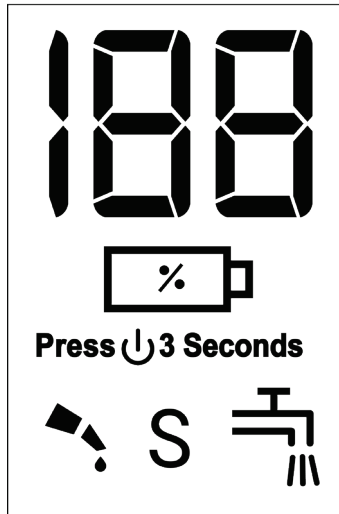

Note: During use, the Symbol “” will illuminate white colour and will then change to a flashing red when the battery needs recharging.

The Symbol will start to flash at approximately 10% battery remaining.

4 Lock Function

The appliance comes with a Lock function which prevents the appliance from turning on if the On / Off button is accidentally pressed, especially while travelling.

- To activate this function, press and hold the On / Off button for approximately 3 seconds until the wording “ **Press  3 Seconds** ” illuminates on the LED display and then release the On / Off button.
- To Unlock the appliance, press and hold the On / Off button for approximately 3 seconds until the appliance starts.

5 Tap Symbol

The small Water Tap symbol “” will start to flash in the display if the Clipper head needs cleaning.

Refer to the section “Care and Cleaning”.

6 Operation

6.1 Hair Clipper

The appliance comes with various height comb attachments for varying the trim height.

 
These attachments can be used for trimming sideburns, moustaches, beards, eyebrows, neck hair, etc.

You can attach any of the Height Combs that you require.

- To do this, slide a comb over the head of the Clipper then continue to slide it on until it clicks in place.



- To remove, from underneath, slide the comb forward and off.

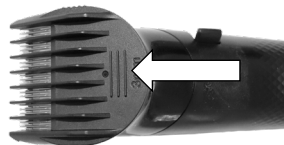

6.2 Fine Height Adjustment

The Clipper Blade height can be finely adjusted by rotating the Adjustment lever on the side of the Clipper Handle from 0.5mm to 2mm.



Grasp the body of the hair Clipper with one hand, then with the other hand, rotate the adjustment lever to your desired setting.

This adjusts the distance between the tip of the outer clipper blade to the tip of the inner clipper blade between 0.5mm and 2mm.

6.3 To use the Clipper:

Once the desired hair Clipper comb is fitted, and the fine height adjustment has been set, press and release the On / Off button to turn On, then in a scooping motion move the comb through the hair against the growth of hair working your way slowing so as not to snag or pull when trimming longer hair.

When trimming hair on the top of your head work from front to back in a similar motion.

When finished press and release the On / Off button twice to turn the unit off.

6.4 Variable Speed

The speed of the Clipper can be reduced by during use.

With the Clipper turned on, press the On / Off button a second time and the speed will reduce indicated by the letter "S" illumination in the LED display.

Press the On / Off button again and the Clipper will turn off.

7 Care and Cleaning

7.1 Cleaning

 
To ensure optimal trimming efficiency, the Clipper must be cleaned regularly.

IMPORTANT: Do Not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

The easiest and most sanitary way to clean the product is to wash the Clipper head (not the clipper body) with fresh, warm (not hot) water each time after use.

To do this:

- Turn off the Clipper and ensure the USB cable has been removed from the appliance.
- To remove the Clipper head, press the blade assembly forward with force, and the blade assembly will pop out.

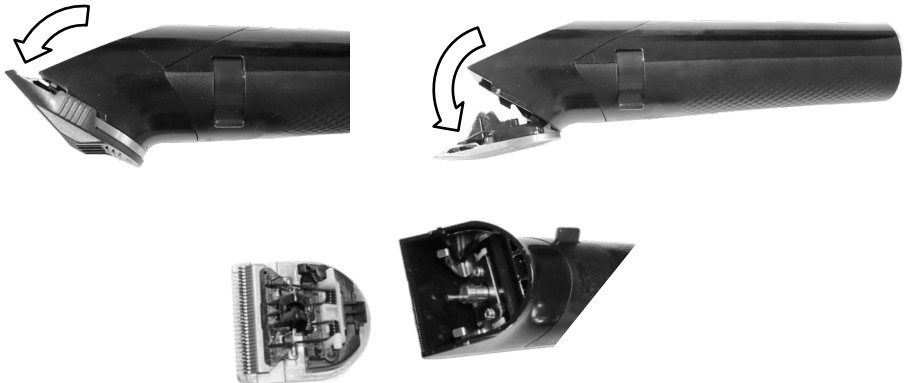

- You can brush out the hair with the small cleaning brush supplied and then rinse the Clipper head for a minute or so until the hair has been washed away.

 
IMPORTANT: DO NOT use high pressure water or compressed air to try and clean as you will damage the appliance.

Only use running tap water to rinse away the hair and allow the Blade to dry naturally before re-assembly.

- When clean, gently shake the excess water from the clipper head.
- Allow the clipper to sit and air dry naturally.

NOTE: Cleaning and user maintenance shall not be made by children without supervision.

To replace, align the tab on the back of the Clipper blade assembly with the opening in the main body as shown, then swing closed and push in all the way until it locks in place.

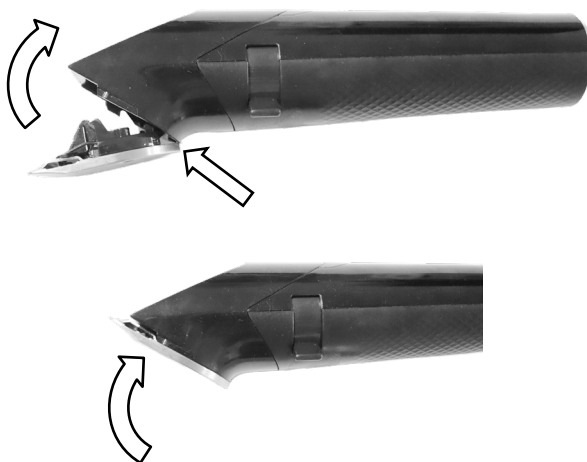

7.2 Lubrication

The Hair Clipper will need periodic lubrication to allow the blades to run smoothly.

Use a drop of the supplied oil or sewing machine oil every few months of use directly onto the shaving blades and trimming blades.

Apply a couple of drops to the Shaving head and pop-up trimming blades before first use.

During use, should the Lubrication Symbol “” in the LED display start to flash Red, this is an indication that the motor is running too hot and that the blades need lubrication.

Allow the appliance to fully cool down, then add a few drops of oil before using again.

8 Storage

- Switch off and unplug the appliance.
- Coil the USB cable loosely. Do not kink or pull the cable tight.
- Ensure all parts are completely dry.
- Store your appliance and accessories in a cool, dry location.

9 Technical Specifications

Input: 5Vd.c. 1A

Battery Type: Li-ion 3.7V 2000mAh

Charge Time: approx. 3 -4 hr

Working Time: approx. 2.5hr

10 Nose Trimmer - Instructions for Use

IMPORTANT: Refer to the Section “Lubrication” before first use.

This appliance is not rechargeable and requires a single AA battery (not supplied) to operate.

NOTE: Other than the trimming head, this appliance and its accessories are NOT water resistant so must not be cleaned using water.

 
The trimmer body must only be cleaned using the small brush to brush away the hair.

11 Battery Fitment / Replacement

Important: Do not dispose of batteries in the rubbish bin. Contact your local authority for instruction on proper disposal and collection points.

Battery not Included.

Remove the battery End Cap by rotating the End Cap anti-clockwise then remove.

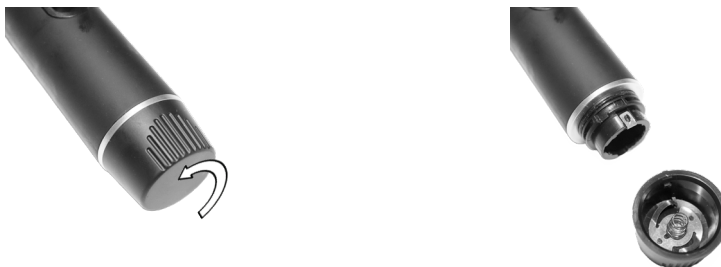


Install a good quality Alkaline “AA” size battery ensuring the polarity is in the correct orientation as shown on the nose trimmer body.

i.e., + to + and – to –



 Refit the battery End Cap by rotating the End Cap clockwise until it locks in place.

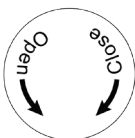


NOTE: Remove the Battery if the appliance is not going to be used for some time.

11.1 To use the Nose Trimmer:

Remove the Nose Trimmer cover by pulling straight off.



 Slide the On / Off switch forward, then gently place the nose trimmer nozzle end into one nostril and work in a circular motion around the internal area of the nostril cavity.

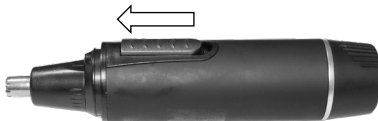

CAUTION: Be very careful not to push the trimmer too far up into the nasal cavity as this may become uncomfortable.

Once finished, turn the unit off by sliding the On / Off switch backward, and if required, clean the nose trimmer (refer to cleaning instructions), then repeat the same procedure on the other nostril.

IMPORTANT: Clean the Nose Trimmer after each use.

11.2 Light

The Nose Trimmer has a small light built in to help illuminate the area being trimmed.

This light automatically turns on when the Nose Trimmer is turned on.



12 Care and Cleaning

12.1 Cleaning

To ensure optimal trimming efficiency, the nose trimmer must be cleaned regularly.

IMPORTANT: Do Not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

The easiest and most sanitary way to clean the nose trimmer head (not the body) with fresh, warm (not hot) water each time after use.

 
- To do this, turn off the nose trimmer.
- You can brush off the hair with the small cleaning brush supplied and then rinse only the trimmer head for a minute or so until the hairs have been washed away.

IMPORTANT: **DO NOT** use high pressure water or compressed air to try and clean as you will damage the appliance.

Only use running tap water to rinse away the hairs and allow the trimmer head to dry naturally.

- When clean, gently shake the excess water from the appliance.
- Allow the appliance to sit and air dry naturally.
- The Nose Trimming head should be deep cleaned by first removing the nose trimming head.

To do this: Grasp the body of the nose trimmer and then grasp the nose trimmer head and rotate it anti-clockwise to unlock and then pull away.

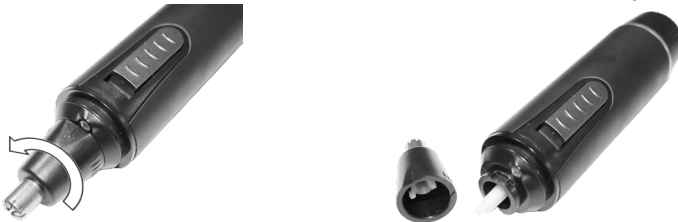

Using the small brush, brush out all the hair.

The Trimmer Head can be rinsed under flowing water to help remove the hair and then allow the appliance to sit and air dry naturally before refitting the trimmer head.

Refit the nose trimmer head and rotate it clockwise to lock in place.



NOTE: Cleaning and user maintenance shall not be made by children without supervision.

12.2 Lubrication

The Nose Trimmer blades will need periodic lubrication to allow the blades to run smoothly.

Use a drop of the supplied oil or sewing machine oil every few months of use directly onto the trimmer blades.

Apply a couple of drops to the trimmer blades before first use.



13 Storage

- Switch off the appliance.
- Ensure all parts are clean and completely dry.
- Store your appliance and accessories in a cool, dry location.
- Remove Battery if the appliance is not going to be used for some time.

14 Technical Specifications

Battery: 1 x AA Size, 1.5Vd.c. (not supplied)

15 Warranty Against Defect

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

IMPORTANT!

For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

