

anko

91cm scary ghost




Contents:




Ⓐ

Ⓑ

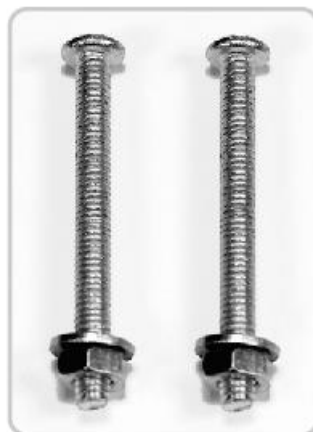

← 4pcs

Instructions

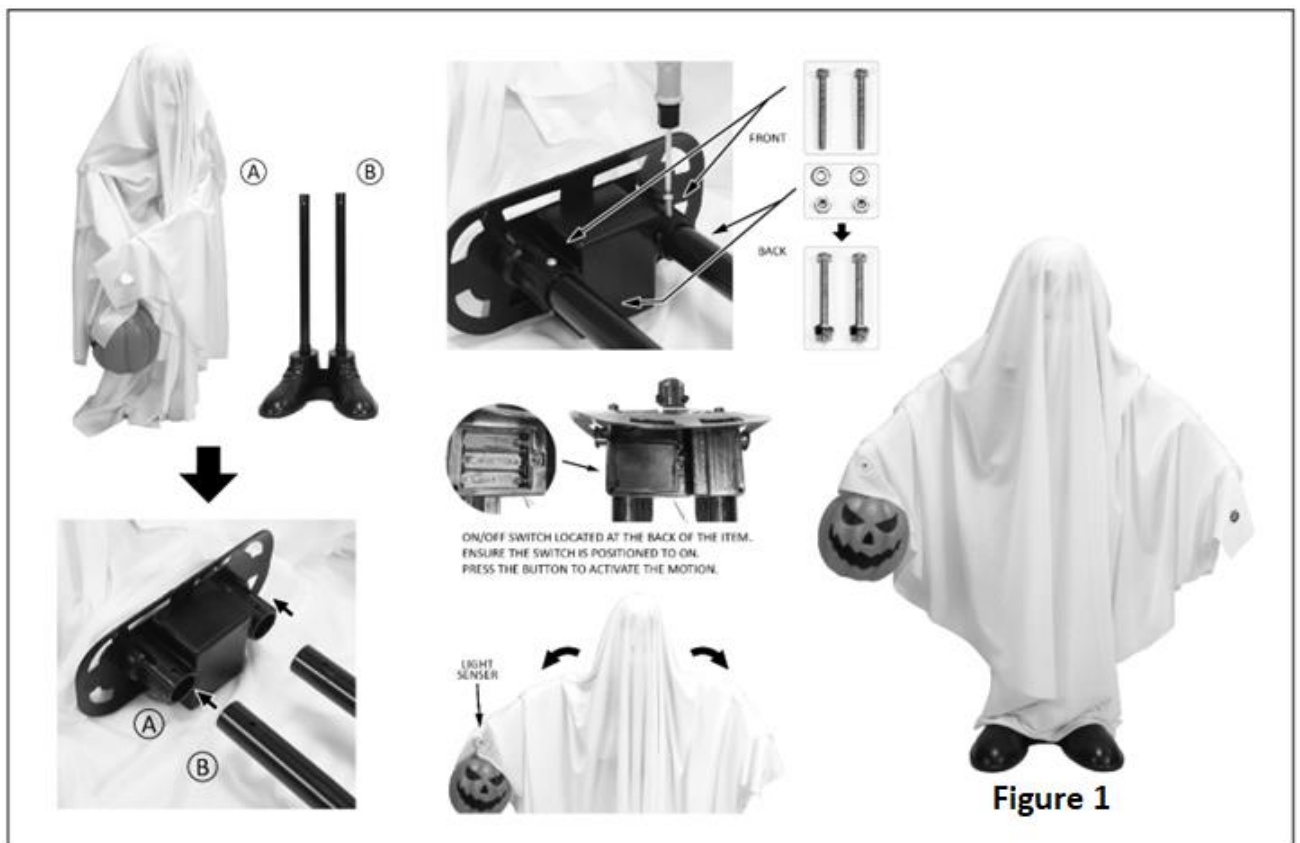

Step 1. Insert the upper part body (Part A) to the bottom part (Part B).

Step 2. Place the long screw and screw nut into correct position through the legs screw hole. Use a screwdriver (not included) to tighten the long screw into the leg screw hole and screw nut, tighten the screw until the screw is inside the leg hole.

Step 3. Pose the Ghost in arms open position. Make sure no excess fabric is on the light sensors. (Refer figure 1)

Step 4. The ON/OFF/DEMO switch is located on the back of the upper body. Move the switch to "On" position to place the product into Motion Activated Mode.

Step 5. Place the switch into the OFF position and remove the batteries when not in use or when being stored.

Warning:

- Keep away from fire and direct heat source.
- For indoor use only.
- This is not a toy – children must be supervised when using this decoration.
- Do not place in a child's bedroom or playroom.
- Battery installation by an adult is required.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

**Battery
Diagram**



BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.