

# DISC GOLF GAME

Key Code: 43298914

## Warning

- **CHOKING HAZARD**, small parts. Not suitable for children under 3 years.
- Adult assembly required.
- Don't aim at face and eyes.

## Parts List



Base  
A x 1pc



Pole  
B x 3pcs



Connector  
C x 2pcs



Basket  
D x 1pc



Lid  
E x 1pc



Chain  
F x 8pcs



Ring  
G x 1pc



Post  
H x 1pc



Blue disc  
I x 2pcs



Yellow disc  
J x 2pcs

## Assembly Instructions

Step 1. Connect 2pcs pole (A) and 2pcs connector (C) together, then insert one end of the pole into the base (A). (See Fig.1).

Step 2. Put the basket (D) above the upside connector, then insert a pole into the center to fix the basket. (See Fig.2).

Step 3. Insert 8pcs chains (F) into each hole of the lid (E), then slide the other end of the chains into the ring (G) in sequence. (See Fig.3).

Step 4. Insert the part of step 3 into the pole, then insert the post (H) into the hole of lid. (See Fig.4). Now you are ready to play.

Note: Base can be filled with water or sand to make the product more stability.



Fig.1



Fig.2



Fig.3



Fig.4

FOR AU/NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

Made in China