 


# anko

## User Manual WIRELESS BOOMBOX SPEAKER Keycode: 43303328

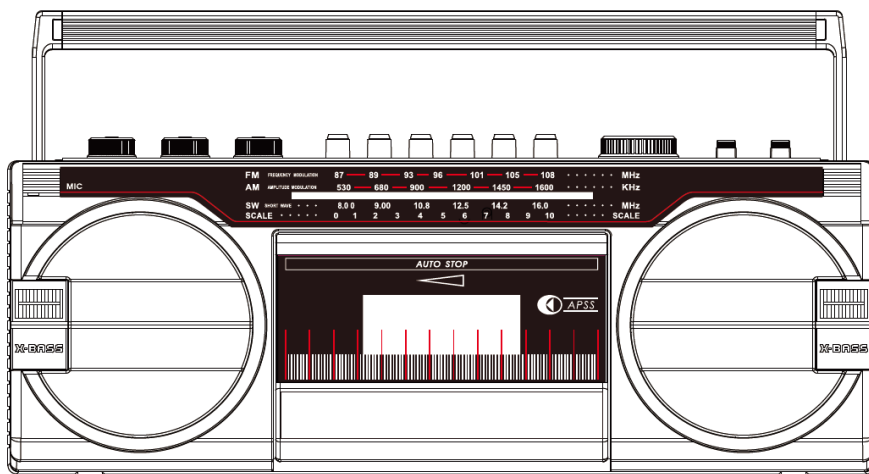

### Notice:

Please read user manual carefully before any operations, and keep it for your records.

### Safety instructions:

- Do not disassemble this product.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the speaker away from direct sunlight, fire and high voltage equipment.
- Do not store the speaker inside a car during hot weather.
- Do not use the appliance if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, his customer service or similar qualified persons.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Before connecting the appliance to the mains supply, please check that the type of power and mains voltage match the information provided on the type plate.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- Mains plug is used as disconnect device and it should remain readily operable during intended use.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion

or the leakage of flammable liquid or gas.

 
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 
### Package includes:

- 1×Bluetooth® speaker
- 1×AC power cable
- 1×User Manual

### Specification

- Bluetooth version 5.0
- Input: AC 220~240V~50/60Hz 750mA
- Batteries: 6V (4x1.5V UM-1 batteries) not included

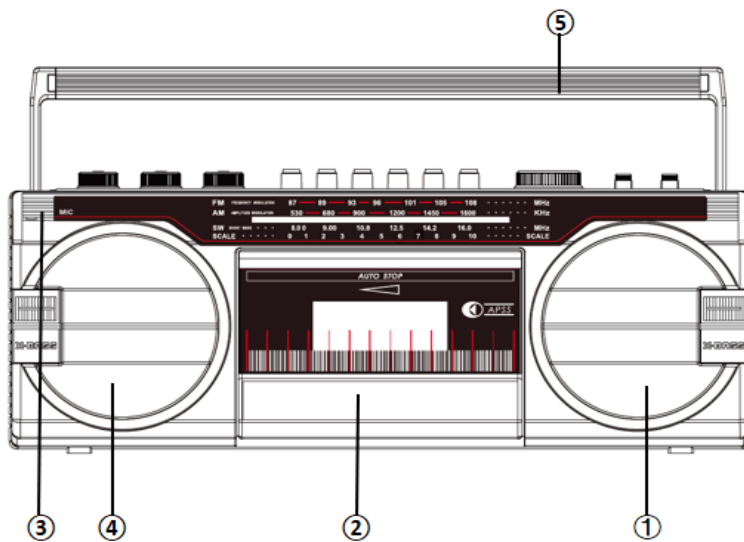

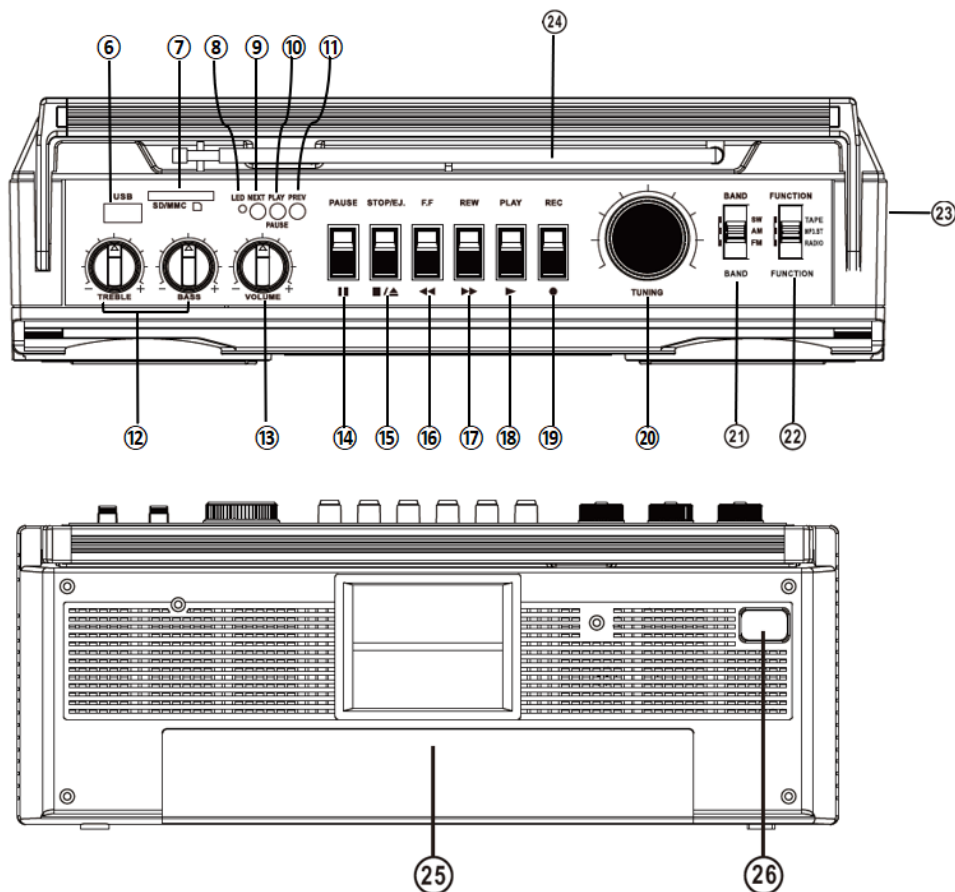

## Product Overview:

- ① R/ Speaker
- ② Cassette door
- ③ MIC
- ④ L/ Speaker
- ⑤ Handle strip
- ⑥ USB socket
- ⑦ SD/MMC socket
- ⑧ LED light
- ⑨ USB fast forward button
- ⑩ USB play/pause button
- ⑪ USB previous button
- ⑫ Two types of equalizer
- ⑬ Volume control knob
- ⑭ Pause button for cassette mode
- ⑮ Stop/EJ. Button
- ⑯ Fast forward button for cassette mode
- ⑰ Previous button for cassette mode
- ⑱ Play button for cassette mode
- ⑲ REC button
- ⑳ Tuning knob

- ②① Band switch
- ②② Function switch
- ②③ External earphone jack
- ②④ Telescopic antenna
- ②⑤ Battery compartment
- ②⑥ AC jack

## Cassette Tape mode

1. Set the Function switch②② to TAPE position and enter into Cassette Tape mode.
2. Press the Stop/EJ. Button①⑤ to open the cassette door②.
3. Insert the cassette tape, tape slot toward the front.
4. Press the play button①⑧ and the speaker will begin to play.
5. You can adjust the volume control knob①③ to the best listening level.
6. To stop the playing, press the Stop/EJ. Button①⑤.

## Recording mode

Insert the cassette tape with the full reel to the left and the tape slot toward the front, press the PLAY①⑧+REC button①⑨, it will start to record.

Note: The cassette tape is required to have record function, then just could use for this mode.

## Radio mode

1. Set the Function switch②② to RADIO position, and turn Band switch②① to SW/AM or FM position.
2. Tune to the desired station by turning the Tuning knob②①.
3. You can adjust the volume control knob①③ to the best listening level.

## Bluetooth Function

1. Set the Function switch②② to MP3.BT position and the LED light⑧ will flash quickly.
2. Activate Bluetooth of mobile phone and search for Bluetooth device name "KM43303328" in your Bluetooth settings menu to pair, and then connect it.
3. When successfully paired and connected, the connected voice will issue from the speaker and the LED light⑧ flash slowly.
4. Press NEXT⑨/PLAY AND PAUSE①⑩/PREV①⑪ buttons to select next / play and pause / previous songs.

### Note:

- a: After initial pairing, the unit will stay paired unless unpaired manually by the user.
- b: If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.
- c: Only one Bluetooth device can be connected to the speakers at one time.
- d: If your device become unpaired or you are not able to connect it, repeat the above steps to connect.

## USB/SD/MMC card playing mode

1. Set the Function switch②② to MP3.BT position.

2. Insert the USB or SD/MMC card into the USB socket⑥ or SD/MMC socket⑦, then Bluetooth will be disconnected and audio in USB / SD / MMC will play automatically. If the USB and SD/MMC card are inserted at the same time, the speaker preferentially read the USB. If insert the USB first, then insert the SD/MMC card, the speaker will give priority to reading the card inserted later.
3. Press NEXT⑨/PLAY AND PAUSE⑩/PREV⑪ buttons to select next / play and pause / previous songs.
4. Support MP3/ WMA/ FLAC/APE/WAV audio file, the maximum memory size is 32G.

## **Voice equalizer**

**Please adjust the voice equalizer⑫ to get the treble or bass voice based on your own need.**

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation