

**CHRISTMAS LIGHT UP FROSTED
TABLETOP TREE DECORATION
43308705**



1. Tree body
2. assembly required

How to Assemble:


- 1) Shape the branches by gently pulling them down and away from the trunk and then separate the individual tips.
- 2) Shape the branches for a natural look. Shift the branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your Christmas tree is now ready for you to decorate and enjoy.

Conditions of Use

- 1) This product is for indoor use only.
- 2) Keep product away from fire and other heat sources
- 3) Recommend saving instructions for future reference.

Packaging Up and Storage Tips

- 1) Remove all ornaments.
- 2) Press branches against stem before placing in carton.
- 4) Pack carton and store in a dry and damp free area.
- 5) Do not place product in direct sunlight or in an area where temperatures exceed 40 degrees.

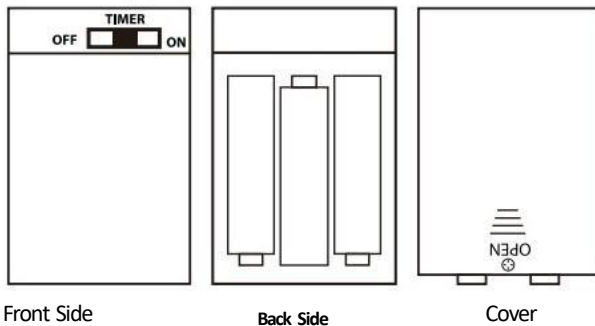

ON/ OFF/ Timer Function Operation

REQUIRES 3 X 1.5V AAA BATTERIES NOT INCLUDED.
BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

OPERATING AND CARE INSTRUCTIONS

NEVER MIX DIFFERENT TYPES OR OLD AND NEW BATTERIES

DO NOT SHORT CIRCUIT SUPPLY TERMINALS OR DISPOSE OF BATTERIES IN FIRE

REMOVE BATTERIES DURING LONG PERIOD OF NONUSE

FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.

*Timer will start once the switch is set to the "timer" position. Lights will stay on for 6 hours and then turn off for 18 hours.

Cycle will repeat automatically unless switched to "off" position or batteries are exhausted.

Made in China