


280mm

190mm

Roll up keyboard Instruction Manual

3+
years

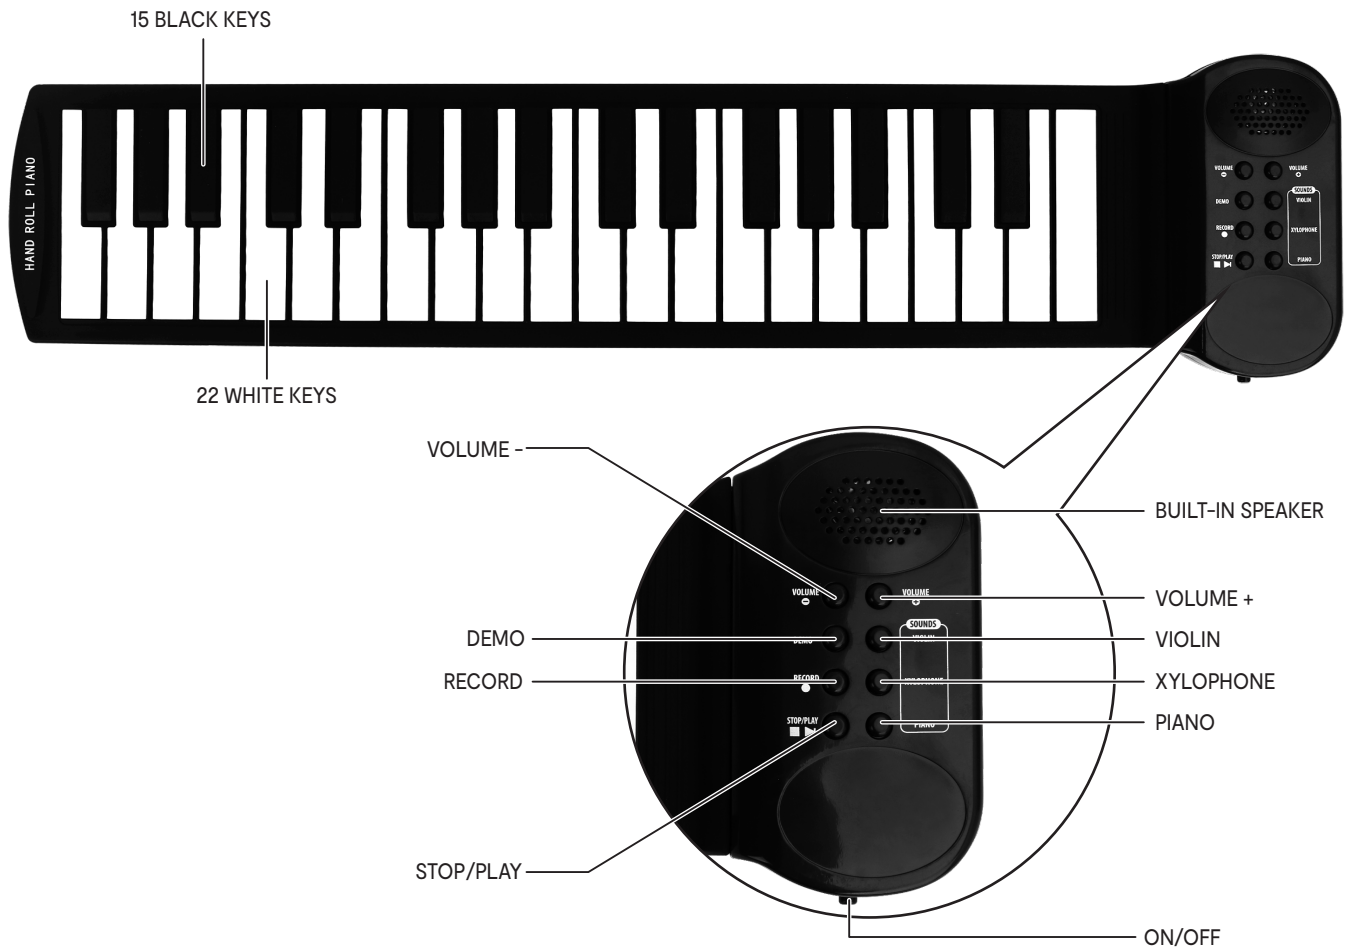

Demo:

When the "Demo" mode key is pressed, the system switches to melody demonstration play mode.

Press "Demo" key to change melodies.

When one melody is playing, the player can press "Stop/Play" and play another melody by pressing the desired melody key.

Stop/Play:

When the "Stop/Play" mode key is pressed, the system switches to one key play mode.

Any instrument can be selected by pressing the desired instrument key.

The default instrument is the piano.

Selected instrument can be changed any time by pressing the desired instrument key.

Press any instrument mode key to change the music to that desired mode immediately.

There are 3 instruments: Violin, Xylophone, Piano.


Record:

Press this button to record the melody that you are playing, then press the "Play" button to play the recorded music.

BATTERY DIAGRAM:

3 X AA

REQUIRES 3 X 1.5V AA BATTERIES
(NOT INCLUDED).

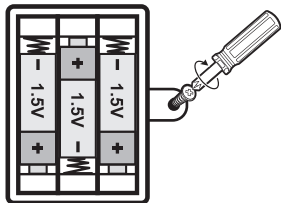

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

ADULT SUPERVISION IS RECOMMENDED. PRODUCT MAY VARY FROM THE IMAGES SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

Keycode 43-314-881