


Keycode: 43-317-486


Mega Piano Playmat

Instruction Manual

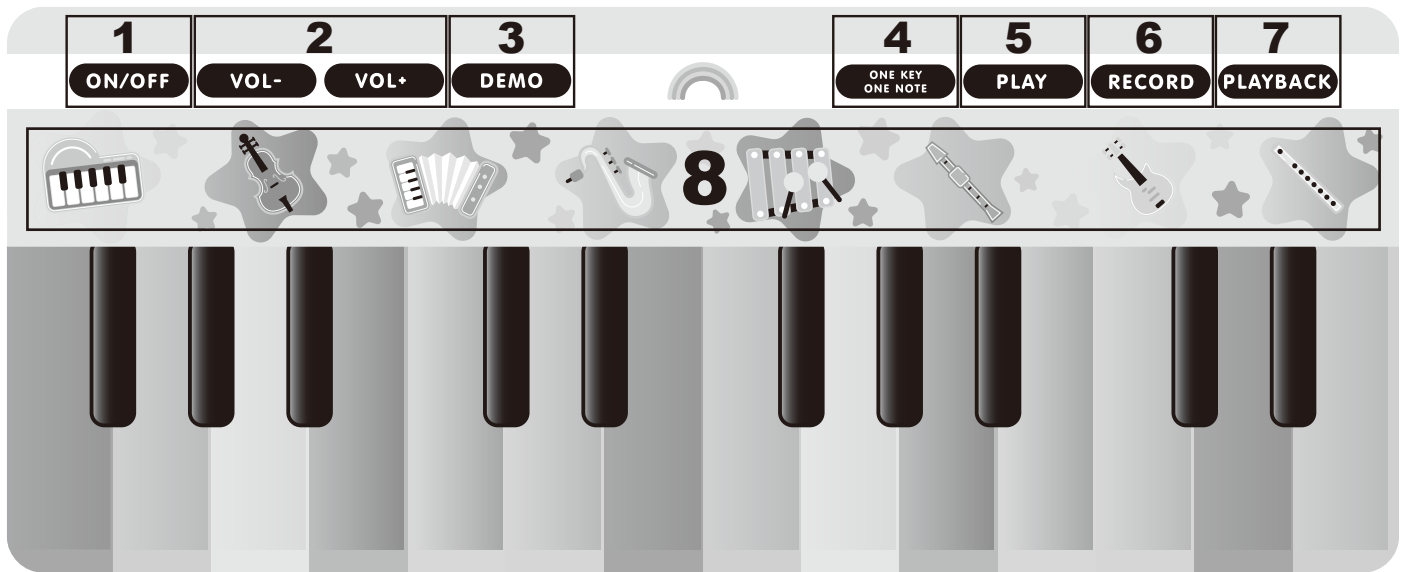

1. ON/OFF: Press to turn the product on/off.
2. VOL- /VOL+: Press to control volume.
3. DEMO: Press to hear melodies.
4. ONE KEY ONE NOTE: Press to hear a random melody. Press the piano keys to repeat the same melody.
5. PLAY: Press the play button to hear the piano notes.
6. RECORD: Press to record your melody.
7. PLAYBACK: Press to playback the melody you recorded.
8. INSTRUMENT ICONS: Press to change instrument sounds.

BATTERY DIAGRAM:

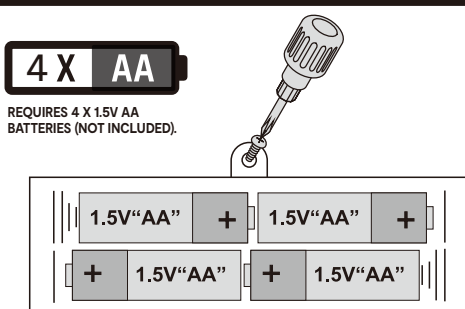

REQUIRES 4 X 1.5V AA BATTERIES (NOT INCLUDED).

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

ADULT SUPERVISION IS REQUIRED. PRODUCT MAY VARY FROM THE IMAGES SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.