

# anko

## **Detail Trimmer Instruction Manual**



**Model no.: LD-7235**

# SAFETY GUIDE

## PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.

## SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

1. For hygienic reasons, do not share this appliance with other people.
2. Only use the appliance as described in this manual.
3. Do not immerse the appliance in water or any other liquid.
4. Always check the appliance for damage before use. If any damage is observed, do not use the appliance.
5. The appliance is intended for indoor use only.
6. This appliance has no user-serviceable parts. Do not attempt to access the internal components in the appliance.
7. This appliance is for personal use only, not designed for commercial use.
8. Do not use it outdoors.
9. Before using the appliance, ensure that the shaver head is securely fitted.
10. Keep the appliance out of reach of young children and pets.
11. Do not use it on children or allow children to play with the appliance.
12. The appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
13. Children must be supervised to ensure that they do not play with the appliance.
14. Use only attachments provided with the product.
15. Detach the attachment heads for cleaning. Only the attachments can be washed under tap water.
16. Do not submerge the appliance, nor make it flow under the water tap.



### CAUTION!

- Do not share the same appliance with others.
- Regularly clean the appliance to extend its lifetime.
- This appliance is battery-operated. If you do not use the appliance for a long time, remove the battery.


## PARTS

1. Outer Foil
2. Removable blade head
3. Power indicator
4. On/Off switch
5. Protective cap
6. Battery compartment



## BATTERY REPLACEMENT

Remove the battery cover and insert one AA battery (battery is not included) according to the battery compartment instruction. Put the battery cover back on the device, and make sure it's tightly fitted.

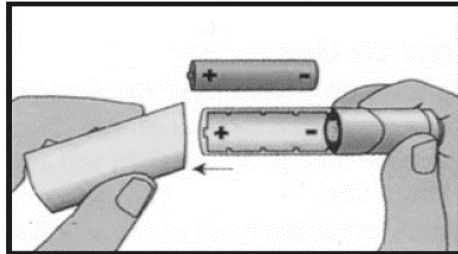


## OPERATING INSTRUCTIONS



**WARNING: Stop using if skin becomes sore or inflamed.**

**WARNING: If you feel any discomfort or irritation during use, stop using the product.**

1. Remove the Protective Cap.
2. Make sure the shaver head is securely inserted into the unit.
3. Push the switch to turn on the unit.
4. Place the blade on the skin, and move it slowly and gently in circular motions to remove unwanted hair.
5. This appliance can be used in different body areas, such as underarms, legs, and bikini lines.
6. Turn off the unit after use.

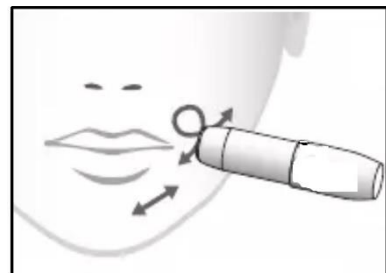

## **CLEANING AND MAINTENANCE**

**Note: Clean the appliance after each use to ensure better performance.**

1. Always switch OFF the unit before cleaning.
2. Do not immerse the whole unit in water.
3. Clean the removable blade head with a cleaning brush or rinse it under water.
4. Do not use any lubricant, detergent, polishing agent, or air freshener on this appliance.
5. Do not use towels paper towels, and wire ball sponge to clean the blade head.

## **RECYCLE**

Batteries contain substances harmful to our environment. Please do not dispose of the appliance with the battery inside. Remove the battery and recycle it for environmental protection.

### **12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
<p>Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a></p>	<p>Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a></p>