

43345304 ADULT INFLATABLE PUMPKIN COSTUME



FITS MOST

Instructions:

Components	Step 1: Take out the blower and twist off the top cover	Step 2: Put the blower in the round hole of the costume.	Step 3: Twist the top cover to secure the blower.
Step 4: Put the battery case into the pocket of the costume and plug in the USB. Have an adult use a small Phillips® screwdriver to remove the battery compartment top. 4 x 1.5V AA size batteries are included. Following polarity markings when replaced the batteries. We recommend using alkaline batteries.		Step 5: Put on the costume and switch blower on, then zip it up.	Finished

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE PRODUCT WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

- 1) THE FAN AND THE BATTERY COMPARTMENT SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, USB, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.
- 2) WARNING: FOR ADULT USE ONLY.
- 3) THE COSTUME IS NOT TO BE CONNECTED TO MORE THAN THE RECOMMENDED NUMBER OF THE FAN AND BATTERY COMPARTMENT SUPPLIED.
- 4) THE COSTUME SHALL ONLY BE USED WITH THE FAN AND BATTERY COMPARTMENT SUPPLIED.
- 5) THE FAN IS NOT A TOY, PLEASE USE AS INTENDED, ADULT SUPERVISION IS REQUIRED.
- 6) THE COSTUME LIABLE TO BE CLEANED WITH LIQUIDS ARE TO BE DISCONNECTED FROM THE POWERSUPPLY BEFORE CLEANING.

43345304

Size: 150x265mm