

KMT说明书折页 128g双铜 尺寸: 89*127mm

anko

K: 43351671 | T: 68734978

Model: IE327T

TYPE C BUD EARPHONE User Manual

Package contents:

- Type-C earphone
- User manual



12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.


We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Quick Start Guide

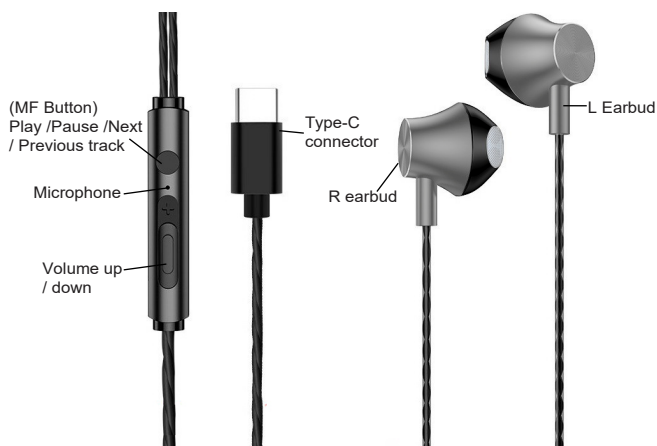

Specification

- Unit driver: 14mm
- Sensitivity: 105dB±3
- Impedance: 32 Ohms
- Cable length: 1.2m

Instruction

1. Remove all packing material, check that the device is undamaged.
2. Set the sound device to a proper volume.
3. Insert the Type-C connector into the port of the device (e.g. Music equipment or Mobile phone).
4. Put the earbud with marking "R" into your right ear and another earbud housing with marking "L" into your left ear.
5. Push button up to increase volume, push button down to decrease volume; Press MF button once to pause music; double click MF button for next music track, triple click MF button for previous music track; press and hold the MF button for 2S to activate Siri or other voice assistant.
6. The product supports working with the latest iPhone 15 series models.

Cleaning or Storage

Protect the appliance from water drops and water spray. Do not use any astringent or abrasive cleaning agents. If necessary, clean the device with a soft, damp cloth. When no longer using the device, store it in a place where neither high temperatures nor moisture can affect it.

Warning

- Prolonged listening to music at high volume levels may lead to discomfort. It is advisable to use a moderate volume setting instead of a high one.
- Regardless of the volume level, ensure that it does not hinder your awareness of your surroundings. Exercise caution when using the earphone.
- Avoid throwing, applying pressure to, or submerging the earphone in water.
- Keep the product away from fire, water, and high-voltage devices.
- This product is not intended for use by children due to the presence of small parts.
- Please refrain from treating this item as regular household waste. Kindly dispose of it at an electrical and electronic recycling facility.
- The max ambient temperature is 40 °C.
- Dropping the product or submitting it to impact can cause the product to malfunction.