



INSTRUCTIONS FOR PORTABLE KEY SAFE


RESET CODE STEPS

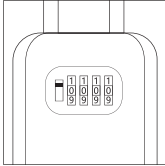


1. Dial the default password (0-0-0-0) to open the key box

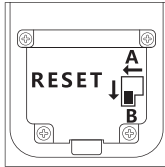

2. Push the RESET lever from A to B

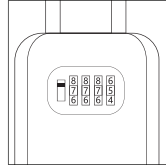


3. Set your own combination

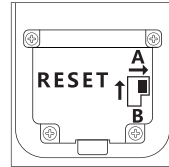


4. Push the RESET lever from B to A

REMOVABLE SHACKLE

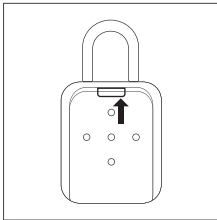


1. Push the lever up

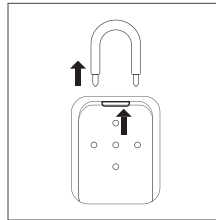


2. Pull up the shackle

MOUNTING OPTIONS

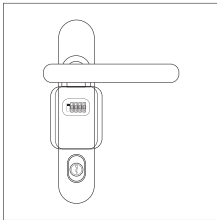

Hang onto a door handle

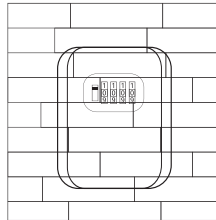

Mount onto a wall (insert the plastic stoppers into the shackle holes)

PARTS

