


# 此款说明书需要彩印

142 mm

## anko

CLOCK WIRELESS CHARGER  
User Manual  
EWL-21132-A  
K: 43-367-603 | T: 69-103-391

### 1. Device Lay-out

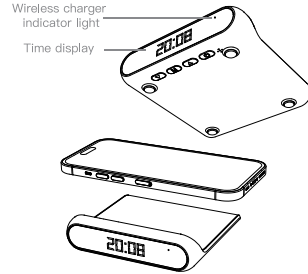

### 2. Includes

- (1) Alarm clock
- (2) USB-C cable
- (3) User manual

### 3. Technical specifications

Input: 5V/2A, 9V/2A, 12V/2A  
Wireless charging output: 15W/10W/7.5W/5W  
(Wireless charging at 15W is only applicable to some devices)  
Charging efficiency: ≤75%  
Charging distance: ≤8MM

### 4. LED Color indication

- (1) Standby: No display lamp.
- (2) On charging: Blue light stays on.
- (3) Fully Charged: No display lamp.
- (4) Mobile not supported: Blue light flashes.
- (5) Foreign Object Detection: Blue light flashes.

### 5. How To Set Time/Alarm

- (1) **Getting Started** Plug in the charging cable, time start to display, the wireless charger indicator blue light flashes 1 second.
- (2) **Power on/off function** Press the button shortly to turn on/off the time display. Long press the for above 3 seconds, then enter into the default time 06:00.
- (3) **12/24H Switch** Press shortly to switch the time display mode: 12H/24H.
- (4) **Time Setting** Press M button shortly to enter into the time setting, long press [ M ] button to exit time setup. After entering into the time setting, the Hour number flashes, press the to increase or decrease the value, or press and hold the to skip through the values quickly. After the Hour setting, press M button to enter into the Minute format, the Minute begins to flash. Press the to increase or decrease the value, or press and hold the to skip through the values quickly.
- (5) **Alarm Setting** Press shortly to enter into the alarm setting. Press M button shortly to switch Hour /Minute setting, long press the M button to exit the alarm setting. Long press to turn on/off the alarm.
- (6) **Snooze Mode** When the alarm rings, take a shot at the wireless charging host or press any button to stop the alarm ringing. No any operation, the alarm will ring 10 minutes (in ringing 30 seconds stop 10 seconds mode) then exit.

Press	Turn on/off time display
Long Press	Factory reset, time default to 06:00
Press	Switch 12Hour/24Hour
Press M	Enter time setting
Press	Enter alarm setting
Long Press M	Exit time /alarm setting

Front

118 mm

### 6. Notes

- (1) Do not disassemble or throw into fire or water, to avoid damage.
- (2) Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
- (3) Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.
- (4) Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
- (5) To take care of the children, to ensure that they won't play the wireless charger as a toy.
- (6) Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases or try to take it off before charging.

The wireless charging efficiency may be affected by some phone cases.

Make sure there is no mental foreign object between the charging pad and phone case when charging. To achieve fast wireless charging, a Quick Charge 2.0 or higher power adapter will be required (sold separately).

### \* 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



**WARNING:** BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IF SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE SAHOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 1303 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT. USED BATTERIES MUST BE DISPOSED OF IN THE GARBAGE OR A BATTERY RECYCLE FACILITY.



SEE BACK OF PACK FOR BATTERY DISPOSAL INFORMATION

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing. Vic.3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Back