

anko

Mini Scrubbing Brush

ZT10034

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.


1. Please read all instructions carefully before using this product.
2. Do not immerse the main unit in water or other liquids to avoid damage to the motor.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Use of accessories not recommended or supplied with the product may cause personal injury.
6. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed.
7. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
8. Switch OFF the appliance before changing accessories.
9. Before use the product, please check if the brush is fixed in place.
10. Do not direct the brush at people to avoid injury.
11. Do not operate the product near the any explosive flammable object or liquid.
12. Keep hair, loose clothing, jewelry etc. and all parts of body away from moving parts.
13. Always wear eye protection when using the scrubber with irritating substances. You may also use rubber gloves.

CAUTION!

- This product is for household use only and not designed for commercial use.
- Do not expose the product to high temperatures, strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.
- Cleaning and user maintenance shall not be made by children without supervision.
- Non-rechargeable batteries are not to be recharged.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- **IMPORTANT! if the appliance is to be stored unused for a long period, the batteries should be removed.**
- The supply terminals are not to be short-circuited.
- Type of Battery: 1.5V AA
- Open the cover, insert the battery with correct polarity, then closed the cover correctly.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR SCRUBBING BRUSH

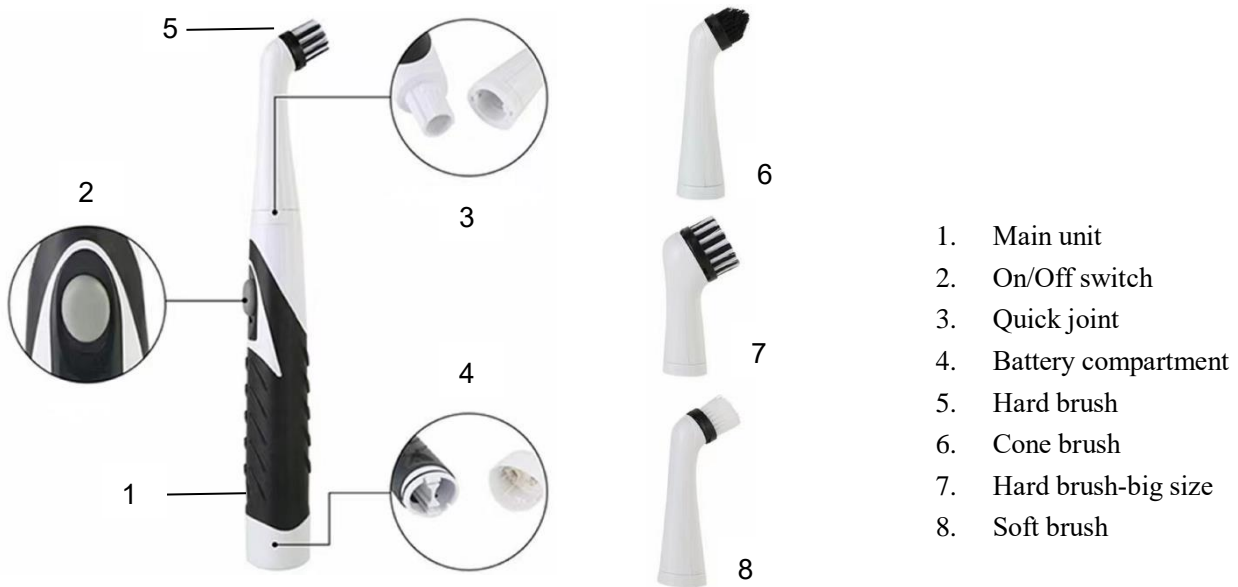

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any part is missing or damaged, do not use.

USING YOUR SCRUBBING BRUSH

When using the appliance for the first time, carefully remove all internal and external packaging, protective film and accessories.

Always power off the appliance before install batteries and accessories.

1. Install 4*AA Batteries (NOT INCLUDED) to the battery compartment.
 - Press the rubber bubble on front and back side of the main unit to remove the battery compartment cover.
 - Install the battery according to the diagram shown inside and cover it.
2. Select the appropriate brush according to the cleaning requirements, install the main unit.
 - To install the brush, align the slot on the fast joint and push the brush head to the main unit, then turn the brush head anti-clockwise until the brush head is opposite to the switch.
 - Rotate the brush head clockwise to take it off.



it to

Note: Make sure that the battery and brush are properly assembled before use.

3. Push the On/Off switch forward, the appliance start working.

⚠ Warning! Always wear safety gloves and glasses when strong cleaner is used for cleaning.
Do not use on old, fragile areas. Do not use on wood products, furniture, painted surfaces, leather products, people and pets.

4. Push the On/Off switch backward to turn off the appliance.

Tips for better performance:

- This appliance can work with different kinds of cleaners such as spray, foam, gel, liquid, as well as bleach. Frictional cleansers should not be used.
- If you are not sure the surface can be used with the brush, you can test it on inconspicuous places first.
- Please power off the appliance before leaving the cleaning surface to avoid spraying the water everywhere.
- The cleaner is powerful enough. Excessive force is not required. It is better to brush in a circular motion for big areas. Do not keep brushing in a small area for a long time.

CLEANING AND STORAGE

- Please clean the product and its accessories after each use to prolong the life of the appliance.
- Do not use a steel ball, abrasive cleaner, or corrosive liquid (such as gasoline, acetone) to clean the product.
- Do not rinse with soak or spray water or other liquids to avoid damage to the appliance.
- Clean the main body with a moist soft cloth.
- Soak the brushes in soapy water before rinsing. Keep the surface of the cleaning brush clean to ensure sealing ability.
- **IMPORTANT! ensure the product is clean and dry before storage.**
- **IMPORTANT! to prevent batteries from leaking, remove the batteries before storing.**
- Store the product indoors in a dry and cool location.

TECHNICAL SPECIFICATION

Input: 6Vd.c. (4 x 1.5V AA Batteries)

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us