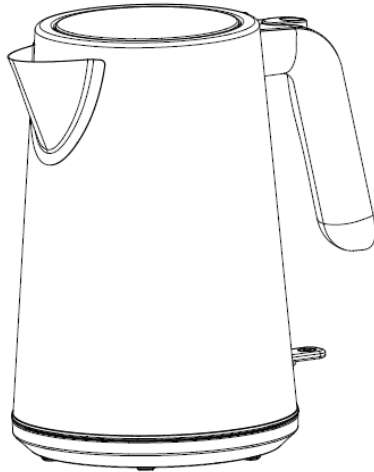

anko

**Cordless Water Kettle
WK8531BE
Instruction Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE**

IMPORTANT INSTRUCTIONS

- Please read these instructions carefully before using the water kettle for the first time.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- The appliance must not be immersed.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

-
- Children should be supervised to ensure that they do not play with the appliance.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - If the kettle is overfilled, boiling water may be ejected.
 - Kettle is only to be used with the stand provided.
 - This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

- Do not operate the kettle if damaged, after an appliance malfunctions or it has been damaged in any manner, return to the customer service department for repair, because special purpose tools are required.
- Avoid spillage on the connector.
- Heating element surface is subject to residual heat after use.
- Use the kettle according to this instruction, any misuse may cause electric shock or other hazards.
- This appliance is not intended to heating liquid other than water.
- Regarding how to clean the surfaces in contact food, please refer to section <Cleaning >.
- Before you connect the kettle to the mains supply,

make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, do not use the kettle.

- The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, press the ON/OFF switch up.

- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.

- Always fill the kettle with water before switching it on.

- The kettle is designed to disconnect the live electrical supply from the heating element under

abnormal operating conditions. If the water kettle is accidentally switched on without water, the boil dry protector will operate.

- If the kettle ever boils dry, the power indicator will go out. Allow 15 minutes to cool down before refilling with cold water. The safety cutout will automatically reset during this time.

- Place the kettle on a stable flat surface.

- Do not use this appliance outdoors.

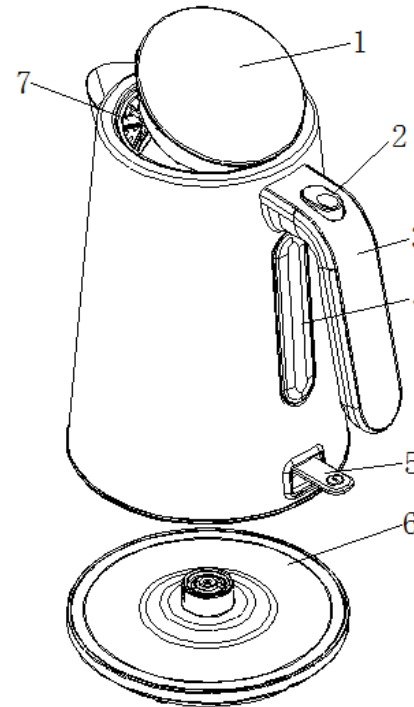
- Ensure that the kettle is switched off before removing it from its base.

- Do not remove the kettle from its base during operation.

- Never immerse the kettle, base or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.

-
- Prevent children from pulling on the mains cord or knocking the kettle over.
 - Ensure that the mains lead does not overhang the worktop surface.
 - The outside surface of the kettle may get hot during use, please take care when using the kettle.
 - Never fill in water more than the maximum water level mark.
 - Never use the kettle with the lid open.
 - Do not open the lid when steam is coming out of the spout.
 - **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
 - Before cleaning the kettle, disconnect from mains power outlet and wait until it has cooled down.

FEATURES OF KETTLE



1. Lid
2. Lid button
3. Handle
4. Water window
5. Switch button
6. Base unit
7. Filter

Before first use

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions below. This will remove any dust or residues remaining from the manufacturing process.

- Remove the kettle from the base before filling.
- To fill the kettle, open the cover by pressing the lid button downwards, then fill to the desired level (Min. 0.6L- Max.1.7L). Close the lid by pressing it down until it clicks into place.
- Plug the power supply cord into a mains power outlet, press the ON/OFF switch, and the power indicator will light up.
- When the water has boiled the kettle will automatically switch itself off, you can stop the boiling process at any time by lifting the On/Off

switch. The power indicator will go out.

Cleaning

- First read the instructions in the section titled “IMPORTANT INSTRUCTIONS”.
- Always disconnect the kettle from electrical power outlet before cleaning.
- Before cleaning make sure the kettle is cold enough.
- Empty the kettle, clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Do not use abrasive cleansers or scouring agents of any kind inside or on the exterior of the kettle.
- Only use the dry cloth to wipe the base of the kettle.

-
- Avoid wetting the electrical parts.
 - Do not immerse the kettle or power base in water or other liquid, and make sure the electrical kettle socket is kept dry.
 - To clean the filter, empty the kettle and allow it to cool, open the lid, lift out the filter, rinse the filter under warm water and brush off any impurities.
 - Refitting is the reverse of removal.

Descaling

- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time then rinse the kettle well.

TECHNICAL DATA

Voltage: 220-240V~ 50-60Hz

Power: 1850-2200W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective

within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other

reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us