

3+
YEARS

ROBOTIC ELEPHANT MANUAL



PACKAGE CONTENTS

 
• Elephant • Remote Control • User Manual

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ELEPHANT.

1. Do not use your elephant near water. Clean using a soft cloth or paper towel.
2. Do not place your elephant on any wet surfaces.
3. Do not allow children under age three to play with your elephant without adult supervision.
4. Do not expose your elephant to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your elephant to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your elephant to excessive trauma.
9. Your elephant is not intended for commercial use.

ELEPHANT

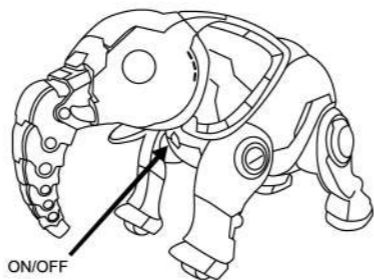

ON/OFF

REMOTE CONTROL



Voice command: Press the voice command button on the remote control, then you will hear a tone. Aim the remote at the elephant's head and say the voice command to the remote control. After speech recognition, the elephant will make the requested action. After the elephant has completed one action, repeat the above steps to make the elephant do new tricks.

There are seven voice commands: "Sing a song" / "Stand at attention" / "Sit down" / "Handstand" / "Lean over" / "Say hello" / "Push-ups".

NOTE: After entering the voice command mode, no other operation can be performed. Press the stop button to exit voice command mode. Best receiving range between remote control and elephant's head is 3-5 metres. The effective range to speak to the remote control is less than or equal to 30cm.



Play



Nose up



Stop



Nose down



Increase the volume



Turn down the volume



Advance



Stand at attention



Music 2



Sit down



Say hello




Music 1

INSERTING BATTERIES

Elephant

1. Unscrew to open battery cover, connect the rechargeable battery pack with connector. The battery connector will only fit in one way. Do not force the connectors together.

 2. Replace battery cover. Attention: Remove rechargeable battery after you have finished using your product.

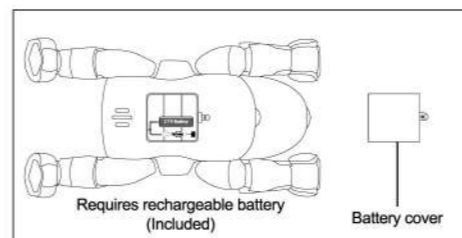


Requires rechargeable battery (Included)

Battery cover

Remote control

1. Unscrew to open battery cover, insert 2 X 1.5V AAA batteries.

 2. Replace battery cover. Attention: remove batteries after you have finished using your product.

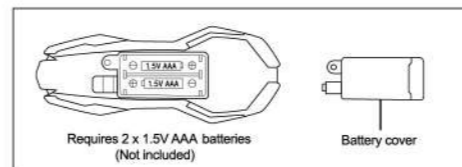


Requires 2 x 1.5V AAA batteries (Not included)

Battery cover

LITHIUM BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

 1. Turn off the elephant.
2. Unscrew to open the battery cover and separate the rechargeable battery pack from the connector.
3. Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way. Do not force the connectors together), then plug the large end of USB cable into a 5Vd.c. 2A charger (not supplied) or USB port only. The LED light will light up when charging. When it has finished charging, the light turns off.

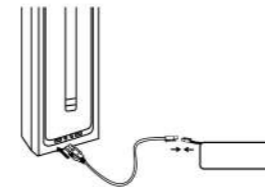

POWERING ON YOUR ELEPHANT

Once you have inserted batteries into your elephant and remote control, you can go ahead and power on your elephant.

To do so, press the ON/OFF button located underneath the elephant's head.

When the elephant is not operational for 1 minute, it will make a sound and enter sleep mode.

When your elephant is in sleep mode, you can restart the ON/OFF button of the elephant to resume use. When you have finished playing with your elephant, turn off the elephant.

NOTE: When your elephant is running low on power, some of the functions will not be available. Once the battery are completely depleted, the elephant will make the alarm sound, replace the battery as soon as possible to continue use.

PLAY

Press the play button, the elephant will demonstrate a series of actions with sound.

PROGRAMMING YOUR ELEPHANT

Press the program button and your elephant will enter program mode. Once in program mode, you can press any buttons on the controller (except voice command, volume +/- button) to create a movement program. The elephant can be programmed with up to 50 actions. Press the program button again to have your elephant carry out the movement program that you created.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

K: 43-385-508 | T: 69-561-337

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.