

anko

MINI MASSAGER

NOV-85

Instruction Manual

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

When using an electrical appliance, basic precautions should always be followed, including the following:

- This product is not intended for medical use. It is intended only to provide a relaxing massage.
- Supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use any attachments not provided with the unit.
- **Do not** place or store appliance where it can fall or be dropped into a tub or sink.
- **Do not** place or drop into water or any other liquid.
- Not for use by children. **This is not a toy.**
- Turn off appliance when not in use.
- **Never** operate this appliance if it has been damaged or if it is not working properly. And repair.
- Keep away from heated surfaces.
- This appliance is designed for household use only.

Save these instructions

Caution: please read all instructions carefully before operating.


- If you have concerns regarding your health, consult your doctor before using this product.
- Those with the following conditions should consult their doctor before using this product: Pregnancy, malignant tumor, Diabetes, conditions requiring rest, Heart disease, pacemakers.
- If, at any time, soreness, rash or pain occurs, discontinue use and consult your physician.
- **Never** use this product directly on swollen or inflamed areas, skin eruptions, or an open wound.
- A massage session longer than 15 minutes is not recommended.

Battery precautions

- Use only the size and type of batteries specified.
 - When installing batteries, observe proper +/- polarities. Incorrect installation of batteries may cause damage to the unit.
 - **Do not** mix old and new batteries.
 - **Do not** mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) Batteries.
 - **Do not** dispose of batteries in fire. Batteries may explode or leak.
 - If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
 - Clean the battery contacts and also those of the device prior to battery installation.
 - Remove used batteries promptly.
 - Recycle or dispose of batteries properly in accordance with local council regulations.
- Caution:** this product contains small parts that may present a choking hazard for young children.

Operating instructions

- Remove small plastic tab (a) by unscrewing cap (counterclockwise) and forcefully pulling down on tab. Dispose of tab and screw cap back on.
- Press power (b) button to activate the massager. With small plastic tab removed, the massager will continue to run without holding down the power (b) button.
- Hold the massager over desired area to be massaged.
- After completing your massage, turn the massager off by pressing the power (b) button once.
- When batteries need to be replaced, open battery compartment (c) by unscrewing top counterclockwise. Insert 2 AA batteries into the chamber as directed on the bottom of the compartment and replace top.

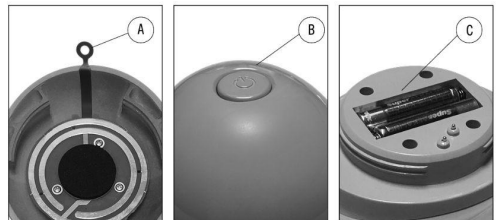

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us