


105mm


**anko**

K: 43-388-530 T: 69-300-851  
Rechargeable Fabric Shaver  
Model no.: 406465

## Instruction Manual

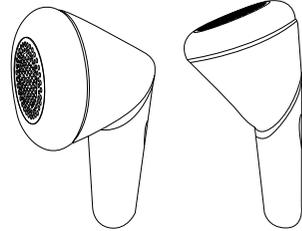

### Parts

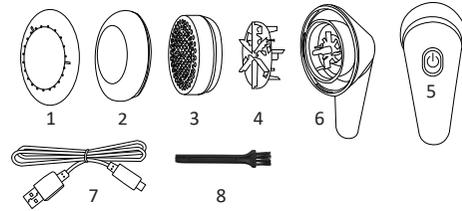

### Dimensions

Height: 16.4cm  
Width: 8.5cm  
Length: 8.5cm

### Power Details

5V $\overline{\text{---}}$ 1A

Ta: 25°C

### Protection Class: III

**Rechargeable Battery**  
3.7V 1200mAh 18650 li-battery

1. Cap
2. Screw Cap
3. Stainless Steel Mesh Board
4. Blade
5. On/Off Switch
6. Rotation Handle
7. Type C cable
8. Cleaning Brush

### WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- IT MUST ONLY BE SUPPLIED AT SAFETY EXTRA LOW VOLTAGE CORRESPONDING TO THE MARKING ON THE APPLIANCE.
- WARNING: KEEP THE APPLIANCE DRY
- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- THIS APPLIANCE CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
- FOR CHARGING, REFER TO PREPARATIONS FOR USE SECTION.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND.
- TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.

155mm

- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

### CARE AND CLEANING

- Use a damp cloth to wipe the surface of your fabric shaver. Do not allow water or other liquid to enter the inner parts of this device.
- To clean the shaving head or blades, switch off and unplug your fabric shaver. Unscrew the shaving head and use the cleaning brush provided to remove any bobbles or lint pieces then screw the shaving head back on. Blades are sharp so please use caution.
- If the screen cover is loose or open when the power is on the motor will shut down.



### Warnings

- Use this fabric shaver only as recommended in this manual.
- Use this fabric shaver on fabric only; it is not to be used on skin, hair or any other material.
- This fabric shaver is equipped with a sharp cutting blade, do not leave it unattended.
- Tuck in any loose threads before shaving.
- Do not use this fabric shaver on delicate easily damaged fabrics. If unsure test the fabric's suitability on an unexposed area first.
- Do not use when it's charged.

### PREPARATIONS FOR USE

- Plug the small end of the USB cable into the port located at the end of the handle. Charge only with supplied USB cable.
- Ensure charging adapter used is compatible with a 5V $\overline{\text{---}}$ 1A.
- Charging time: 6-8 hours, the charging indicator will be red while the fabric shaver is charging and will change to green when fully charged.
- No loading working time: Approx. 2 hours in green light. If the power less than 10%, blinking red light.
- Take off guard cap before using.
- Place fabric on a flat surface such as an ironing board and pull it as straight as possible.
- Tuck in any loose threads before shaving and test the fabric's suitability on an unexposed area first.
- Gently glide the shaving head over the fabric in an up and down motion.
- Do not press down heavily in order to prevent possible damage to fabric.
- Rotation handle for a comfortable using.
- Empty the fabric shaver after each use.

### Trouble Shooting

Problem	Possible Cause	Solution	Contact for Kmart purchases	Contact for Target purchases
Fabric shaver does not turn on	The battery is running low or is out of power	Charge the appliance as guided	Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us