

# **#6200S-AU Scorpion Instruction Sheet English Translation**

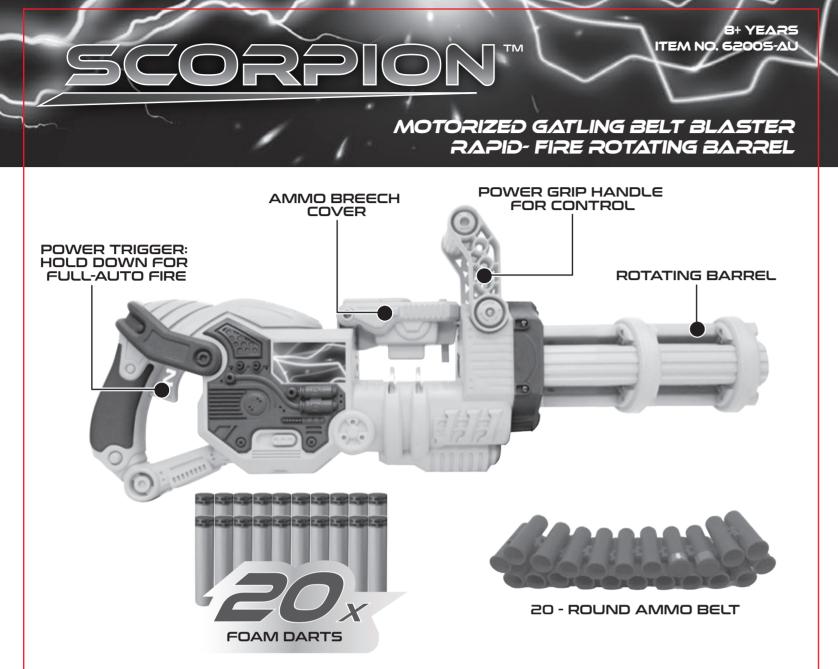


# Set-up Instructions:

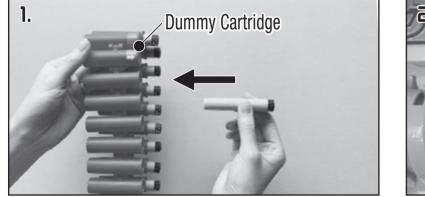

1.Loading Darts

- (a) Your ammo belt comes in a loop and has 22 cartridges. The first and the last are dummy cartridges. Each dummy cartridge is marked with an orange label.
- (b) Insert the foam darts into the open/empty cartridges. Ensure that each foam dart has been pushed in all the way.

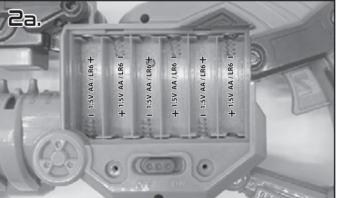


Size: A4

### **2.Loading Batteries**

- (a) Move the power switch to the "OFF" position.
- (b) Loosen the screws with a Phillips/ cross-head screwdriver(not included).
- (c) Lift the cover; and insert 6x1.5V AA batteries (not included). Follow the polarity directions (See diagram).
- (d) Close the battery cover and replace the screws.



RIM

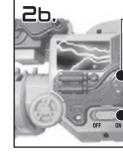

#### 3.Loading the Ammo Belt

- (c) Securely close the Breech Cover.

#### 4.Power On

(b) Press down on Trigger to fire darts.

### **Trouble Shooting:**

## **Problem**

**Pressed Trigger:** No Response

Pressed Trigger; Motor moves; but does not fire

Darts travel only a short distant

Gatling jams during firing


After forcibly stopp front barrel from sp the Gatling does no function


Ammo Belt does no


- Battery Safety Informati
  Batteries are to be inse the product and batter
- Do not mix old and nev
- Do not mix alkaline, sta
  Only batteries of the sa
- Do not use RECHARGEA Non-rechargeable batt
  Rechargeable batteries
- product before being cl
  Rechargeable batteries adult supervision (if recommendation)
- Always remove exhaust
  Remove batteries from
  The supply terminals at
  Batteries may explode
- Battery/Batteries shou
  Dispose of batteries res
- AA/LR6 Batteries may p Keep away from young



Item Description: Version: Version: 6200S-AU Scorpion_IM			Pkg Size: Pkg Type:	210mmW x 297mmH /	Purposes/Remark: Kmart ver.	
Client:	Brand: DZ	Supplier:	File Name:	6200S-AU Scorpion_IM_02-08-24		
	Responsible by:		Prepared by:	Kenji Approved by:	Issue Date:	02-08-2024

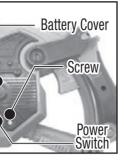

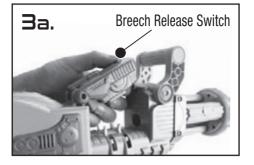

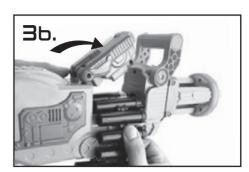

(a) Pull back on the Release Switch on top of the Breech Cover. Lift the Breech Cover. Drop in the ammo belt and position the dummy cartridge (with the arrow) directly in line with the firing nozzle. (b) Ensure that the directional arrow is facing forward.

(a) Push the Power Switch to the "ON" position.

y.	
	Suggestion
	•Check that batteries have been inserted in the correct polarity.
	•Check that the Darts have been inserted all the way to the rear of the Cartridges.
ice	<ul> <li>Replace the batteries.</li> <li>Rapid depressing and releasing of the trigger does not give sufficient time for the motors to spin. Hold down the trigger for a longer period.</li> </ul>
	<ul> <li>Turn the Power Switch to the "OFF" position.</li> <li>Lift Breech Cover.</li> <li>Remove Ammo Belt by lifting the rear end upwards. Retrieve jammed Dart. (Jerking the Ammo Belt sideways will damage the Darts.)</li> <li>Reload and replace Ammo Belt.</li> </ul>
ping the spinning, ot	•This is a built-in safety feature. Release Trigger. Move Power Switch to "OFF" position. Wait 30 seconds for the motor to cool down. Move Power Switch to "ON" position. Resume play.
ot rotate	•Check that Ammo Belt has been positioned correctly in the drive gear.
tion:	WARNING:

<ul> <li>s are only to be charged under movable).</li> <li>ted or dead batteries from the product.</li> <li>the product before storage.</li> <li>re not to be short-circuited.</li> <li>or leak if misused.</li> <li>Id be installed by an adult only.</li> <li>sponsibly. Do not dispose of in fire.</li> <li>present a choking hazard.</li> <li>children.</li> </ul> <ul> <li>Please keep packaging for future reference.</li> </ul> <ul> <li>MADE IN CHINA</li> <li>Customer Service: Kmart AU: 1800 124 125 Kmart NZ: 0800 945 995 Target AU: 1300 753 567 K: 43389094   T: 69581311</li> </ul>	ion: erted with the correct polarity and always follow y manufacturers' instructions. v batteries. andard (carbon-zinc), or rechargeable batteries. ame equivalent type as recommended are to be used. BLE batteries, unless specified. eries are not to be recharged. s are to be removed from the harged (if removable).	<ul> <li>Do not modify this product or any of the included components.</li> <li>Do not use projectiles other than those supplied with this product.</li> <li>Colours and contents may vary from items shown.</li> <li>Remove all packaging before giving this product to your child.</li> </ul>			
TRADEMARKS OF PRIME TIME TOYS LTD. INTERNATIONAL PATENTS AND OTHER	movable). ted or dead batteries from the product. t he product before storage. re not to be short-circuited. or leak if misused. Id be installed by an adult only. sponsibly. Do not dispose of in fire. oresent a choking hazard.	<b>6 X AA</b> <b>REQUIRES 6 X 1.5V AA BATTERIES</b> (NOT INCLUDED). BLASTERS AND DARTS DESIGNED BY DAR	MADE IN CHINA Customer Service: Kmart AU: 1800 124 125 Kmart NZ: 0800 945 995 Target AU: 1300 753 567 K: 43389094   T: 69581311 IT ZONE®, DART ZONE® ARE REGISTERED	KM-6200S-AU-0124	