

Size: A4



Item Description:
6400-AU_V-Twin_IM

Version:

 
Supplier:

Pkg Size:
Pkg Type:
File Name:

210mmW x 297mmH
/
6400-AU_V-Twin_IM_02-09-24


Purposes/Remark:
Kmart ver.

Responsible by: _____ Prepared by: **Kenji** Approved by: _____ Issue Date: **02-09-2024**

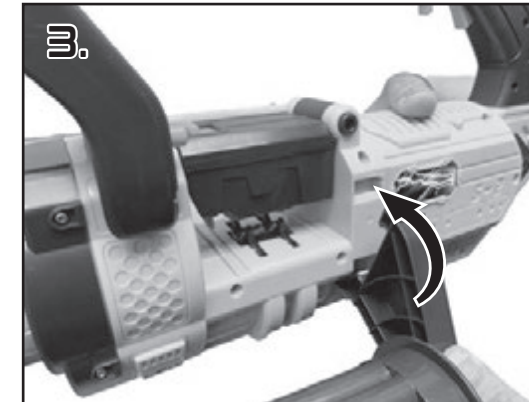

3. Installing/Removing the Storage Drums

 - With the Drums facing forward, align the lower arm with the lower catch (see diagram).
- Push upper arm forward to lock the Drum into place. Ensure that both Drums have been installed.
- To remove, push the Drum downwards.

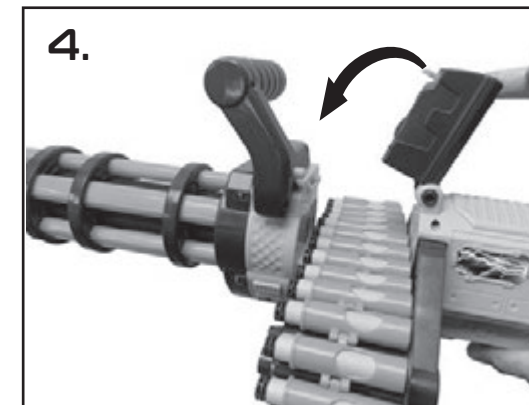

4. Installing the Cartridge Belt

- (a) Push back the Breech Lock, and lift the Breech Cover.
- (b) Slide Cartridge Belt over the front of launcher and loop over the two Drums.
- (c) Close Breech Cover (see diagram).

5. Start to Play

- Hold down the Rev-Trigger and press the Trigger to launch your darts.
- Each pull of the Trigger will launch a single dart.
- Holding down the Trigger continuously will launch all your darts.

Trouble Shooting:

Problem	Suggestion
Pressed Trigger; No Response	<ul style="list-style-type: none"> •Check that batteries have been inserted in the correct polarity. •Check that the Breech cover has been locked in place.
Pressed Trigger; Motor moves; but does not fire	<ul style="list-style-type: none"> •Check that the Darts have been inserted all the way to the rear of the Cartridges.
Darts travel only a short distance	<ul style="list-style-type: none"> •Replace the batteries •Rapid depressing and releasing the Trigger does not give sufficient time for the motors to spin. Hold down the Trigger for a longer period of time.
Gatling jams during firing	<ul style="list-style-type: none"> •Lift Breech Cover. •Remove Ammo Belt by lifting the rear end upwards. Retrieve jammed Dart. •Reload and replace Ammo Belt.
After forcibly stopping the front barrel from spinning, the Gatling does not function	<ul style="list-style-type: none"> •This is a built-in safety feature. Release Trigger. Wait 1 minute for the motors to cool down. Resume play.
Ammo Belt does not rotate	<ul style="list-style-type: none"> •Check that Ammo Belt has been positioned correctly in the drive gear.

Battery Safety Information:

- Batteries are to be inserted with the correct polarity and always follow the product and battery manufacturers' instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only batteries of the same equivalent type as recommended are to be used.
- Do not use RECHARGEABLE batteries, unless specified.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before storage.
- The supply terminals are not to be short-circuited.
- Batteries may explode or leak if misused.
- Battery/Batteries should be installed by an adult only.
- Dispose of batteries responsibly. Do not dispose of in fire.
- AA/LR6 Batteries may present a choking hazard.
- Keep away from young children.

WARNING:

- Not suitable for children under 3 years of age. Small Parts. Choking Hazard.
- Do not aim at eyes or face.
- Do not launch at self or animals.
- Do not look directly into the barrel.
- Do not use damaged or modified darts.
- Do not modify this product or any of the included components.
- Do not use projectiles other than those supplied with this product.
- Colours and contents may vary from items shown.
- Remove all packaging before giving this product to your child.
- Please keep packaging for future reference.

 
MADE IN CHINA

Customer Service:

Kmart AU: 1800 124 125



Kmart NZ: 0800 945 995

Target AU: 1300 753 567

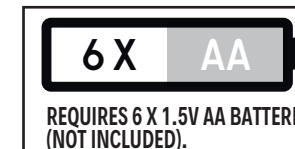


BLASTERS AND DARTS DESIGNED BY DART ZONE®, DART ZONE®, V-TWIN® ARE REGISTERED TRADEMARKS OF PRIME TIME TOYS LTD. INTERNATIONAL PATENTS AND OTHER PATENTS PENDING. ALL RIGHTS RESERVED.

  KM-6400-AU-0124

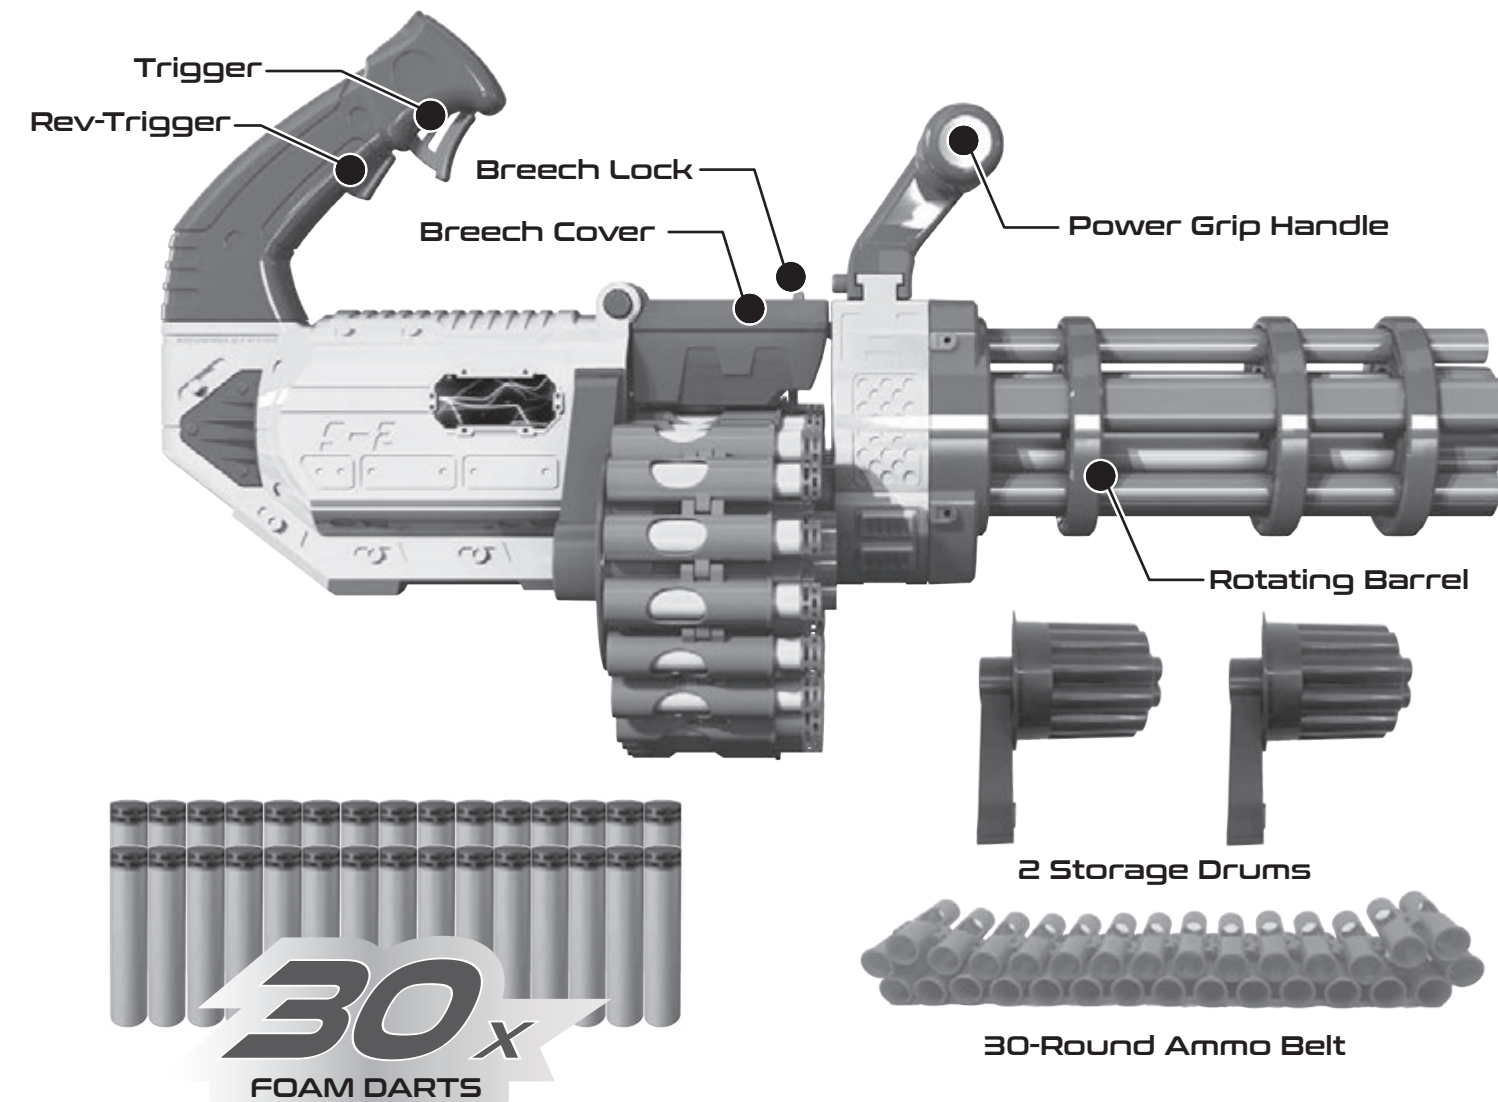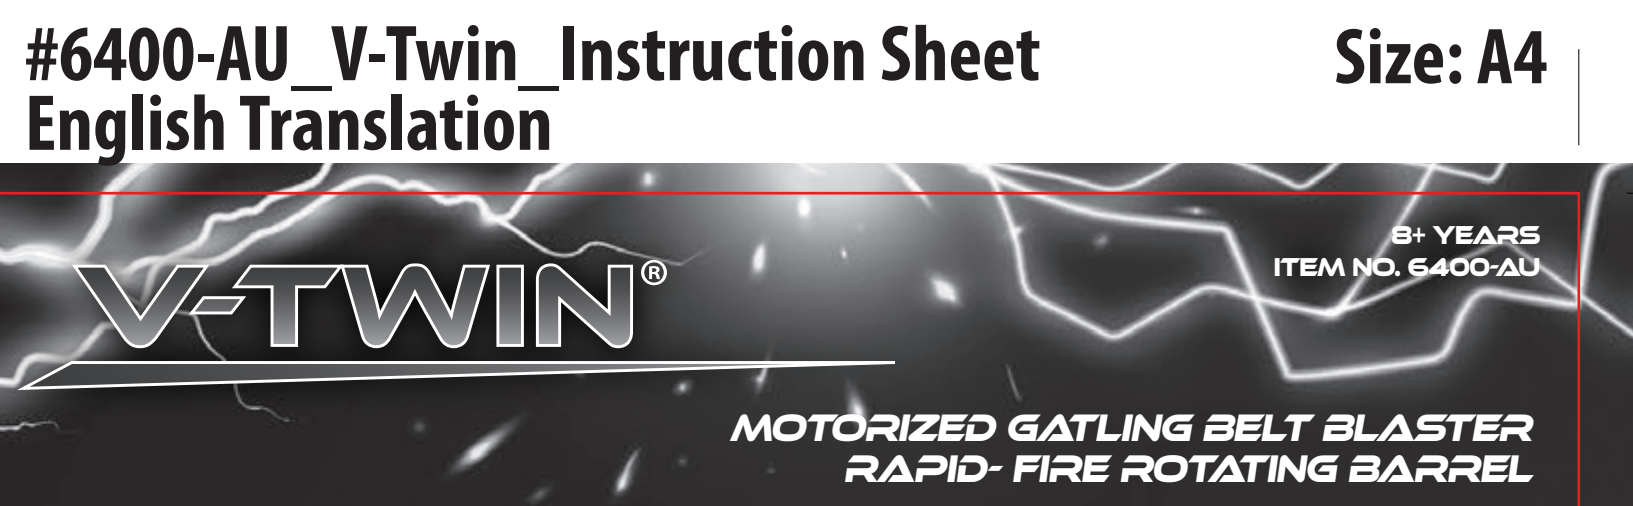


Set-up Instructions:

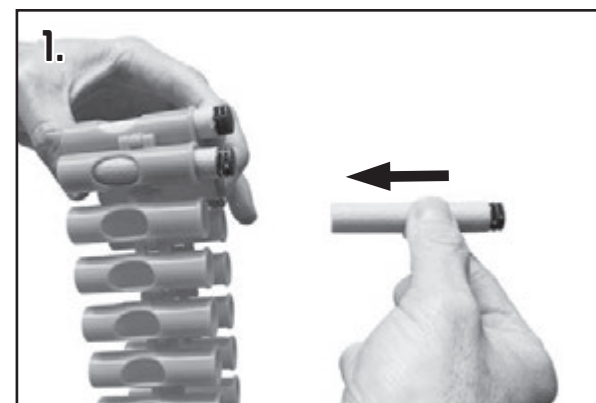 

1.Loading Darts

 - Your ammo belt comes in a loop and has 30 cartridges.
- Insert the darts into the open/empty cartridges. Ensure that each foam dart has been pushed in all the way.

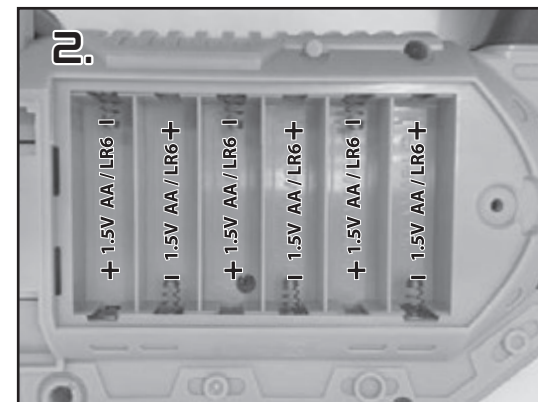

2.Loading Batteries

- (a) Loosen the Battery Cover screws with a Phillips/ cross-head screwdriver (not included).
- (b) Lift the Battery Cover; and insert 6 x 1.5V AA batteries (not included). Follow the polarity directions (see diagram).
- (c) Close the Battery Cover and replace the screws.

✓ P2

A4
P1

P2

P1