

# 14x20cm说明书


**anko**

## Claw Machine Instruction Manual

**3+**  
years

### 2 Power Supply Modes

Tips: Remove the batteries when using USB cable!

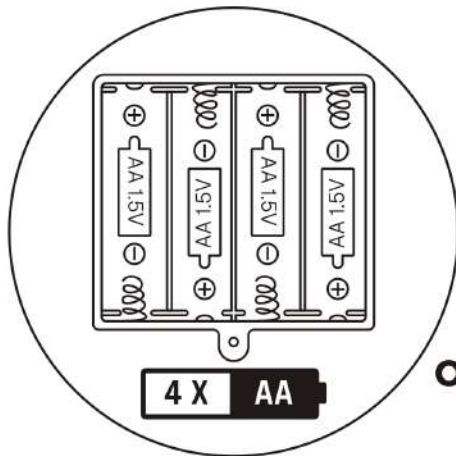

Requires 4 x 1.5V AA batteries  
(NOT INCLUDED).

or



Powered by USB cable  
(INCLUDED)



Switch On  
and Off