


anko

Night Light With White Noise Machine Instruction Manual

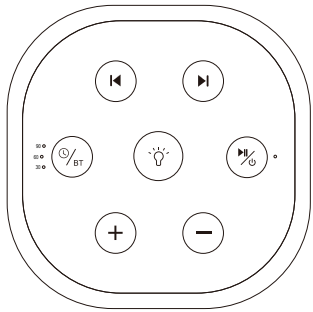

The illustrations shown in this manual are for reference only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or feature without prior notice.


**IMPORTANT! PLEASE READ CAREFULLY BEFORE USE
AND KEEP FOR FUTURE REFERENCE.**

WARNING:

1. To avoid damage, do not disassemble or attempt to repair the product.
2. Do not place this product near a heat source or in direct sunlight. Keep away from water and any other liquids. Damage may result.
3. Do not store or use in temperatures below 0°C or above 45°C.
4. Children are to be supervised to ensure that they do not play with the product.
5. Wipe the surface clean with a soft slightly damp cloth. Do not wipe or clean using a corrosive detergent.
6. The supplied USB-C charging cable is to be inserted into a standard USB power socket rated at DC 5V 350mA specification.
7. Please contact the seller if there are any issues with the product.

1

Product components:

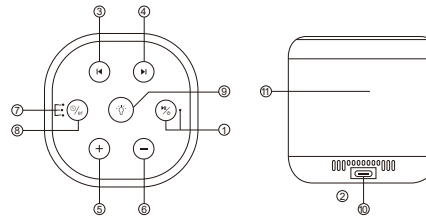

① On/Off Button and Power Indicator Light	⑥ Volume Down
② Reset button (at base)	⑦ Timer Indicator Light
③ Previous Sound	⑧ Bluetooth and Timer Button
④ Next Sound	⑨ Night Light and Brightness Button
⑤ Volume Up	⑩ Type-C Charging Port
	⑪ Light Area

Product specifications:

Dynamic Current: Light off <200mA Light on<400mA
Quiescent Current: 20uA
Dimensions: 84mm×84mm×81mm
Speaker: ΦA=40mm 4 Ω 3 W
Power supply: Input DC 5V/350mA
Rechargeable lithium battery capacity: 1200mAh (non-replaceable)
Accessories package: USB-C charging cable x 1, User manual x 1
Working distance: 10 metres
Fully charged operating time: approximately 20 hours
Fully charged charging time: approximately 3 - 4 hours

2

Product features:

1. 34 sounds including animal and nature sounds
2. Timer Function
3. Memory Function: Recording Last Use Status
(Volume level, Sound, Light colour, Turn-off time)

How to use:

1. Power on: Long press (⏻) for 3 seconds.
2. Play and select sound: Power light ① is on, short-press (⏮) to pause, press (⏮) (⏭) to choose previous or next sounds.
3. Volume: There are 30 volume levels. Press (⏮) (⏭) to increase or decrease the volume when it's playing. Long-press (⏮) (⏭) to rapidly increase or decrease the volume.
4. Lighting Function:
Short Press (💡) to turn the light on/off.
Hold (💡) for 2-4 seconds to rotate through the 3 light brightness levels.
Double-click (💡) to rotate through the 9 different colour modes.
Colour Mode Sequence:
Solid white light → solid red light → solid dark blue light → solid green light → solid purple light → solid yellow light → solid light blue light → soft colour rotation → solid colour rotation.

3

5. Timer function: To activate the timer function, long-press (⏻) button to set 1 of 3 timer selections. The machine will automatically switch off once the time has been reached.
As shown below:
LED 1 (⏻) on, 30 minute timer selection
LED 2 (⏻) on, 60 minute timer selection
LED 3 (⏻) on, 90 minute timer selection
6. Turn off: When the machine is on, long press (⏻) for 3 seconds to turn off the machine.
7. Battery charge: Use the Type C cable provided to connect the power adapter (not included). Plug the cable into the charging port ⑩ to charge the internal lithium battery.
8. Power indicator status:
Blue light: Indicates power is ON and NOT in charging mode.
Red Light: Indicates power is OFF and IN charging mode.
Flashing Red Light: Indicates power is ON and battery is low.
Light Off: Indicates power is OFF or battery is fully charged after charging.
Purple light: Indicates machine is ON and charging.
9. Memory function: Retains last use settings information (volume level etc). The last memory settings will be used by default. Sudden power failure will disable this function.
10. Bluetooth function - speaker mode: Double click (⏻) to enter the Bluetooth mode. Switch on Bluetooth function on your mobile phone. Search for machine model "anko43391738". Click the model number and the status will change from "Not Connected" to "Connected".

4

Trouble shooting :

1. If unable to charge, check that the power supply is correctly connected.
2. If unable to play sound, check:
a) that the device is powered ON.
b) that the device is paired via Bluetooth to your personal device.
c) that the battery is sufficiently charged.
3. If unable to play sound/music from mobile phone (or other device) via Bluetooth function,
a) check that the machine is connected to the correct device.
b) If machine is connecting to a different device, disconnect from the machine on that device first, then try reconnecting with preferred device.
4. Alternatively, attempt to reset the machine using the Reset button.

12 Month Warranty

Thank you for your purchase.
Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
We will provide you with your choice of a refund, repair (where

5

possible) or exchange (availability dependent) of this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

For any difficulties with your product, please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity from which you purchased this item. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

12 month warranty: The warranty period shall be subject to the receipt date.

The following conditions are not included in the warranty:
Damage due to improper handling, storage or maintenance.
The receipt model is inconsistent with the product model.

6

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

K: 43-391-738 | T: 69-303-685
MADE IN CHINA