

尺寸: 980x200mm

材质: 108克铜版纸

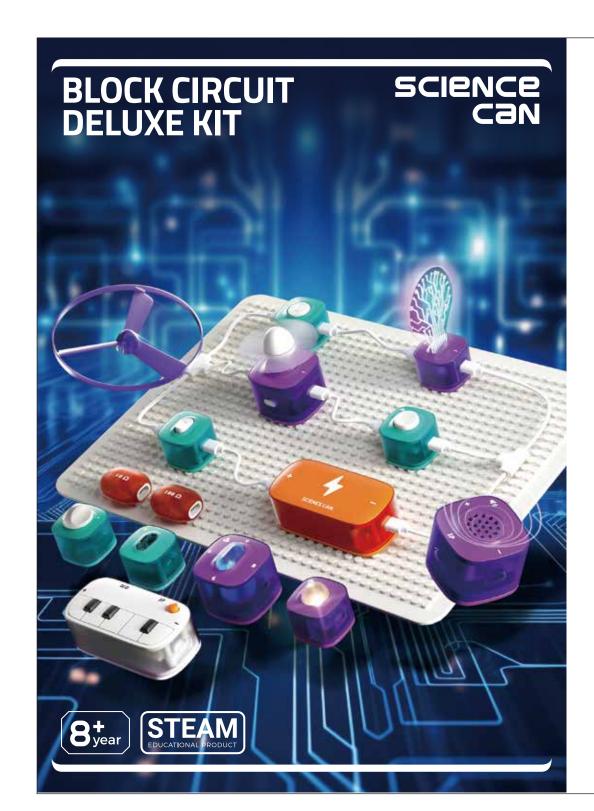

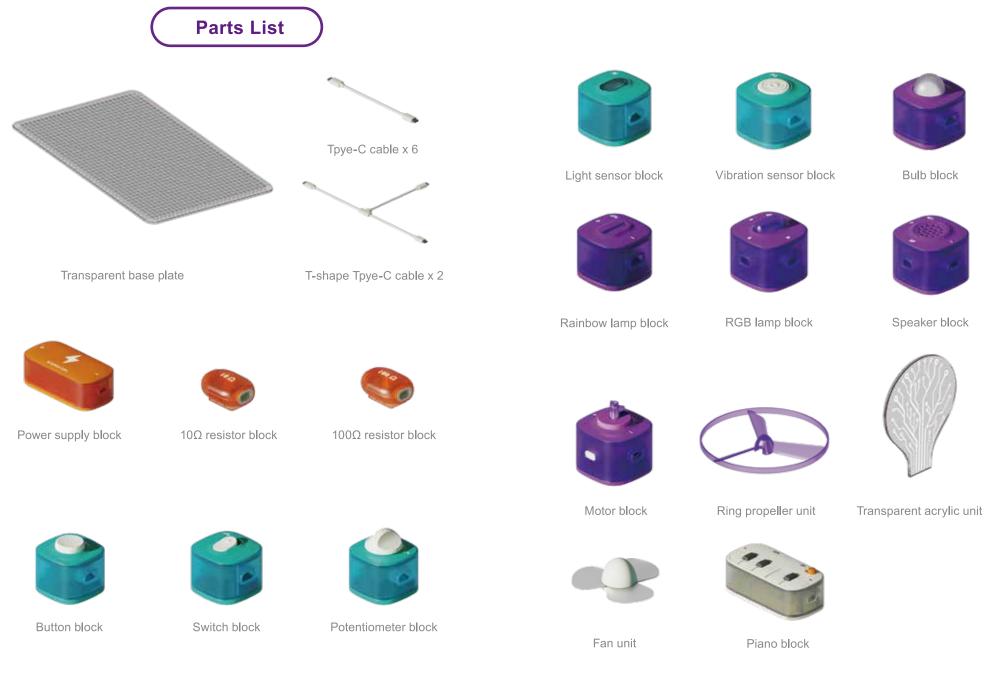

## Warnings & Cautions

▲ WARNING CHOKING HAZARD-SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: ALL PACKAGING MATERIALS, SUCH AS TAPES, PLASTIC SHEETS, BINDING WIRES AND LABELS, ARE NOT PART OF THE PRODUCT AND ARE NOT SUITABLE FOR CHILDREN TO PLAY WITH. FOR THE SAFETY OF YOUR CHILD, PLEASE HANDLE PACKAGING MATERIALS PROPERLY. THE USER MANUAL CONTAINS IMPORTANT INFORMATION, PLEASE KEEP IT FOR LATER USE.

#### CAUTION: ADULT SUPERVISION REQUIRED.

THE PRODUCT IS INTENDED FOR CHILDREN AGED 8 AND ABOVE.
 WRONG WIRING OR SHORT CIRCUIT MAY CAUSE THE PRODUCT TO MALFUNCTION.
 IMPROPER USE, SUCH AS SOAKING AND HEATING, CAN DISABLE THE INTERNAL PROTECTIVE CIRCUIT OR CAUSE AN ABNORMAL REACTION, RESULTING IN OVERHEATING, SMOKING, DEFORMATION, OR COMBUSTION.
 NEVER SUBSTITUTE PARTS.


5. DO NOT DISASSEMBLE OR MODIFY ANY ELECTRONIC BLOCKS, ANY MODIFICATION MAY CAUSE DAMAGE OR OVERHEATING OF THE BLOCK.

6. STOP USING THIS PRODUCT IF THERE IS ANY DAMAGE OR BROKEN PARTS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+AND-). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES.NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT.RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED.BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY.DO NO DISPOSE OF IN FIRE.

### **Battery Installation**

1.Make sure the switch is off, open the battery box at the bottom of the base with a screwdriver (not included).2.Insert three new 1.5V AA batteries (not included) into the slot with the correct polarity (+/-).3.Put on the cover and tighten the screw.

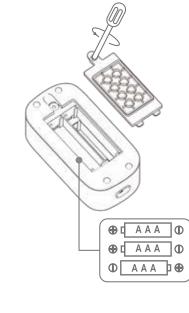

### Maintenance

Wipe the outside of the main machine with a soft dry cloth to keep the machine clean.
 Avoid direct sunlight and keep away from any heat sources.
 Remove the battery, when not in use for a long period of time.
 Avoid confiding with hard objects and disassembling.
 Do not immerse the main machine in water and avoid damp environments.

# **Common Trouble Shooting**

If for any reason the host stops responding, please follow these steps:

1. Switch off the host.

2. Remove the battery to interrupt the power supply.

3. Leave the machine for several minutes and then reload the battery.

4. Reboot and turn on.5. If the machine is still not working, please install new batteries.

