
2 IN 1 TENNIS & SOCCER

Key code: 43403608

WARNING


- . CHOKING HAZARD, small parts. Not for children under 3 years.
- . Adult assembly required.
- . Do not aim at eyes or faces.

Parts List

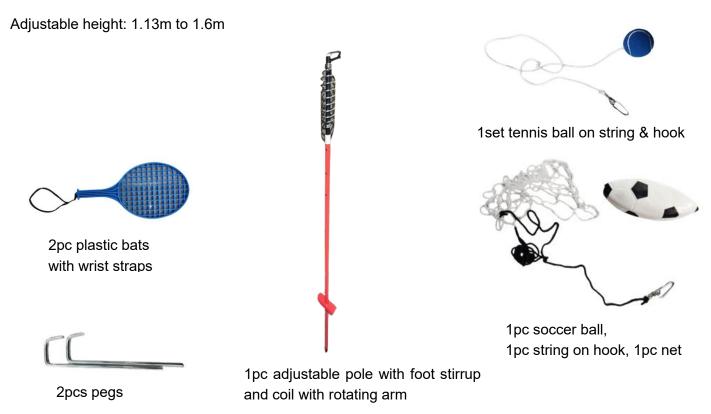

ASSEMBLY INSTRUCTIONS

- **Step 1:** Choose a flat playing area.
- Step 2: Use foot pressure only to secure spiked end of base pole into the ground.
- Step 3: Insert the top pole into the base pole. And align to required height (refer to below diagram).

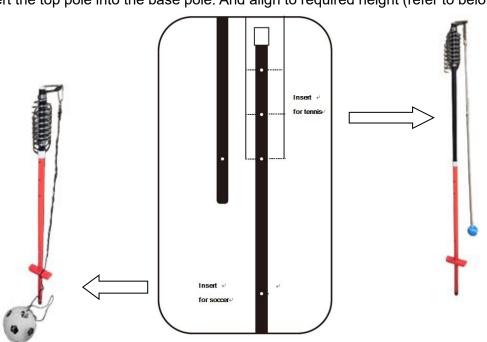

Step 4: Take out soccer ball parts set, then hand pump the ball. Put the inflated soccer into white net, knot the net opening tightly by black string.



Step 5: Attach the ball assembly to either the swivel attachment at the top of the pole or halfway up the middle of the coil attachment.

PRODUCT CARE

- . Check all components before assembly and inform the supplier / manufacturer if any are damaged.
- . Do not use hammer to insert base pole into ground foot pressure will be sufficient.
- . In case the soccer ball flying out when playing, knot the net opening tightly by black string before starting.
- . Always store set in the color box provided out of sun and away from moisture.
- . Do not use in wet weather conditions.
- . Check ball assembly regularly ensuring clip attachment and string are in good condition, if any of the components appear damaged or worn, do not use.

MADE IN CHINA

net, knot the net opening (Image circled area) tightly by black string.