

anko

K: 43413454 | T: 69481024 (Model: JLR-78990)

Bluetooth Turntable

Instruction Manual

Notice:

Please read user manual carefully before any operations, and keep it for records.


Package includes:

- 1×Bluetooth turntable
- 1×Adaptor
- 1×User Manual

Specifications:

- Product size: 35*25*12cm
- Adaptor input: 100-240V~ 50/60Hz
- Speaker output: 2x 0.4W
- Powered by adaptor (included)



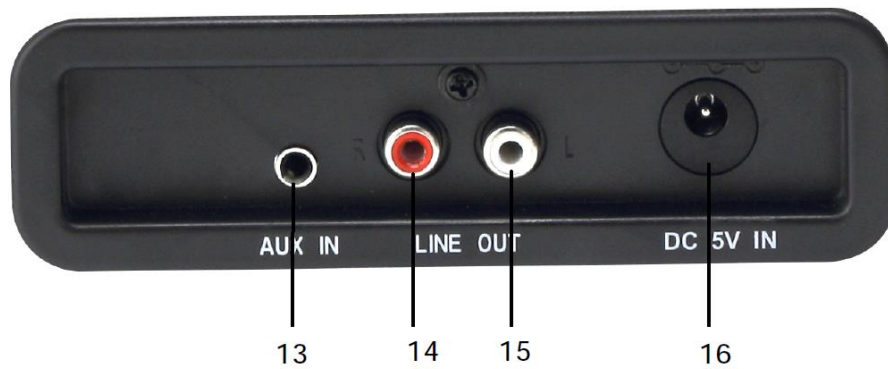

- 1- Lock catch
- 2- Protect corner
- 3- dust cover
- 4- Record adaptor - Use this when playing 7" disc
- 5- Tone arm cue lever
- 6- Auto stop control
- 7- Bluetooth LED indicator
- 8- BT / PH switch – for switching between Bluetooth mode (BT) and Turntable mode (PH)
- 9- Power & Volume Control knob
- 10- Headphone jack
- 11- Cartridge & Stylus
- 12- Speaker
- 13- Aux in
- 14- Line out R channel
- 15- Line out L channel
- 16- DC power jack

Note: The turntable should be powered by the provided adaptor only.

Playing with Vinyl Disc

1. Remove the protective cap on cartridge and stylus; place the vinyl disc turntable.
2. Choose the desired playing speed using the speed selection switch between 33.3 ,45 and 78 rpm.
3. Switch (8) to PH mode and turn on the player
4. Unlock the tonearm and raise it slowly
5. Gently place the cartridge and stylus vertically on the disc, the turntable will start playing.
6. Auto Stop – ON: The turntable will stop automatically when it has finished playing
Auto Stop – OFF: The turntable will keep revolving.
7. Lift tonearm and place it on the tonearm rest after use.
8. Place the protective cap on the stylus and lock the tonearm rest.

Bluetooth Playing

1. Switch (8) to BT mode and turn on the player.
2. Choose “anko43413454” on your Bluetooth device to connect the player
3. When successfully paired and connected, a beep will issue from the unit.
4. Rotate volume button to adjust the volume.

After initial pairing, the unit will stay paired unless unpaired manually by the user. If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.

NOTE:

1. Only one Bluetooth device can be connected to the speakers at one time.
2. Should your device become unpaired or you are not able to connect it, repeat the above steps.

AUX In

The device can play through 3.5mm output.

Note: 3.5mm aux cable not provided.

AUX Out

The device can play through 3.5mm Headphone input.

Note: 3.5mm Headphone not provided.

45 rpm Adapter / 7 Inch Record Adapter

Put this record adaptor on the turntable for playing 7” vinyl disc

Connecting to External Speaker / Amplifier

You can connect turntable to your existing Hi-Fi system or speaker. Connect the audio plugs to the line input on your mixer or amplifier using an RCA cable (not supplied)

-Red plug into R/H channel input

-White plug into L/H channel input

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in

accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us