


anko

Thermal Print Camera Instruction Manual




K: 434237431 | T: 69607592
K: 434237501 | T: 69607660
K: 434237671 | T: 69607684
Model: JLR-79282

1. Product specification:
Product size: 100*40*95mm
Screen: 2.4 inches
Front Camera: 0.3MP
Rear Camera: 0.3MP
TF Card: Max 32GB
Built-in Battery: 800mAh, 7.4V
Printed Photo size: 57*30 mm [around 50 photos per roll in K: 43-423-804 | T: 69-6076-53(sold separately)]
Video format: AVI
Photo format: .jpg
Music format: .mp3

2. Product features:
2.4 inch screen
Dual lenses (Front: 8*5.2mm; Rear: 13*12.8 mm)
Thermal print technology
Video, music and game multi-functions built in

3. Icons & Buttons Introduction:



1. Photo/OK/Play/Pause button [OK]
(Short press) Photo/OK/Play/Pause.
(Short press) In photo mode, one key to take a photo or print after taking a photo.
(Short press) In video mode, short press to record/save video.

2. Up button [▲]
(Short press) In photo mode, short press up to select burst shooting / time lapse/ filters/ frames/ stickers, etc.
(Long press) In photo mode, long press the lens to zoom in.
(Short press) In mp3 mode, switch to previous song.
(Long press) In mp3 mode, long press Volume +.
(Short press) In game mode, up.
(Short press) In settings mode, scroll up to select submenu.

3. Down button [▼]
(Short press) In photo mode, short press down to select burst shooting /time lapse/ filters/ frames/ stickers, etc.
(Long press) In photo mode, long press the lens to zoom out.(Short press) In file browsing mode, scroll down to view previously captured images or videos.
(Short press) In mp3 mode, switch to next song.
(Long press) In mp3 mode, long press Volume -.
(Short press) In game mode, down.
(Short press) In settings mode, scroll down to select submenu.


4. Back button [↶]
(Short press): Return to main manual

5. Setting menu shortcut button [⊙]
(Short press) Under the boot state, you can enter the settings menu with one click on most interfaces, very convenient and quick.
(Short press) In file browsing mode, short press to select [Delete Current] or [Delete All] to delete files.
(Short press) In game mode, left.

6. File browsing shortcut button[M]
(Short press) Under the boot state, you can enter the file browsing to view videos or photos taken previously with one click on most interfaces, very convenient and quick.
Note: short pressing [M] in music, game, and setting modes cannot enter file browsing with one click.
(Short press) In game mode, right.
(Short press) In file browsing mode, short press [M] to enter the setting menu.

7. Power button [⏻]
(Long press) Power on/off
(Short press) Screen on/off.

4. Ports & indicator introduction:

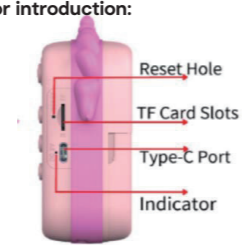

Reset_Hole
TF Card Slots
Type-C Port
Indicator

Reset port: When the screen becomes blurred, crash or other abnormal issues, poking the "Reset" hole with a needle can directly dial the hard power-on button to restart. Restarting this machine will restore it to its default settings, please rest assured that no files will be deleted.
TF Card Slots: 32GB memory card has been inserted into the camera, supports 8GB-64GB memory card (needs to be purchased separately)
Type-C port: Charge or data transmission.
Indicator light: Red light on when charging, red light off when fully charged. It takes around 3hrs to charge full

5. How to Use
5.1. Insert memory card

TIPS:
A 32GB-TF memory card has been inserted into the camera to record and store your photos and videos. It supports up to 64GB TF memory card. (Need to be purchased separately)
Please plug the TF card as picture showing. Insert the TF card in incorrect direction could damage the TF card slot
It is maximum 3 minutes per video; will keep recording until TF Card is fully recorded.
If there is no TF card, it can also take photos to print or videos but it can't save.

5.2. Install Printing Paper
1. Open the paper slot
2. Install the print paper
3. Place the paper face down
4. Close the paper slot. (Be sure to leave an extra 1 inch of paper)

WARNING!
MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DONOT PUT INTO THE MOUTH.
ADULT SUPERVISION REQUIRED AT ALL TIMES.

5.3. Power on
Long press [⏻]: power on/off
After powering on, the camera will immediately enter the photo mode, short press the [↶] button to back the main menu page if no operation to the camera.
The screen will automatically turn off after period of time. You can enter [Settings]-[Screen savers] to set the time to automatically turn off the screen.
By default, the camera will automatically shut down after 5 mins. You can enter [Settings]-[Auto power off] to set the automatic shutdown time.

5.4. Access to the setting menu
After powering on, short press the [⊙] shortcut button to directly enter the setting menu.
Short press [▲] or [▼] keys to select up or down.
Short press [OK] key to enter/save.
Short press [↶] key to return.
When recording a video, the [OK] button will be disabled and cannot enter the setting menu with one click.

5.5. Enter the Setting: Set language
After entering the setting menu:
Short press [↶] key to slide down.
Short press the [OK] key to enter [Language].
Short press the [↶] key to scroll down, find your native language and press the [OK] key to save it.

5.6. Enter the Setting: Set date and time
After entering the setting menu:
Short press [↶] key to slide down, short press the [OK] key to enter [Date/Time].
Short press [▲] or [▼] key to increase or decrease the value, short press [OK] key to switch [Year/Month/Day] and [Hour/Minute/Second].
Finally, short press the [OK] key to save.

5.7. Enter the Setting: Format memory card

Formatting will delete all files, please make sure to back up your data.
All pictures and videos will be cleared after formatting. Please be careful.

5.8. Setting: Set print mode & print density

2 Print modes: gray print and dot print
7 Levels of print density: 1-7

Camera default:
Print density: 5
Print modes: gray print
Please try the appropriate print mode and print density according to your shooting needs.

5.9. Settings: print after capture, button sound, date stamp, etc

Print after capture	On: print the photo after shooting Off: no photo would be print after shooting
Print density	1 to 7 (Total 7 options): 1 refers to weak contrast, 7 refers to strong contrast. When the concentration setting option is small, the contrast of the printed image is weak. When the selection value is large, the contrast is strong. Please choose reasonably according to your needs.

6. Photo/Print After Photo
6.1. Enter photo mode

Print modes	Gray Print technology Dot Print technology
Delay Print	On: It will wait for 3 seconds to print Off: it will print directly
Image quality	Sets the quality of photos. IM, 3M, 5M, 8M, 12M, 20M, 60M
Video resolution	Sets the resolution of video recording. 1080P, it will show FHD on video screen. 720P, it will show HD on video screen
Date stamp	Enabled to display the time on photos
Language	Multiple languages are available
Beep/Button Sound	On: the key tone is on Off: the key tone is off
Screen savers	Set the screen off time: Off: Screen will be on all the time 3mins: Screen will be off after 3mins without operation 5mins: Screen will be off after 5mins without operation 10mins: Screen will be off after 10mins without operation
Auto power off	Set the automatic shutdown time Off: will not be off automatically 3mins: Camera will be off after 3mins without operation 5mins: Camera will be off after 5mins without operation
Format	Clear all data NOTE All data will be cleared and please be careful to set
Date/time	Set the machine time
Default setting	Reset
Version	View the machine version number

6.2. Photo/Print
After entering the photo mode, long press the [▲]/[▼] buttons to zoom in/out the lens
After entering photo mode:
Lens zoom in/out: long press the [▲]/[▼] buttons.
Frames/stickers/filters/picture effects: short press the [▲]/[▼] buttons to switch.
In photo mode, short press the [M] button to enter file browsing to view previously captured photos or videos.
You can short press the [OK] key to enter the setting menu to select print density and print mode.

6.3. Lens zoom in/out
After entering the photo mode, long press the [▲]/[▼] buttons to zoom in/out the lens
After entering photo mode:
Lens zoom in/out: long press the [▲]/[▼] buttons.
In video mode, zooming in/out of the lens are not supported.

6.4. Frames/stickers/filters/picture effects
After entering the photo mode, short press the [▲]/[▼] buttons to select frames/ stickers/ filters/ pictures effects
After entering photo mode:
Filters: 5
Picture effects: 4
Frames + Stickers: 27
Frames/ stickers/ filters/ picture effects: short press the [▲]/[▼] buttons to switch.
In video mode, selecting photo frames/ stickers/ filters/ picture effects are not supported.

6.5. Time-lapse/Burst shooting
After entering photo mode:
Time-lapse: After this logo [📷] appears on the screen, short press the [OK] key to achieve time-lapse shooting 3S, 5S, 10S.
Burst shooting: After this logo [📷] appears on the screen, short press the [OK] key to achieve burst shooting of 3pic, 5pic, time-lapse 5S burst shooting 3pic.
Note: in video mode, time-lapse/burst shooting are not supported.

7. Video Recording
7.1 Enter video mode
After switching on, short press [↶] to return to the main menu, and short press [OK] key to enter the video mode

7.2 Record/ Save Video
Warning: Please insert TF card before use
It is maximum 3 minutes per video; will keep recording until TF Card is fully recorded.
After entering video mode, short press the [OK] button to record or save video
After entering video mode, short press the [M] button to enter file browsing to view previously captured photos or videos.
Switch between front and rear cameras: Long press the [OK] button when not recording a video.
In video mode, selecting photo frames/stickers/filters/ picture effects are not supported.
In video mode, zooming in/out of the lens are not supported.
When recording a video, short press the [OK] key cannot enter the settings with one click.
When recording a video, short press the [M] button will exit video recording and automatically enter file browsing mode. The video just recorded will be automatically saved in the file browsing menu. Please operate with caution.
When recording a video, short press the [↶] button will exit video recording, and the video just recorded will be automatically saved in the file browsing menu. Please operate with caution.

8. Browse/Play/Delete Files
8.1 Access file browse - View photos/play videos
Method - 1:
After powering on, short press [↶] key to return to the main menu, short press [OK] key to enter file browsing
Method - 2:
After powering on, in photo/video mode, short press the [M] shortcut key to enter file browsing
After entering file browsing:
Short press the [OK] key to play/pause video.
Short press the [OK] key to print previously taken photos.
Short press the [▲] or [▼] buttons to browse files up or down.
Short press the [▲] or [▼] buttons to browse files up or down.

8.2 Delete current/delete all files
When browsing files, short press the [OK] button, select [Delete Current] and [Delete All] to delete files

9.2 Print the photos taken earlier
When browsing photos, short press the [OK] key to print the JPG photos you have taken
After entering file browsing:
Short press the [OK] key to print previously taken photos.

10.2 How to import songs to the memory card
Pull out the memory card, insert it into the card reader (need to be purchased separately), and then connect it to the computer.
After a few seconds, the computer will recognize the memory card, and [U disk] will appear in the lower right corner of the computer desktop. Enter [U disk] and select the MP3 folder.
Download the music in MP3 format to your computer, then copy and paste it into the MP3 folder on the memory card. After the songs are successfully imported to the memory card, insert it into your camera and start enjoying the music!

Warm Tips:
Connecting computer to transfer files:
Recommended to use card reader (need to purchase separately).
Use data cable to connect camera and computer
Do not disconnect during music transfer.
The camera only supports playing music in MP3 format.
The camera has no internal memory, only card memory.
The camera does not support Bluetooth, Wifi and APP functions.
Insert the TF card into a USB card reader (need to be purchased separately) and connect it to the computer to transfer music files.

11. Puzzle Games
11.1 Access to the game
After switching on, short press [↶] to return to the main menu, and short press [OK] key to enter the game
After entering the game:
Short press [▲] and [▼] keys to select games.
Short press [OK] key to enter the game.
Up/Down keys [▲]/[▼].
Left/Right Key: [↶]/[↷].
[↶] key: Exit the game.

11.2 Educational game
Tetris
Push Box
Snake
Maze

Power supply
When camera is automatically shut down due to low voltage or battery, it has to use adapter to charge before use.
The power adapter should use the specified 5V / 1A, and other types of adapters may conflict with this product.
Regular charging the product for every month is to ensure the life of the product, while pro-longed period of idle or low battery level may lead to battery life issue.
Only use the charging cable provided to charge the camera
Built-in battery is not removable and replaceable, if damaged should contact service and repair.
Guardians should keep watch over children while they play

Precautions for Printing:
1. To ensure the safety of your children, only adults can change the paper roll and need to ensure that the paper slot (printer cover) is always closed.
2. Please do not open the paper slot during the printing process or just after printing. Let the print head cool down sufficiently before replacing the printing paper.
3. Do not pull out the print paper when the paper slot is closed as this may damage the camera.
4. The printing paper needs to be preheated, because the first few sheets and the last few sheets of each roll of printing paper are fixed with glue, and the printed photos may be uneven.
5. Please keep the printing paper clean and dry to avoid dust or stains affecting the printing effect.
6. When taking photos, pay attention to focusing and lighting to avoid printing blurry photos.
7. After printing, please store the photos properly in time to avoid exposure to sunlight or strong light, moisture or damage.

If the computer cannot recognize the memory card, or the "USB disk" mark does not appear after a few seconds:
Please re-insert the card reader into the computer.

8. The camera comes with 4 rolls of printing paper, one roll is included in the camera and the other three rolls are placed in the packaging box.
This camera contains a roll of printing paper, so it will make noise when you shake or move the camera, but this does not affect the quality of the product, so please feel free to use it.
The camera has 2 different print modes: gray print and dot print. You can choose the appropriate print mode and print density according to the actual scene to obtain better results.
Before using the camera for the first time, please fully charge the camera before use.
After printing out more than 10 photos, the camera may get hot. It is suggested to left it for 1 min before resuming the printing.

Safety instruction
1. Keep the appliance away from all hot surfaces and naked flames.
2. Always put the appliance on a level, stable, clean, dry surface.
3. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
4. Do not immerse the appliance in water or in other liquids.
5. Do not open the housing under any circumstances.
6. Do not introduce any objects into the interior of the housing.
7. Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.
8. Please wipe the surface stains with dry cloth. When cleaning this product, ensure that the charger is disconnected.
9. Regular checking cables and product in case it's damaged. If it is damaged, stop using immediately.
10. Built-in battery is not removable and replaceable. If damaged should contact service and repair.

11. It contains small parts, not suitable for use of the child under the age of three!
12. Guardians should keep watch over children while they play

12 Month Warranty
Thank you for your purchase.
Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reason

ably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

※Manual works with Pink Unicorn & Green Dinosaur & White Camera
※Packing list: 1pc print camera, 1pc wrist strap, 1pc manual, 1pc USB-C cable, 1pc TF card, and 4 rolls of thermal print paper

Please read all the information carefully before you use the product and keep the manual for future reference as it contains important information.