

# **anko**

**Portable USB Hand Mixer  
BT46804B  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE  
REFERENCE**


## IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



### **READ ALL INSTRUCTIONS BEFORE USE.**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not allow children to use the appliance without supervision.
4. Do not operate the appliance if it is damaged.
5. The appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, office and other working environments, farmhouses,
  - by clients in hotels, motels and other residential type environments,
  - bed and breakfast type environments.
6. Do not operate the appliance for other than its intended use.
7. **WARNING! It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.**
8. Do not put the appliance, including the USB cable, in water or other liquid. See "Care and Cleaning" section.
9. This appliance contains batteries that are non-replaceable.
10. Never remove parts from the appliance such as screws.
11. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
12. Keep the appliance and its cord out of reach of children.
13. Do not place the appliance in microwave oven or refrigerator.
14. Switch off the appliance and always disconnect the hand mixer from the supply if it is left unattended and before assembling, disassembling or cleaning.
15. Strictly prohibit disassembling the product shell to replace the lithium battery privately.
16. Misuse may cause injury.
17. The max operating time per cycle is 3 minutes. See "USING YOUR HAND MIXER" section.

18. After operating for 1 cycle, allow the appliance to rest for at least 3 minutes before using it again. After 5 cycles of operation, allow the appliance to cool down for approx. 30 minutes before using it again.
19. The appliance must only be supplied by IEC/EN 61558-2-16 certified SELV power supply with output 5V  1A.
- 20 Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
21. For charging, please refer to “CHARGING YOUR HAND MIXER” section.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### KNOW YOUR PRODUCT

1. Beaters (x2)
2. Motor Body
3. Eject Button
4. Speed Selectors
5. Handle
6. Light indicators
7. Type-C USB Cable
8. USB Plug End



### BEFORE FIRST USE

1. Unpack the appliance and all attachments carefully. We suggest you keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. If the carton is to be disposed of, please recycle all packaging materials where possible.
2. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
3. Ensure you have all parts and accessories and inspect all parts of the appliance for visual damage. Unwind the USB cable to its full length and inspect the cable for damage. Do not use the appliance if the appliance or the USB cable has been damaged or is not working properly.
4. Read this manual to familiarize yourself with the parts and operating principles of the USB hand mixer. Pay particular attention to the safety instructions in this manual.

5. To remove dust from transport and storage, wipe off the motor body with a slightly damp cloth, and carefully wash the beaters in warm soapy water. Then wait until all parts are dry.
6. Do not use harsh detergents or abrasives materials to clean any of the parts/housing.
7. Please make sure the appliance is fully charged before use.

## **CHARGING YOUR HAND MIXER**

1. We recommend fully charging the hand mixer before first use. Remove charging port cover and insert USB Type-C plug into charging port. Plug USB plug end into a USB power adapter and then plug into a power outlet.
2. During the charging process, the LED indicators will show the current level of charge; when the left indicator blinks, the battery is 0-1/3 full, when the left indicator illuminates steadily and the middle indicator blinks, the battery is 1/3-2/3 full; and when the left and middle indicators illuminate steadily, and the right indicator blinks the battery is 2/3 to completely full. When the battery is fully charged, all the indicators will illuminate without blinking.
3. A charger with DC 5V, 1A rated output will take maximum 4 hours to fully charge the appliance.

**IMPORTANT! Only use the USB Cable provided with the hand mixer.**

## **MIXING GUIDE:**

<b>SPEED</b>	<b>DESCRIPTION</b>
<b>1 WHIP</b>	For cooked icings, whipping cream etc.
<b>2 CREAM</b>	For creaming butter and sugar
<b>3 MIX</b>	For mixing egg, butter and all-purpose flour: (200g granulated sugar, 180g brown sugar, 225g butter or 225g margarine, softened, 2 eggs, 6g baking soda, 6g salt, 120g all-purpose flour.) Mixing method: 1. Sugar, butter, eggs in mixer bowl, use speed 2 for 30 sec., then use speed 3 for 30sec., 2. Gradually, add all-purpose flour to the sugar mixture, use speed 3 for mixing 2 minutes.

## USING YOUR HAND MIXER

1. To use this appliance, make sure the speed knob is set to 0 before attaching the beaters to the motor body, insert them into the holes until they click into place (as shown in the picture). You may need to rotate them slightly so that their tabs line up properly with the slots.

2. Place the beaters into the bowl or container with your mixture in it. Turn the switch to adjust the speed from level 1-3 (where 1 is slowest and 3 is fastest), starting slowly and increasing as necessary, to avoid splattering your mixture.


3. As the appliance is mixing, the indicators will illuminate to show the battery level. If the left LED indicator is blinking 5 times, it means that battery capacity is low, and the appliance needs to be charged as soon as possible to avoid stopping during use.

4. The product is equipped with an automatic stop function which intervenes after 3 minutes of continuous use. This is to protect the electric motor from over heating

**Note: During the mixing process, do not insert knives or other metal objects.**

5. Once you have finished using this device, turn the speed switch to 0, then carefully press the eject button to detach the beaters.

**NOTE: The beaters can only be ejected when the speed selector has been set to 0. To prevent damage, do not attempt to eject or forcibly remove the beaters when the speed is not set to 0.**

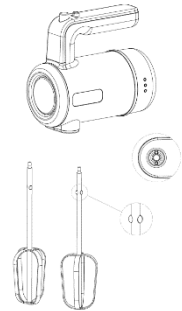

## TROUBLESHOOTING AND SOLUTION

1. During the mixing process, if the hand mixer stops working abnormally, please check if the beaters is loose and stuck.

2. When the three white lights blink for 5 times during working process, and then shut down, this indicates that there is a blockage. Please turn off the power switch and check whether the food is too large to cause the jam.

3. If the battery is sufficient, but the product does not work after starting, this is most likely due to a hardware fault. Please stop using the product, turn off the power switch, and have it checked by qualified electrical person.

4. Overheat protection starts while the motor body is overheating, the motor stops working, and the right LED indicator light continues to flash. Please stop using the machine and allow the appliance to cool down for at least half an hour before restarting.

5. If the hand mixer makes abnormal noise, emits a bad smell or smoke, power off the mixer, and have it checked by qualified electrical person.

## CARE AND CLEANING

### **WARNING! Electrical shock Hazard.**

Disconnect power before cleaning. Do not immerse USB cable or motor body in any liquid.

1. Unplug USB cable from the motor body. Make sure LED indicator is off.
2. Wipe off the motor base with a slightly damp cloth, and carefully wash the beaters in warm soapy water.

### **WARNING! Do not immerse the main body in water or any other liquids to clean.**

3. Then wait until all parts are dry.

## TECHNICAL DATA

Model: BT46804B

Input: 5V  1A

Rated Input Power: 100W

Battery capacity: 2000mAh

This product is intended to stir, blend, combine, whisk and whip ingredients such as creams, cake mixtures, and eggs. It offers cordless operation for easy use and is rechargeable.

## DISPOSAL AND RECYCLING



This product must not be disposed together with normal household waste.

This product must be disposed at an authorised place for recycling of electrical and electronic appliances. By collecting and recycling waste you help save natural resources, and make sure the product is

disposed in an environmentally friendly and healthy way.

- The battery must be removed from the appliance before it is scrapped.
- Ensure the appliance is disconnected from mains power before removing the battery.
- The battery is to be disposed of safely.

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>