 


anko

Portable USB Mini Blender
WBL-2401A
User Manual

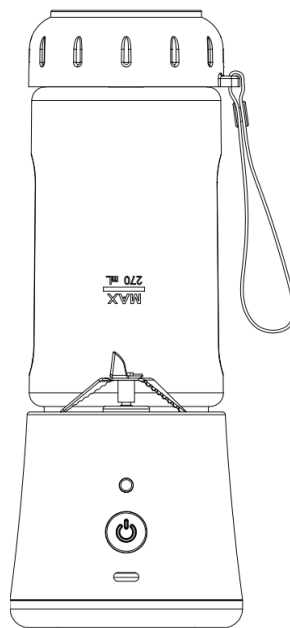

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Please read all instructions carefully before using this product.
2. When the product is in use, do not remove main unit from the juice cup.
3. To avoid injury and/or damage to the product during use, do not touch moving parts, such as blades and motor.
4. The juice cup can be opened after the blade has come to a complete stop.
5. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
6. For food hygiene always clean the product immediately after use. See section CLEANING AND STORAGE for instructions on how to clean the appliance.
- CAUTION! The blades are sharp. Handle with care when emptying the cup and during cleaning.**
7. After charging, when unplugging the USB plug, please grab by the plug when pulling it out. Do not pull from the wire.
8. Do not place appliance in or near flammable gases or electric stoves, or in hot ovens.
9. Do not immerse the main unit (electric motor) combination in water or other liquids to avoid the risk of fire, electric shock or personal injury.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. In the absence of supervision, the cleaning and maintenance work should not be done by a child.
13. Use of accessories not recommended or supplied with the product may cause fire, electric shock or personal injury.
14. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
15. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
16. Before using, please make sure that the main body is firmly fixed.
17. Misuse may cause serious injury.
18. **WARNING: DO NOT BLEND HOT LIQUIDS.**
20. Switch OFF the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
21. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by client in hotels, motels and other residential type environments,
 - bed and breakfast type environments.

22. This appliance contains batteries that are non-replaceable.
23. The appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
24. For cleaning, please refer to “CLEANING AND STORAGE” section.

IMPORTANT!

WARNING: Be alert to the risks that may lead to danger, serious injury and damage to property.

1. Do not immerse the main body (electric motor) of the appliance into the water or other liquid.

2. WARNING: Do not put hot ingredients or liquid in the juice cup to avoid bursting, splashing and to prevent scalding.

3. Do not blend ice cubes or frozen fruit only without adding some water or milk.

IMPORTANT! The blender is not designed for crushing large amount of ice. Use one or two pieces of ice cubes (not larger than 2cm x 2cm x 2cm size) only when blending.

4. This product contains lithium-ion batteries. Therefore, do not attempt to dismantle the product. Fire risk exist if the batteries are damaged.

5. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C.

6. This product is for household use only and not designed for commercial use.

7. Do not operate the product without any food in the juice cup.

8. Stirring ingredients such as bananas that are prone to foam may cause the product to stall.

9. Do not expose the product to high temperatures, strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation and/or fire.

10. To avoid parts deformation or damage, do not put any parts of this product in a dishwasher, microwave oven or hot water above 60°C.

 
11. The product has built-in lithium-ion batteries. Pay attention to the following:

- a) Only use and store the product in an environment where the temperature is between -5°C to +35°C.
- b) If not used for a long time, re-charge every three months to prevent battery damage.
- c) Charging time may be longer when the room temperature is below 10°C, which is normal.
- d) Charge the battery in time when the battery power becomes low.

WARNING: The maximum operating time is 45 seconds. Allow the appliance to rest for at least 3 minutes before using it again. After 5 cycles of operation, allow the appliance to cool down for approx. 30 minutes before using it again.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE.**

KNOW YOUR PORTABLE USB MINI BLENDER

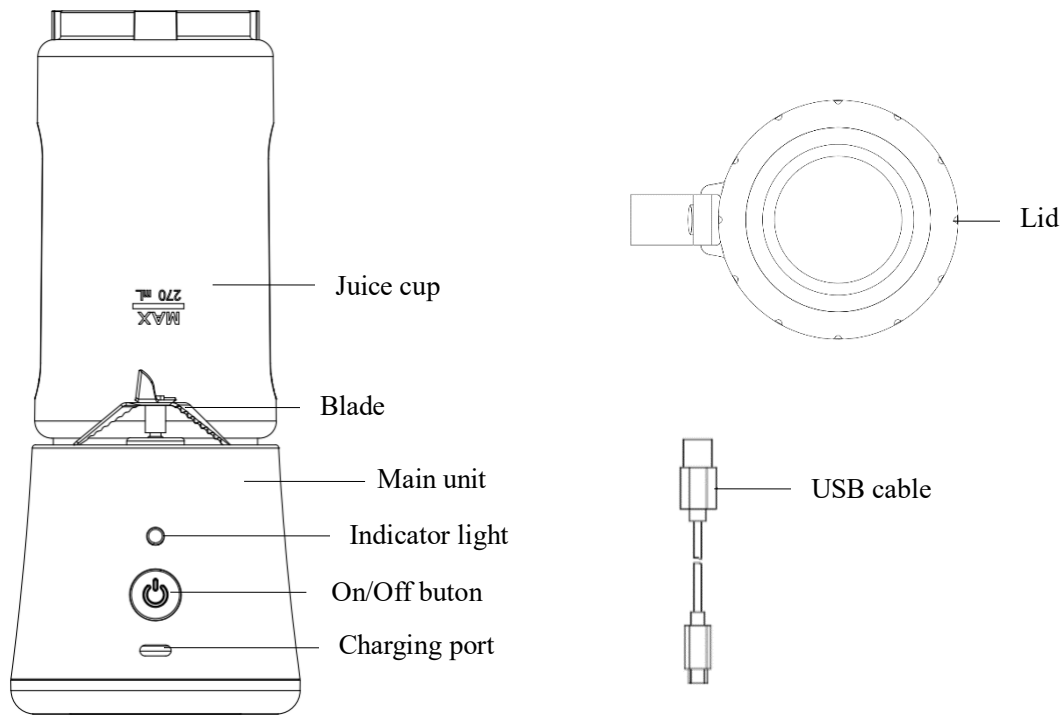

BEFORE FIRST USE

Note: When using the appliance for the first time, carefully remove all internal and external packaging, protective film and accessories.

- Clean the main unit with a damp cloth or sponge. Wipe dry with a soft dry cloth.

 


WARNING! Do not immerse the main unit in water or any other liquids to clean.

- Wash the juice cup and lid with soapy water. Dry all components thoroughly before use.
- Screw the juice cup on the main unit until the indicator flashes in blue 3 times.
- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 1A specification. The charging time is approx. 3 hours. The indicator light is red during charging and turns blue after fully charged.

USING YOUR PORTABLE USB MINI BLENDER


1. Wash the fruit, cut the flesh into 1x1x1cm pieces and put them into the cup (please remove the fruit core, hard material, thick skin or hard shell). Add water or other drinking liquid up to the MAX line mark on the cup (270mL), and screw in the cup.

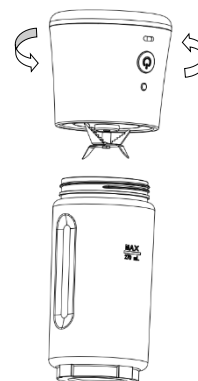

For example – the juice cup filled to maximum indicated level with a mixture of 108g soaked carrots and 162mL water.)

Make sure the juice cup is screwed in properly before using the appliance.

 - To assemble the juice cup, screw it clockwise onto the main unit you hear a ‘click’ the indicator light should flash 3 times in blue.
 - If the juice cup is not properly assembled, the indicator will flash in red/blue every two 2 cycles to remind you to reassemble.
2. To invert the blender function so that the fruit does not get stuck on the blade. Double press the ON/OFF switch, and the appliance will start stirring with blue light on. Shake the appliance gently upside down while blending if needed.

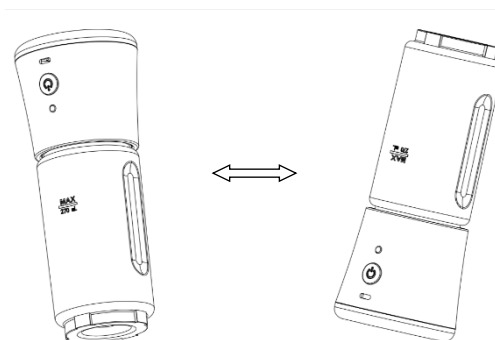

Note:

- If the blade and pulp are stuck during the process, the appliance will stop automatically, the indicator light will turn red. Turn the appliance horizontally or tilt it until the blade is separated from the pulp. Wait until the red indicator light goes out and then double press the ON/OFF button, and the appliance will continue blending.
- When the battery runs out, the indicator light will flash in red 10 times and goes out.

CAUTION! Do not operate the appliance with an empty cup to prevent damage to the electric motor.

3. Press the ON/OFF button to stop the appliance.
4. The appliance will automatically turn off after 45 seconds of blending. Unscrew the lid to drink the juice in the cup.

NOTE: Do not continuously blend with excessive intensity.

CLEANING AND STORAGE

Make sure the blade has come to a complete stop before cleaning.

Do not use a steel ball, abrasive cleaner or corrosive liquid (such as gasoline, acetone) to clean the product.

IMPORTANT! Blades are sharp. Handle with care when cleaning.

- Fast Cleaning: Add an appropriate amount of water to the juice cup and install it on the main unit. Switch ON and operate for 5 to 10 seconds. Discard the water.
- The main unit can be wiped with a wet cloth. Do not rinse, soak or spray water or other liquids to avoid damaging the appliance.
- Rinse the juice cup and the lid with clean water and wipe dry.
- When storing, ensure the product is clean and dry.
- This product contains a rechargeable Li-ion battery. When not in use, it should be stored in a clean, dry, ventilated room away from direct sunlight with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.
- When not in use, store the cup on the main unit.

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance doesn't work	Protection switch is not activated	Make sure the juice cup is screwed into place. The blue light should flash 3 times when installed correctly.
	The appliance (USB cable) is connected to the power supply.	Disconnect the appliance from the USB cable with the power supply.
Red light flashes and the appliance doesn't work	Insufficient battery	Charge the appliance.
The indicator light goes out and the appliance doesn't work	Too large or too much food blocking the blade.	Cut the fruit to smaller size or reduce the food quantity.
	The battery temperature is too high, power OFF protection circuit activated.	Allow the appliance to cool down for 30 minutes before using it again.

TECHNICAL SPECIFICATION

Voltage: 5Vd.c. 1A

Input Power: 50W

Juice Cup Max. Capacity: 270mL

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us