 


anko

WINDOW VACUUM CLEANER

Instruction Manual

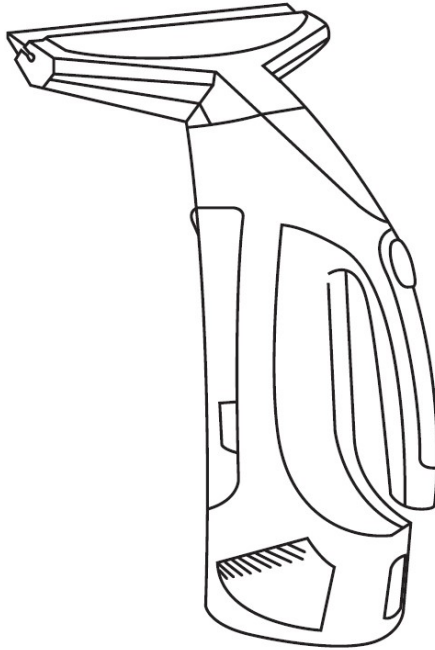

Model No.: AWC5531

To ensure the proper operation of this device, please read this instruction manual carefully before using the product and save it for future reference.

General Information and Safety Instructions



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual to avoid the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this product.

EXPLANATION OF SYMBOLS

The following symbols and signal words are used in this Instruction Manual, on the product or on the packaging.



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.

IPX4

Ingress Protection Marking: Product can resist against water splashes from any direction.

When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

Indoor domestic use only: This appliance is intended for indoor domestic use only. Do not use it outdoors, where aerosol (spray products) are being used or where oxygen is being administered.

Intended purpose: Do not use this appliance for anything other than its intended purpose and only use it as described in this manual.

Accessories: Do not use any accessories with this appliance that are not supplied or specifically recommended.



For the purpose of recharging the battery, only use the supplied USB Charging cable provided with the product.

- This product is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- This product contains batteries that are non-replaceable.
- Do not insert objects into the air louvres.
- Never use any accessories or parts not included with the product.
- Do not spray water directly on to equipment containing electrical components.
- No naked flame sources, such as candles, should be placed near the product.



- The voltage indicated on the rating plate must correspond to the supply voltage.



Ventilation should not be impeded by covering the ventilation openings. Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.



Never use wet hands to touch USB cable or charging port.

- Use this battery-operated product only for cleaning moist, smooth surfaces such as windows, mirrors or tiles. The product should not be used for traditional vacuuming.
- Do not use the product for any other purpose than its intended use.
- Do not use the product with a damaged charging cable, after a malfunction or if it has been dropped or damaged in any manner.
- Do not let the charging cable hang over the edge of a table or counter or let it touch any hot surfaces.
- Never use the product upside down.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,

unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.

- Children shall not play with the product. Cleaner and user maintenance shall not be made by children without supervision.
- Keep the product out of reach of children when it is energized or cooling down.
- Children can become trapped in the packing film when playing and suffocate.
- Do not allow children to play with the product or the packing film. Danger of suffocation.
- Never let children use electrical equipment unsupervised. Do not place the product on or near a flammable or hot object.
- Some products are "sealed" using tamperproof screws to avoid tampering/maintenance by unskilled or unqualified persons and also for safety reasons.



Swallowing the product's battery may result in severe internal burns in just 2 hours and can lead to death. If it is no longer possible to safely close the battery compartment, stop using the product and store it so that it is not accessible for children. If you suspect that a battery has been swallowed or otherwise incorporated, promptly consult a physician.



Leaking battery acid may lead to chemical burns. Do not allow battery acid to come into contact with skin, eyes or mucous membranes. In the event of contact with acid, immediately flush the applicable areas with plenty of clean water and consult a physician if necessary.

- Batteries (particularly lithium batteries) can explode if used improperly.
- You may not heat or short circuit batteries and rechargeable batteries or dispose of them in fire.
- Do not expose batteries and rechargeable batteries to direct sunlight.
- The product has no user-serviceable parts contained within. Do not attempt to repair, disassemble, or modify the product.



When operating the product, be cautious of loose clothing, jewellery, or long hair as this can become entangled in moving parts which can snag and pull.

- Do not direct the spray from the spray bottle against persons or animals.
- Do not direct the spray from the spray bottle against electrical devices.
- If there is any possibility that the product or detergents could harm or discolour a surface it is recommended that a test be done first.
- Do not use undiluted acids, acetone, or solvents.
- Do not use flammable liquids.



Do not use boiling or hot water to clean surfaces. **Danger of scalding.**

- Do not use hot or boiling water in the product or the spray applicator.
- Do not use hot or boiling water to clean the product.
- This product is for home use only; it is not intended for commercial use.

NOTICE!

The products results will vary depending on the amount of detergent used in the spray bottle. Streak free results will only be achieved if the instructions are followed correctly.



Modifications by the user/s may cause damage to property or persons and will be deemed as not in accordance with the instruction manual and no liability for damages will be accepted by the manufacturer.



 
- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture, or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event that the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.

- It is important to note that the product will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

Parts Guide

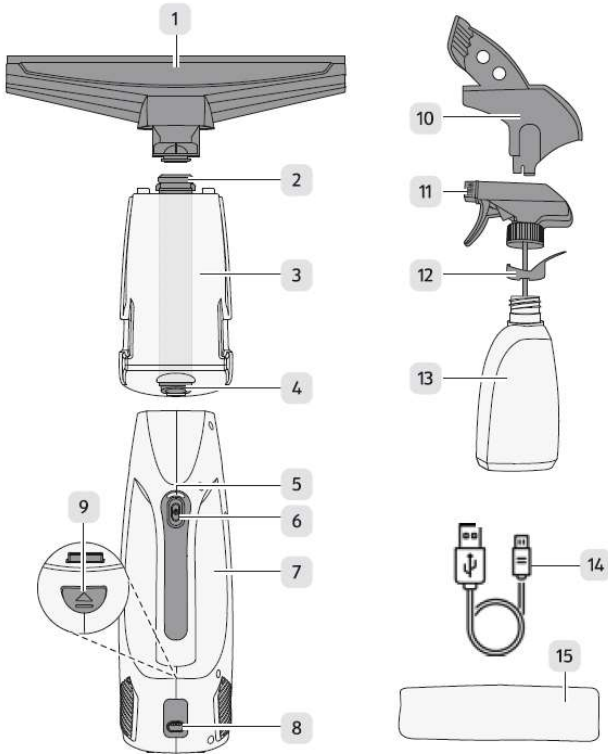

- | | | | |
|----|-----------------------|-----|---------------------------------|
| 1. | Vacuum head | 9. | Container release button (back) |
| 2. | Black nozzle | 10. | Wiping attachment |
| 3. | Dirty Water container | 11. | Spray nozzle |
| 4. | Rubber plug | 12. | Positioning ring |
| 5. | Indicator light | 13. | Spray bottle |
| 6. | Power button | 14. | USB charging cable |
| 7. | Window cleaner body | 15. | Microfibre cloth |
| 8. | Charging socket | | |

Instructions

BEFORE FIRST USE

Carefully unpack the product and remove any packaging. Check to see that you have received all the items listed in the parts guide before discarding the packaging. Plastic wrapping can be a suffocation hazard for babies and young children so ensure that all packaging materials are out of their reach.

ASSEMBLY INSTRUCTIONS

1. Connect the vacuum head (1) on to the body (7).
2. Charge the product.

NOTE: The products battery is not charged on delivery. Before using the product for the first time, the battery must be charged for at least 3 hours.

CHARGING INSTRUCTIONS

WARNING! For the purpose of recharging the battery, only use the USB charger with DC 5V and 1A output to charge this item. Disconnect the USB cable after the charging is complete.

1. To charge the product, connect the supplied USB charging cable to a charger (not included) and insert the other end into the charging socket on the body of the product. The indicator light (5) will turn red when charging. When the product is fully charged, the indicator light (5) will turn blue.
2. It is recommended to unplug the USB charging cable when the product is fully charged.

NOTE: Only recharge the battery when the suction power of the product is noticeably weaker, and the indicator light (5) is flashing red.

CLEANING WINDOWS

1. Turn the spray nozzle (11) from "X" to STREAM (-----) or SPRAY (☼) as desired (Fig. A).

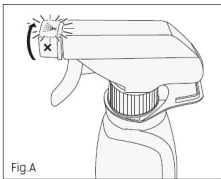 


Fig A

2. Insert the wiping attachment (10) on to the spray nozzle (11). Ensure that it clicks securely into the positioning ring (12). The spray nozzle (11) should now be enclosed within the wiping attachment (10) and the positioning ring (12) (Fig. B).



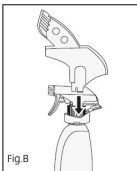 


Fig B

 
3. Fill the spray bottle (13) with water and if required with a cleaning agent suitable for window cleaning (Fig. C).

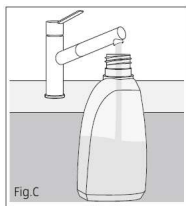

 4. Screw the spray nozzle (11) with the fitted attachments on to the spray bottle (13) (Fig. D).

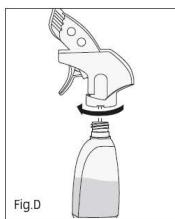

 5. Pull the microfibre cloth (15) over the wiping attachment (10) and secure it with the Velcro fastener (Fig. E).

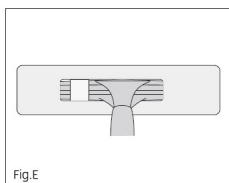

6. Spray the smooth surface you wish to clean (window, mirror, tiles, for example).
7. Using the microfibre cloth (15) wipe over the sprayed area to loosen dirt and debris.

USING THE VACUUM CLEANER

1. Press the power button (6). The indicator light (5) will illuminate blue.

NOTE: If the indicator light (5) flashes red during use, this indicates that the product needs to be charged (see charging instructions).

2. Move the vacuum head (1) slowly from top to bottom across the wet surface. (Water will be sucked into the dirty water container (3)).
3. After you have finished a section, always start again at the top.
4. Once the "MAX" mark on the dirty water container (3) is reached, switch off the product by pressing the power button (6) and empty the dirty water container (3).
5. Over a sink pull out the rubber plug (4) on the front of the dirty water container (3) and pour out the dirty water. After, close the rubber plug (4) and start the vacuum process again.
6. Once the entire surface is dry, press the power button (6) again to turn the product off. The indicator light (5) will turn off.
7. If necessary, dry off any streaks or remaining moisture on the surface with a dry cloth.

Cleaning and Maintenance

Follow these instructions to ensure your product is cleaned and maintained correctly.

NOTE: Do not use abrasive or aggressive cleaning materials as these can damage the surface of the product.

Ensure that the power is turned off and that the USB charging cable is disconnected.

CLEANING THE SPRAY BOTTLE

1. Remove the microfibre cloth (15).
2. Open the spray bottle (13) and empty its contents.
3. Wipe the components of the spray bottle (13) with a damp cloth, if necessary, a small amount of detergent can be used on the cloth.

 
WASHING THE MICROFIBRE CLOTH

- The microfibre cloth (15) can be machine washed if required at 60°C. Do not use any softener or conditioner as this reduces the cleaning power of the microfibre cloth.
- Do not bleach the microfibre cloth (15).
- Do not tumble dry the microfibre cloth (15).
- Do not iron the microfibre cloth (15).

CLEANING THE PRODUCT



For thorough cleaning, disassemble the product.

1. Press the ridged area on the underside of the vacuum head attachment (1) and pull the vacuum head (1) off the product. (Fig. F). Clean the vacuum head (1) with a damp cloth, if necessary, a small amount of detergent can be used on the cloth.

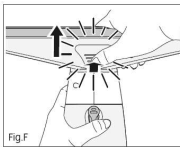


2. Press the dirty water container release button (9) and remove the dirty water container (3) from the product body (7) (Fig. G).

  
NOTE: Grasp the two notches on the side of the container to easily remove it.

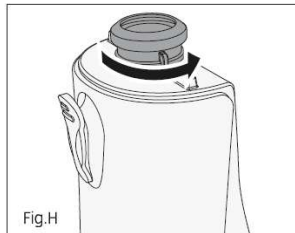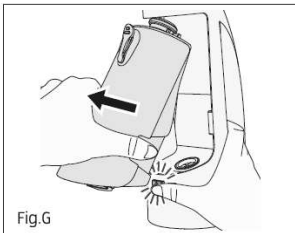

 
3. Slightly turn the black nozzle (2) at the top of the dirty water container (3) anticlockwise and lift it off (Fig. H).
4. Push the top of the tube through the container and grasp the slanted side at the bottom to pull it out. (Fig. I).

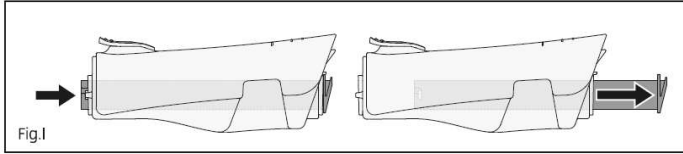

 
5. Rinse the dirty water container (3) with clean water and if necessary, with small amount of detergent (Fig. J).

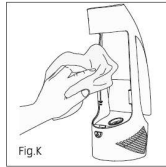

 6. Wipe the product body (7) with a damp cloth and if necessary, with small amount of detergent. Dry the product body (7) with a clean and dry cloth (Fig. K).
7. Reassemble the product.
 - A. Push the tube back into the dirty water container (3). **NOTE:** The slanted side of the tube must be aligned with the slanted side of the container. (Fig. L)


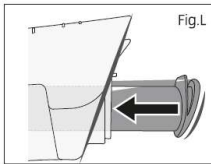


 - B. Place the black nozzle (2) back into place and turn it clockwise to secure. Make sure that the sealing rings are correctly inserted. (FIG. M).

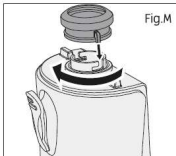

- C. Reattach the dirty water container (3) on to the product body (7) by pushing the top part into the product body (7) and then pushing the slanted bottom part downwards until the dirty water container (3) clicks firmly into place (Fig. N).

  D. Push the vacuum head (1) back on to the product body 7. (Fig. O).

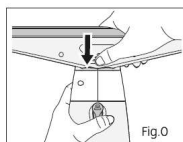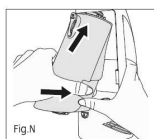


The body (7) contains electrical components. Do not immerse this part in water or rinse under water.

- Ensure all parts are dry before storing and re-assembling.
- Store in a cool dry place out of reach of children.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The appliance will not turn on.	Battery not charged. Battery too hot/cold.	Check indicator light. If it is blinking red, if yes, charge the battery.
Restricted or no vacuum.	Vacuum head blocked. Rubber plug removed.	Unblock vacuum head. Replace rubber plug.
Appliance turns itself off.	Battery too hot/cold. Vacuum head blocked.	Allow to cool/warm. Unblock vacuum head.
The appliance is not cleaning properly.	Vacuum head damaged. Too much force applied. Too little force applied.	Clean the vacuum head. Apply reduced force. Apply more force.
Water is leaking from the vacuum head of the appliance.	The dirty water container is full past the MAX line.	Empty the dirty water container.
No water is coming out of the spray bottle.	There is no water in the spray bottle. The spray nozzle is set to off.	Refill the spray bottle. Turn the spray nozzle to STREAM or SPRAY.

Technical Specifications

Model Number	AWC5531
Power Supply	Input: 5V  1000mA
Battery type	li-ion, 3.7Vd.c. 2200mAh x 1 cell
Rated Power	12W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd.	Target Australia Pty Ltd.

C/-Customer Service Centre
690 Springvale Road, Mulgrave VIC
3170
Customer Service: 1800 124 125
(Australia) or
0800 945 995 (New Zealand) or via
Customer Help at kmart.com.au

C/- Customer Service Centre
2 Kendall Street, Williams Landing, VIC,
3027
Customer Service: 1300 753 567 or via
Customer Help at
target.com.au/help/contact-us

