



**Mini Flat Grill
AK-D061
User Manual**



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS


When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.


- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- The product is not a toy. Keep away from young children.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

- Use only heat-proof synthetic or wooden utensils, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
- Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR MINI FLAT GRILL

- a. Red heating light
- b. Handle
- c. Top cooking plate
- d. Bottom cooking plate
- e. Lay-flat release button

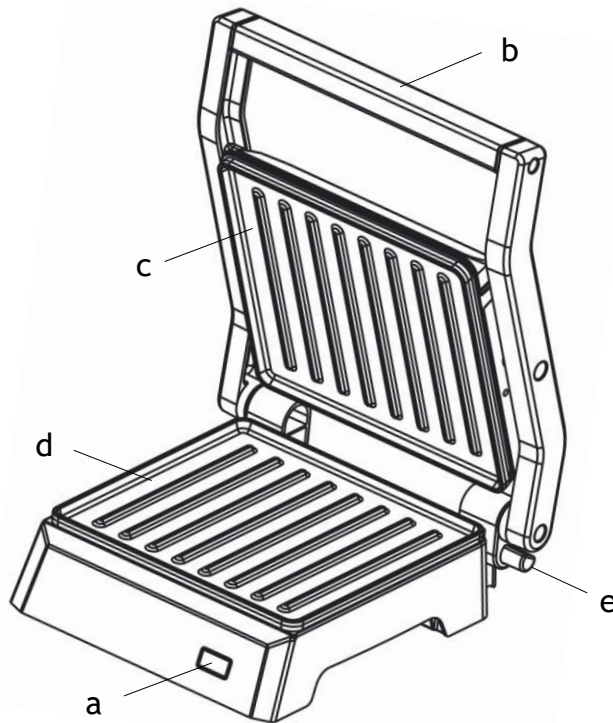

BEFORE FIRST USE

IMPORTANT! Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Unpack the appliance and check if all parts are there and undamaged.
- Clean the appliance following section “Cleaning and Maintenance”.
- **WARNING! Do not immerse the appliance in water or any other liquid to clean.**
- Place the appliance on a flat, heat-resistant stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.
- Plug the appliance into an electrical power outlet.
- Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.
- Allow the appliance to heat up for approximately 5 minutes. Apply a thin coating of cooking oil to the cooking plates and carefully rub it in with a paper towel. You only need to condition the cooking plates when using your appliance for the first time.
- **WARNING! The grills will get very hot.**

- NOTE: On first use there may be a small amount of haze / smoke and an odour emitted from the appliance. This is perfectly normal and will subside after few minutes of use.
- Unplug the appliance and now it is ready for use.

HOW TO USE YOUR MINI FLAT GRILL

1. Before using the appliance, clean the cooking plates with a damp cloth. Dry it with paper towel.
2. Close the appliance and plug it into a mains power outlet socket. The red heating light will light up, indicating that the appliance is connected to the mains power and begins heating.
3. It will take approximately 3 minutes to reach the recommended grill temperature. The red heating light will go OFF when the mini flat grill is ready for use.

WARNING! DO NOT touch hot surface, the surface will get hot during use.

Hot steam may be emitted when opening and closing the lid during cooking. Protect yourself against hot steam.

4. Open the appliance and brush the cooking plates with a small amount of vegetable oil.
5. Place the food on the bottom cooking plate, close the appliance.


HINT: You can use light pressure on the handle to cook food to your liking. Do not use heavy pressure.

6. The red heating light will light up when another cooking cycle begins. The foods will be ready in around 3-7 minutes.
 7. Open the appliance and check whether the food is sufficiently done. If you prefer a darker one, continue cooking until the desired colour is achieved.
 8. After cooking, open the appliance and remove the food from the cooking plate with a heat-proof plastic, silicone or wooden utensil.
- NOTICE! Never use sharp or metal utensils, these utensils could damage the non-stick coating.
9. If more cooking is required, close the appliance to retain heat. Wait until the red heating light goes off again before making more foods.
 10. After using the appliance, disconnect the power plug from the mains power outlet socket.

Use open cooking surface

CAUTION! DO NOT plug the appliance to the mains power unless the appliance is lying flat.

Open the appliance and push the lay-flat release button and let the top cooking plate rotate downwards until it is on the same level as the bottom cooking plate.

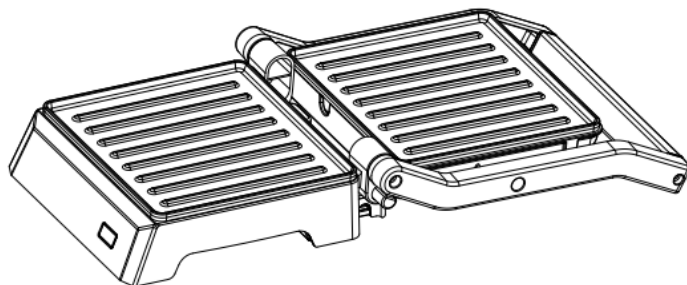

WARNING!

1. Never use sharp forks or knives to remove or cut food on the cooking plate, as this would damage the non-stick coating on the cooking surface.
2. Always unplug the appliance from the power outlet socket when not in use.

CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

CAUTION: Do not immerse the appliance in water or in a dishwasher!

- Always unplug your mini flat grill from the mains power supply before cleaning or during maintenance.
- Ensure that your mini flat grill has completely cooled down before cleaning, as it gets very hot during use.
- Clean the cooking plates and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance.
- For residue that is burnt on and hard to remove, add a few drops of cooking oil and let it soak for a few minutes. When the residue has softened, wipe the cooking plates clean with paper towels or a soft cloth. Then wipe the cooking plates dry with a soft cloth.

NOTICE! Do not use any abrasive cleaners (steel wool, etc.) or chemical solutions to clean the cooking plates or the product. They could damage the surfaces.

STORAGE

1. Unplug the appliance from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.

WARNING! Do not wrap the power cord around the appliance.

4. Store the appliance in a clean dry location and out from the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 520W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us