



Mini Citrus Juicer

YDCJ-8062

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


READ ALL INSTRUCTIONS

- Read all instructions carefully before you use the appliance.
- Always disconnect the appliance from the supply if it is left unattended, not in use, before assembling, disassembling or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance is intended to be used in household or similar applications such as:
 - staff kitchen areas in shops, offices and other working Environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
- Ensure your electricity supply is the same as shown on the rating label before connecting to mains power.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunction or is dropped or damaged in any manner. For electrical safety, any repairs to the product must be carried out by a qualified electrical person only to avoid hazard or the product must be disposed.
- To protect against electric shock do not immerse the appliance, power cord, plug in water or any other liquid.

- Do not operate the mini citrus juicer with wet hands.
- Do not let the cord hang over edge of the table or counter.
- Make sure cord is positioned so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- The use of attachments not supplied by the manufacturer may cause a risk of injury.
- Avoid contacting moving parts.
- Keep fingers, hair, clothing and utensils away from moving parts.
- This appliance is only intended for use indoors only within a domestic environment. Do not use outdoors.
- Keep the appliance away from heated surfaces.
- Always operate the appliance on a flat, stable surface.
- **WARNING: Misuse may cause injury.**
- For cleaning, please refer to section “CLEANING AND MAINTENANCE”.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- **IMPORTANT! The maximum operating time is 15 seconds for 2 halves of orange. Allow the appliance to rest for 15 seconds before using it again. After 6 cycles of operation, allow the appliance to cool down to room temperature for approximate 30 minutes before using it again.**

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR MINI CITRUS JUICER

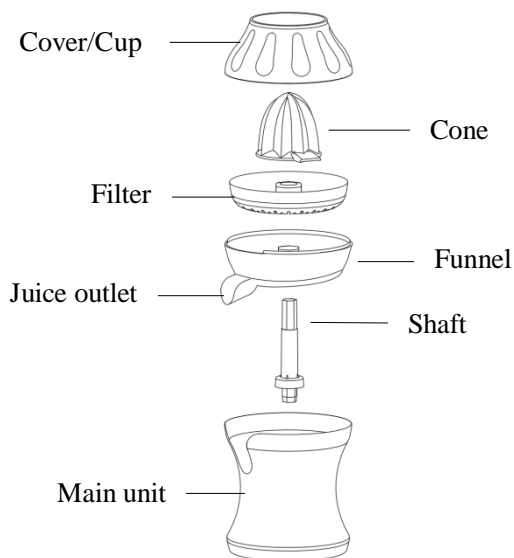

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present. In the event of damaged or missing parts, return the product to corresponding service centre.
- Clean the appliance as described in Cleaning and Maintenance. For your safety, make particular attention to the safety instructions in the manual.

HOW TO USE YOUR MINI CITRUS JUICER

1. Clean and assemble the appliance.
 - Insert the shaft vertically into the slot.
 - Place the funnel, filter and cone.
 - Turn the cover over to use it as a cup and place it under the juice outlet.
2. Connect the appliance to the mains power.
3. Cut the orange into halves.
4. Press half of the orange on the cone gently. The mini citrus juicer will start rotating automatically, the juice flows down slowly to the cup. Finish squeezing another half of orange or more.

IMPORTANT! The maximum operating time is 15 seconds for 2 halves of orange. Allow the appliance to rest for 15 seconds before using it again. After 6 cycles of operation, allow the appliance to cool down to room temperature for approximate 30 minutes before using it again.

5. After using the appliance, unplug the mini citrus juicer from mains power.

CLEANING AND MAINTENANCE

Never immerse the main unit or power plug and cord in water or any other liquid or use abrasives when cleaning.

- This appliance should be cleaned after each use.
- Always unplug your mini citrus juicer from the mains power supply before cleaning or during maintenance.
- Wash all the detachable parts thoroughly with warm water or put the parts in dishwasher. Dry with cloth after cleaning.
- Clean main unit with a damp cloth. Do not use anything abrasive that can scratch or damage the appliance.

CAUTION! Electric shock hazard, Do Not immerse the main unit or the power cord in water or any other liquid.

STORAGE

1. Unplug the mini citrus juicer from the mains power.
2. Clean and dry the appliance.
3. Store the appliance in a clean dry location and out of the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50Hz

Power: 25W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us