

INSTRUCTIONS

IMPORTANT! KEEP FOR FUTURE REFERENCE
PLEASE READ THE FOLLOWING WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE USE. FAILURE TO FOLLOW WARNINGS COULD RESULT IN SERIOUS INJURY OR FATAL INJURY.

⚠ WARNING:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
DO NOT LEAVE CHILDREN UNATTENDED.
THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED - MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.
POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS. MOVING PARTS IN THE FOLDING MECHANISM OF THIS HIGH CHAIR CAN CAUSE INJURY. BE SURE TO KEEP FINGERS AND TOES AWAY FROM MOVING PARTS WHEN FOLDING AND UNFOLDING THIS CHAIR.
DO NOT USE HIGH CHAIR UNTIL THE CHILD CAN SIT UP UNAIDED.
THE TRAY COVER IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR.
TO REDUCE THE RISK OF INJURY, POSITION THE HIGH CHAIR AWAY FROM FURNITURE, WALLS, HOT SURFACES AND LIQUIDS, WINDOW COVERING CORDS, ELECTRICAL CORDS. OPEN FIRES AND OTHER SOURCES OF STRONG HEAT SUCH AS ELECTRIC BAR FIRE AND GAS FIRE.
POSITION THE HIGH CHAIR AWAY FROM FURNITURE WHEN THE CHAIR IS NOT BEING USED AT A TABLE WITH A TRAY REMOVED.
DO NOT STAND ON THIS CHAIR.
DO NOT ELEVATE THIS HIGH CHAIR ON ANY STRUCTURE OR TABLE, USE ONLY ON A FLAT, EVEN AND HORIZONTAL FLOOR.
DO NOT USE THIS CHAIR AS A STEP LADDER.
NEVER CARRY THE HIGH CHAIR WITH CHILD IN IT.
LOAD LIMIT: 15kg.
SUITABLE FOR CHILDREN 6 MONTHS TO 15kg.
DO NOT USE HIGH CHAIR IF PARTS ARE MISSING, DAMAGED OR BROKEN. FAILURE TO FOLLOW WARNINGS COULD RESULT IN SERIOUS INJURY OR FATAL HAZARD.
DO NOT USE HIGH CHAIR UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.
PLEASE CONTACT THE CUSTOMER SERVICE HOTLINE FOR ANY ENQUIRIES INTO MISSING OR BROKEN PARTS.
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

**INSTRUCTIONS:
TO OPEN AND CLOSE CHAIR**

To open the high chair, pull outward the chair legs and push down the chair panel firmly to ensure the red tab (mechanism) lock into the slot.
To fold the high chair, pull the red tab (mechanism) outward to release the locking pin and fold up the chair as per the image shown.

Safety lock



TO SECURE AND TO REMOVE YOUR CHILD FROM THE HIGH CHAIR

⚠ WARNING: USE THE HARNESS AT ALL TIMES.

A fully body harness is provided to restrain your child.

Facing forward gently sit the child, legs first into the high chair. Make sure the child's legs are placed in the correct leg holes. Slide each strap over the shoulders of the child. Carefully clip the end of each shoulder strap into the centre buckle housing until the buckle prongs are clicked into position. Carefully adjust the harness by pulling the sliders until the desired snug fit is achieved in the waist and shoulder straps. To release the harness simply squeeze both buckle prongs that are locked into each side of the centre buckle housing to release the buckles and remove child.

