



LED BASKETBALL SYSTEM

3+
years


Keycode: 43493012

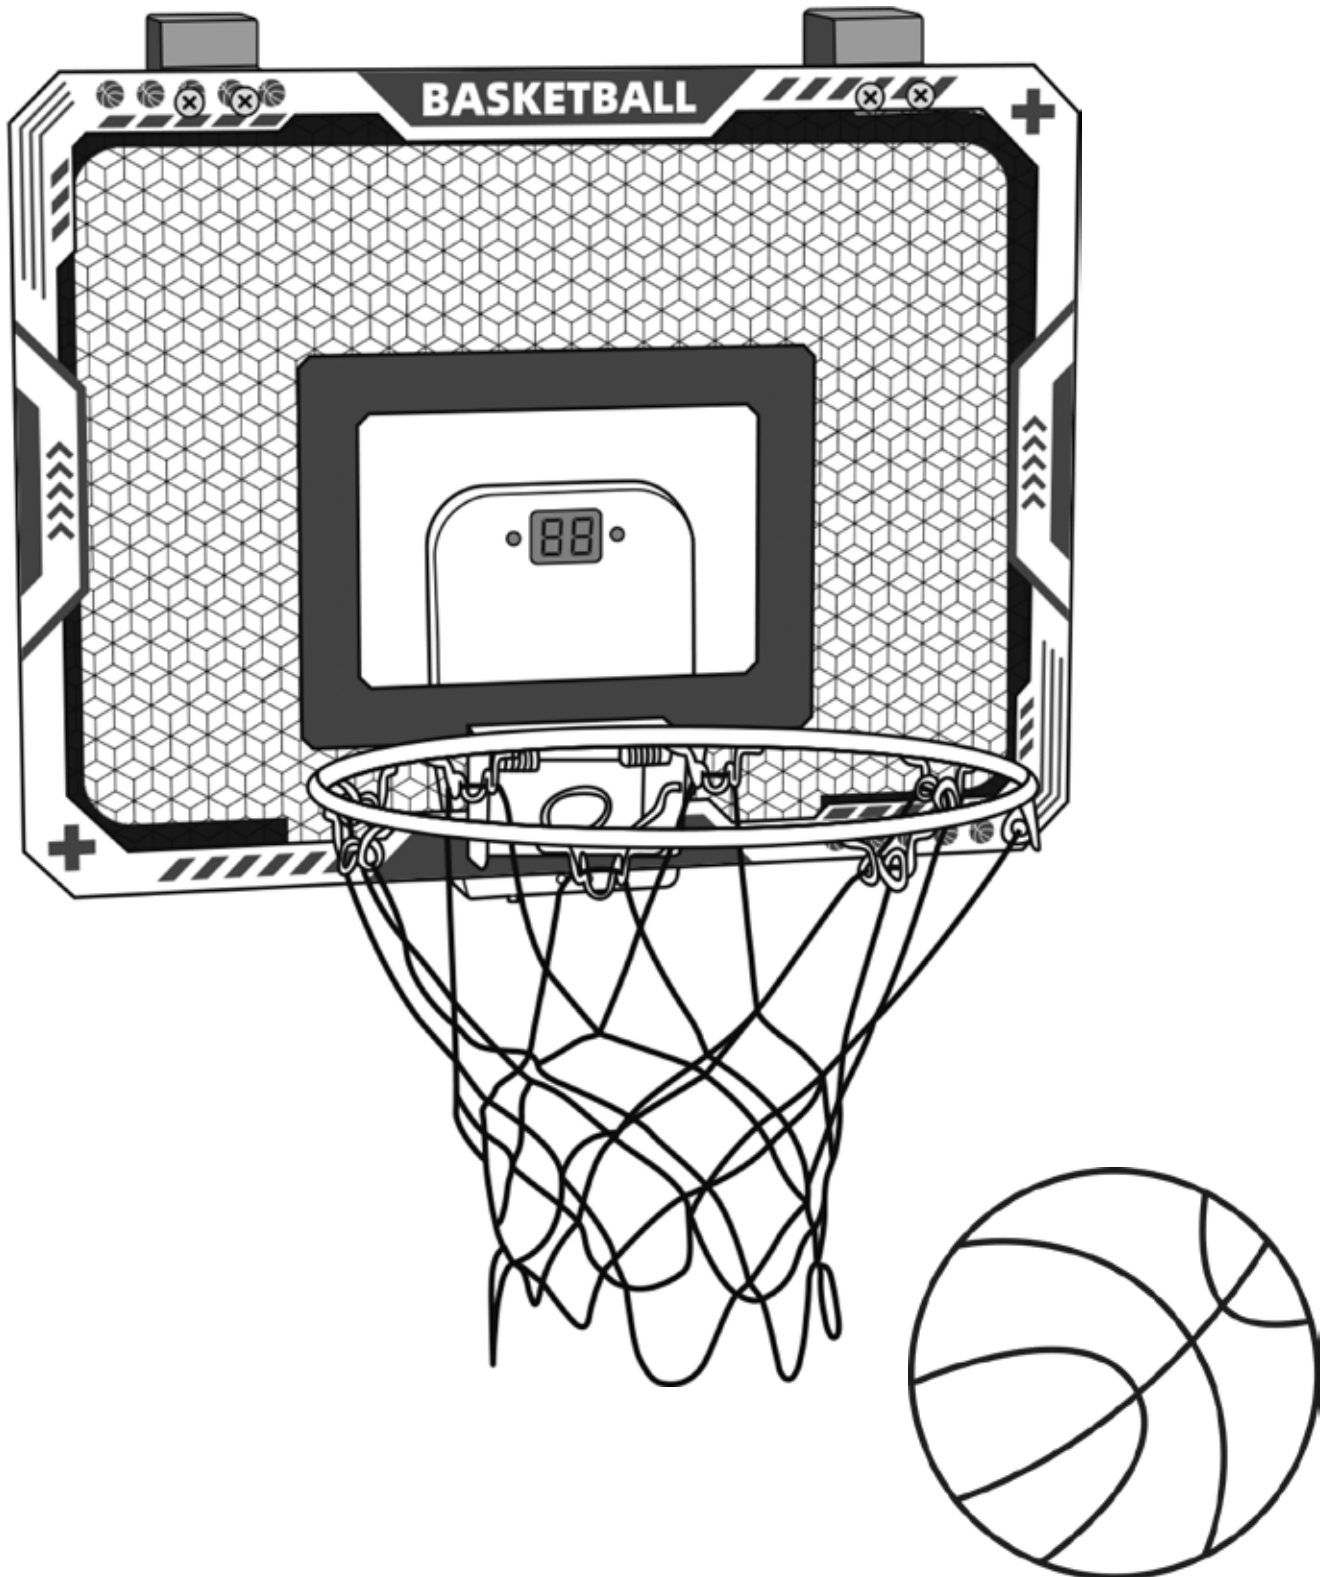


Parts List

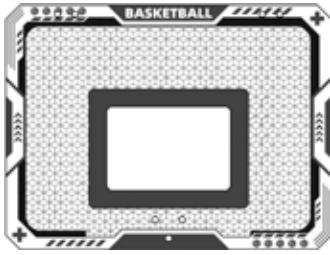

Part 1 x 1pc

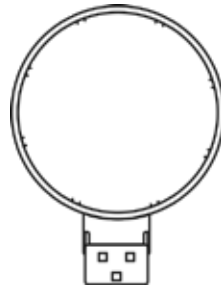

Part 2 x 1pc

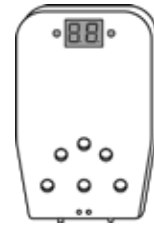


Part 3 x 1pc




Part 4 x 1pc



Part 5 x 1pc

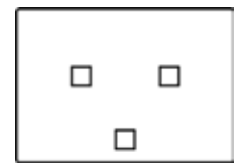

Part 6 x 1pc

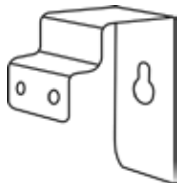

Part 7 x 2pcs



Part 8 x 4pcs



 
Part 9 x 3pcs



Part 10 x 3pcs



Part 11 x 4pcs



Part 12 x 1pc




Part 13 x 1pc





Part 14 x 1pc

Assembly Instruction

Step 1: According to the accessories shown in the picture above, assemble the basketball hoop in order.

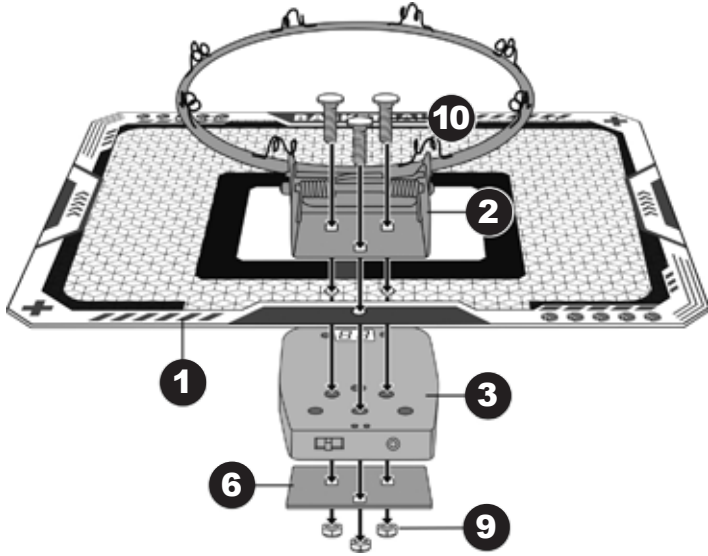


Step 3: Insert the plug on the light circle into the interface of the scorer.

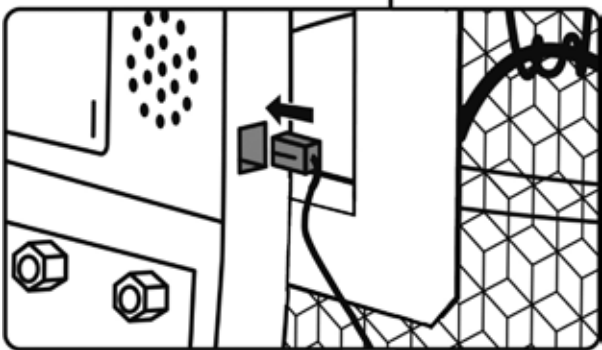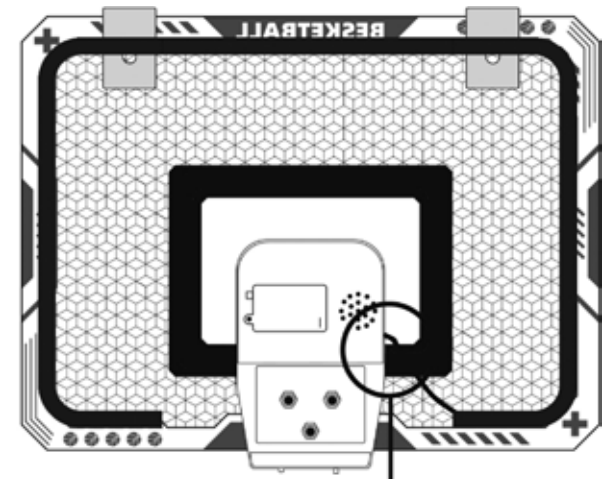


Step 2: As shown in the picture above, use the short screws to assemble the hook.


Note: When assembling, the first screw cannot be tightened too tightly, otherwise the other hole and the hole of the basketball board will not match.

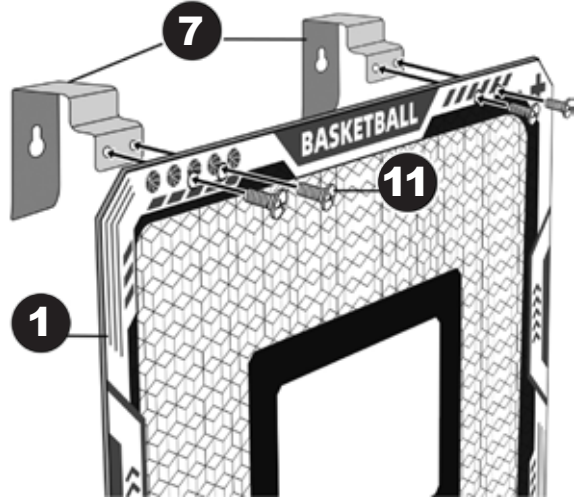

Step 4: Tear off the double-sided tape on the cushion, and stick the cushion on the back of the basketball hoop. (Paste the shock-absorbing cushion according to the direction and position shown in the figure).

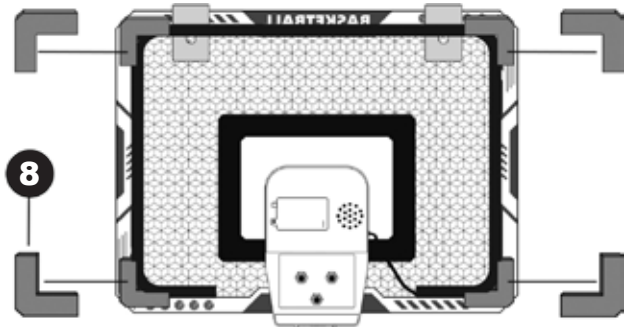

Step 5: Hang up the basket net, the assembly is complete.
TIP: The long circle of the basketball net is upward.


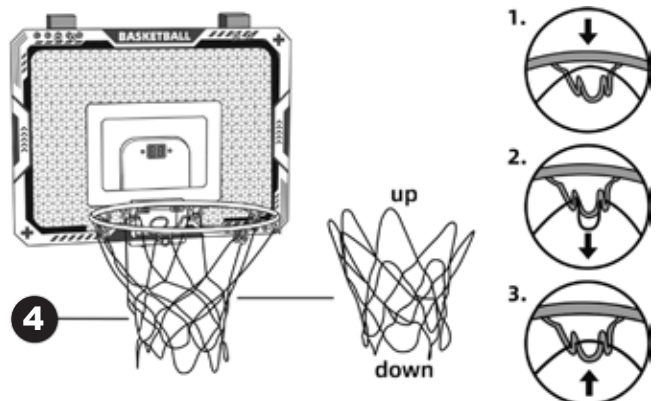


Electronic Scoreboard

Mode 1: SCORING MODE, 2 points for scoring a goal, automatically reset to zero when 60 points are reached.

Mode 2: Countdown mode, one minute countdown. After the countdown ends, a new round of countdown will automatically restart.

Volume adjustment: The default volume is the maximum, press the volume key to set the volume, the order is from large to small, small to large.

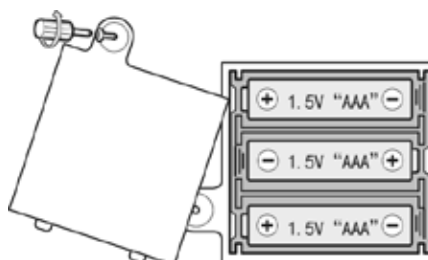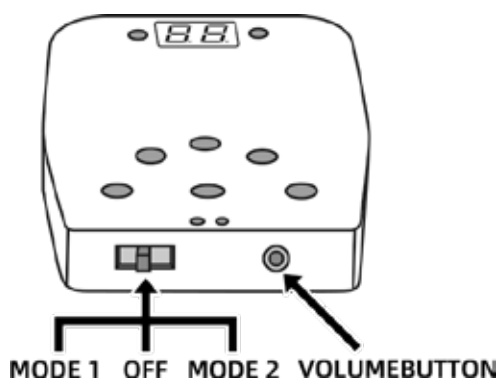

**ELECTRONIC SCOREBOARD USES
3X 1.5V "AAA" SIZE BATTERIES**



Battery Warning :

1. Batteries should be replaced by an adult.
2. Batteries are to be inserted with the correct polarity.
3. Exhausted batteries are to be removed from the battery box.
4. Batteries are not to be short-circuited.
5. Different types of batteries or new and used batteries are not to be mixed.
6. Only batteries of the same or equivalent types as recommended are to be used.
7. Do not dispose of in fire, in water or the general rubbish.

Folding Storage

1: Push down on the basketball hoop in the opposite direction. (Arrow 1 is the position of the lock when the basketball hoop is opened.)

2: Push the buckle upwards, push the buckle to the position indicated by the arrow 2, and the basket can be folded and stored.

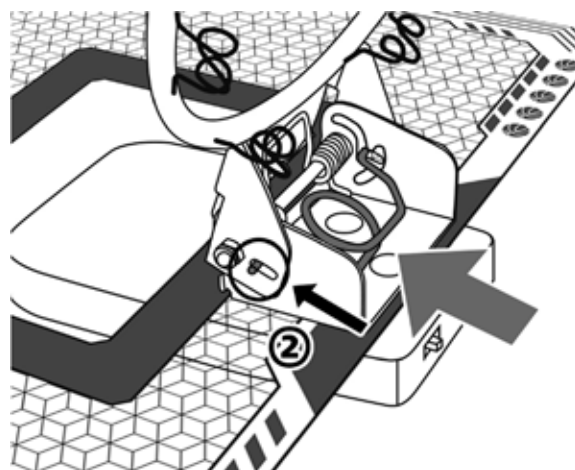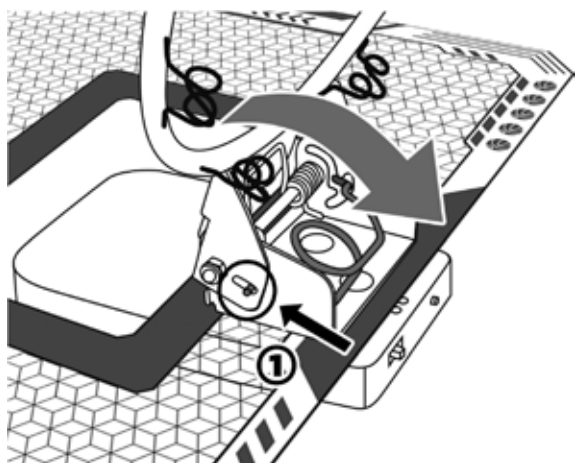

Warning

1. **CHOKING HAZARD**, small parts. Not suitable for children under 3 years.
2. Adult assembly required.
3. Don't aim at face or eyes.
4. To play the game, suggest to hang the unit at the top of a door after assembled well.
5. Suitable for indoor domestic use only.
6. Take out the batteries from battery box when not in use an extended time.
7. Please keep this instruction for future reference.



WARNING: IMPROPER INSTALLATION OR SWINGING ON THE RING MAY CAUSE SERIOUS INJURY OR DEATH!

MADE IN CHINA

CUSTOMER SERVICE:

**KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567**