

MANUAL ARTWORK SPECIFICATIONS

File Name: 43499700\_MAN\_WIRED KIDS DONUT HEADPHONES

Proof Date: 19.11.2024

Designer: AQ

VERSION  
1

PRIMARY MANUAL SPECIFICATIONS

TYPE: Manual

Paper

PAPER: Bright White

WEIGHT: 80gsm

PRINTER INKS & FINISH

 
INK COLOUR: Black Ink Only

INK: Standard

FOLDED SIZE: 110 X 100MM


FOLD TYPE: Bio/Half Fold

SIDES: Double Sided



TOTAL PAGES

 PAGES: 4

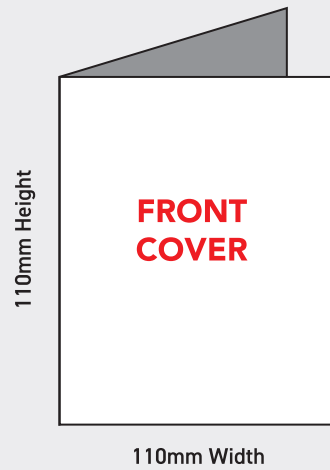

SPECIAL INSTRUCTIONS

Please use 80gsm Bright White Paper.

DO NOT PRINT

Dieline, Folds, Information

CHANGE LOG CREST INTERNAL USE ONLY

V:

**ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION. THANK-YOU.**

FOR QUERIES REGARDING THIS ARTWORK PLEASE CONTACT:  
EMAIL: design@crest.com.au

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

 
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave, Vic, 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au/contact-us	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Thank you for choosing our Anko headphones. We hope you enjoy using them.

Overview:

1. Microphone
2. Call answer and music control button

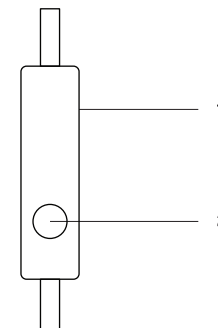

How to use the in-line control functions:

Answer call with the headphones connected to your device via the 3.5mm headphone socket.

 


Wired Kids Donut Headphones

Operating Instructions

Includes:

- > headphones
- > instruction manual

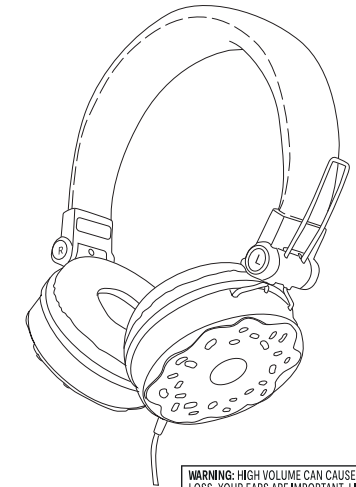

WARNING: HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.

K: 43499700 | T: 70363562  
MODEL: 43499700

ADULT SUPERVISION REQUIRED

A. Call Answer

Answer Call

Press the call answer/music control button to answer calls on your device.

Hang Up/End Call

Hang up during the call, press the call answer/music control button to mute/unmute the microphone, press and hold the button for approx. one second to end the phone call.

Reject Call

To decline an incoming call, press and hold call answer/music control button for about two seconds.

B. Music Control

Pause Music

Press the call answer/music control button once to pause/resume music.

Next Song

Press the call answer/music control button twice in quick succession to skip track forward.

Previous Song

Press the call answer/music control button three times in quick succession to skip track backwards.

C. Voice Assistant

Device's Voice Assistant (Where applicable)

Press and hold the call answer/music control button for two seconds to activate the device's voice assistant (where applicable).

