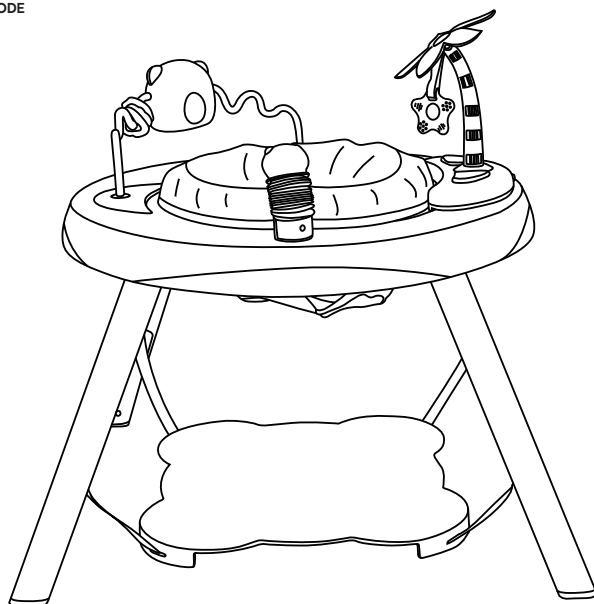
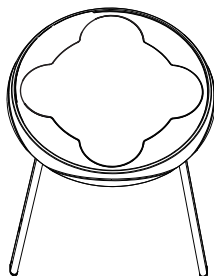
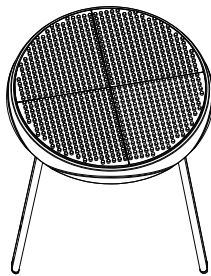


Activity Centre & Play Table

Instruction Manual

6+
months**12**
kgMAXIMUM WEIGHT
OF CHILD IN ACTIVITY
CENTRE MODE

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Safety Instructions

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

> WARNING! Read all instructions before assembly and use of the stationary activity centre. Keep instructions for future use. The child may be hurt if you do not follow these instructions.

>WARNING! The child's safety is your responsibility. For indoor use only.

> WARNING! Before use, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

> WARNING! This product is suitable for one child who is able to sit up unaided, approximately from 6 months of age and is not intended for children weighing more than 12kg when in activity centre mode.

> WARNING! Never leave the child unattended.



> WARNING! This product must be assembled by an adult.

> WARNING! Ensure the child is correctly and safely positioned in the seat. Allow only the child's toes to touch the base plate.

> WARNING! The child should only use the product for a maximum of 20 minutes at a time in activity centre mode.

> WARNING! Keep children away from this product during assembly.

> WARNING! Do not allow a child to fall asleep in this product.

> WARNING! Never move or lift this product with the child in it.

> WARNING! Do not use the activity centre if it is damaged or broken.

> WARNING! Always keep child in view while in the activity centre.

> WARNING! Use only on flat surfaces free of objects that could cause the activity centre to tip over.

> WARNING! To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fire places etc.

> WARNING! Do not under any circumstances apply excessive pressure to the top tray.

> **WARNING!** Keep children away from this product during set up and when not in use.

> **WARNING! FALL HAZARD**

Babies can FALL from product resulting in head injuries.

> **NEVER** use near stairs.

> To avoid tip over, place product on a flat, level surface.

STRANGULATION HAZARD

Strings can cause **STRANGULATION**.

Safety Instructions

- > This product contains small parts. Adult assembly required.
- > Keep hot drinks, electrical cords and other possible sources of danger out of the child's reach.
- > Strings can cause strangulation. **DO NOT** place items with a string around child's neck, such as hood strings or pacifier cords.
- > Do not suspend strings over product or attach strings to toys. Do not add strings or straps to any part of the activity centre.
- > Do not use any hardware or parts other than that supplied.
- > **FALL HAZARD:** Do not place the activity centre on an elevated surface.
- > For indoor use only.
- > Regularly check that all fittings remain tight. Tighten if required.
- > Inspect the product before assembly and periodically during use.
- > Never use this product if there are any loose or missing fasteners, joints or broken parts.
- > Any additional or replacement parts should only be obtained from the manufacturer or distributor. Never substitute parts.
- > Do not under any circumstances apply excessive pressure to the top tray.
- > Other children should not be allowed to play with the product whilst the child is in it as this can be dangerous.

Battery Safety

ATTENTION! BATTERY SAFETY: KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep for future reference. The child may be hurt if you do not follow these instructions.

The music box requires 3 x 1.5V AAA alkaline batteries (not included).
To fit and/or replace batteries: loosen the screw on the battery compartment cover with suitable cross head screwdriver and remove the battery compartment cover. Remove the exhausted batteries and fit new batteries, ensuring that they have been fitted in the correct polarity, as shown inside the battery compartment. Replace the battery cover and tighten the screw.

CAUTION! To prevent possible battery leakage, be sure to follow the guidelines outlined below:

- › Batteries must only be installed by an adult.
- › Alkaline batteries are recommended for longer battery life.
- › Do not mix old and new batteries.
- › Do not mix alkaline, standard (carbon zinc) or rechargeable batteries.
- › Non-rechargeable batteries are not to be recharged.
- › Rechargeable batteries are to be removed from the toy before being charged.
- › Rechargeable batteries are only to be charged under adult supervision.
- › Only batteries of the same or equivalent type as recommended are to be used.
- › Batteries are to be inserted correctly by matching the + and - polarity markings.
- › Exhausted batteries are to be removed from the product.
- › The supply terminals are not to be short-circuited.
- › Dispose of exhausted batteries properly.
- › Remove batteries when product is stored for long periods of time.
 - Use a suitable screwdriver to open the battery compartment cover.
 - Insert the batteries as indicated inside the battery compartment and re-attach the battery compartment cover with screw.




Parts List


A



B

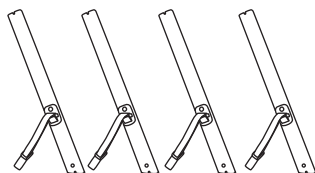

C

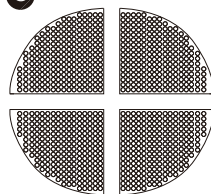

D



E



F



G



H



I



J




K



Contained in your carton are:

Nº	Part	Qty
A	Top tray	1
B	Leg with base plate strap	4
C	Building block base	4
D	Base plate	1
E	Seat unit	1
F	Caterpillar toy	1
G	Caterpillar toy base	1
H	Bear toy	1
I	Bear toy base	2
J	Tree toy	1
K	Music box	1

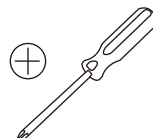

*cross head screwdriver not included

Assembly



Check that all parts are present before starting assembly.

1.1 FRAME ASSEMBLY

Locate the top tray (A) and the 4 legs (B). Align the legs to the corresponding connectors as shown in the diagram. Each leg is marked with a letter which matches the letter on the corresponding connection point, e.g. leg 'A' connects with the connection point marked 'A', same for 'B', etc.

Push the leg marked A into the corresponding connection point. You will hear a “click” as the pin pops out through the pin hole and the leg is secured. Repeat for each connector.

To release, push the pin in and pull off the leg.



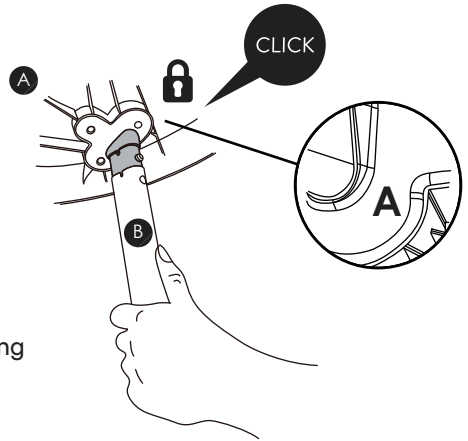
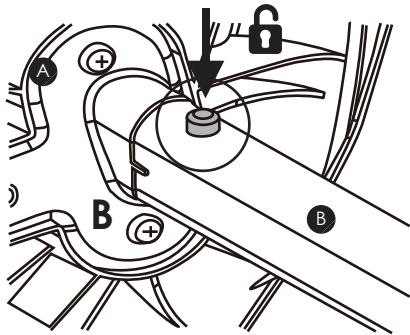


Assembly

1.2 TOY ASSEMBLY

Insert each toy into its corresponding base, i.e the caterpillar toy (F) into the caterpillar toy base (G). Then connect the toy base to its corresponding housing on the top tray (A). You will hear a 'click' when locked in place.

Caution: Please ensure all parts are properly engaged and secured. Regular check is required by an adult.

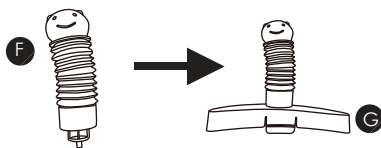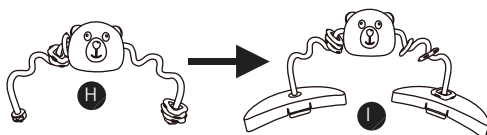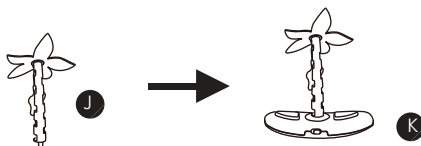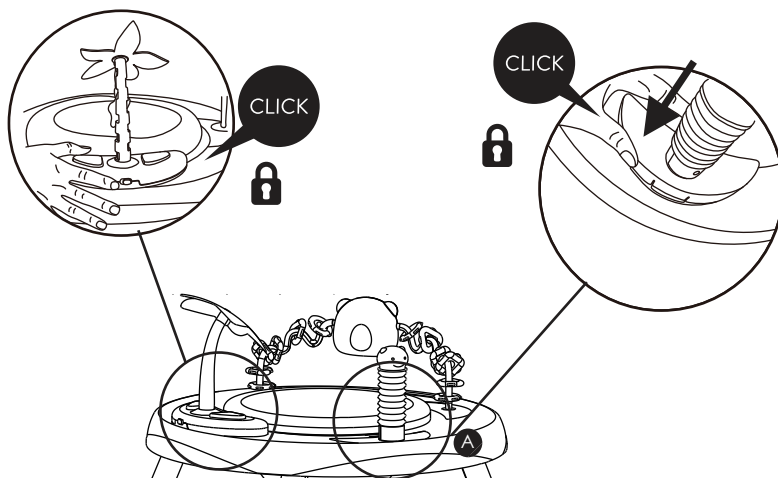


Assembly

1.3 SEAT ASSEMBLY



Insert the seat unit (E) into the centre of the activity centre.

Push down until you hear a 'click'. The seat unit is now connected to the activity centre. The seat should be able to turn 360 degrees freely.

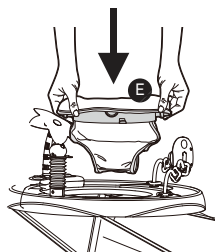

WARNING!

Check that the seat unit is secure prior to placing the child inside.

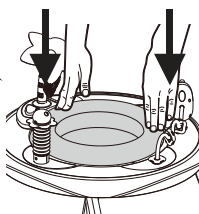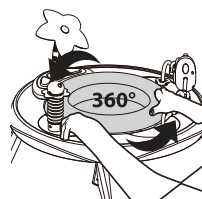


1.4 ASSEMBLE BASE PLATE

The base plate can be adjusted to 2 levels.

For low position, pull the strap through the hole of the base plate until the folded strap end goes through the hole. Release the strap. The folded strap end should lock to base plate, as picture shown.

For high position, further pull the strap until the clip goes through the hole. Release the strap. The clip should lock to base plate, as picture shown.


Check that the straps properly attach to the base plate by applying a few pushes on top of the base plate. Reconnect any loose straps.

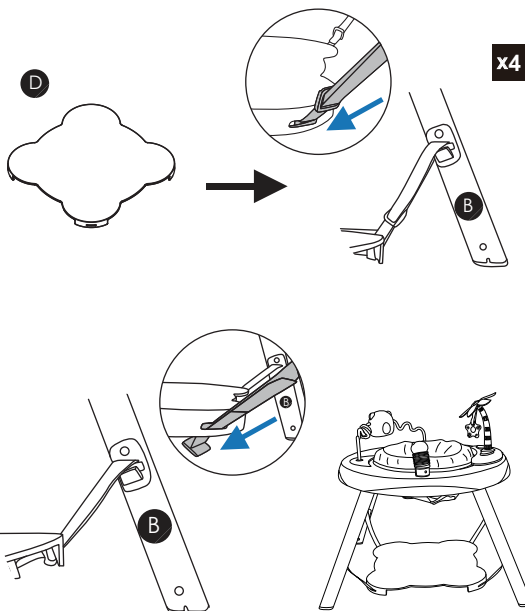

Music Box


2.1 ADDING / REMOVING THE BATTERIES

On the underside of the top tray, squeeze the connection tabs located on either side of the bottom of the music box (K) to release it from the top tray and lift off.

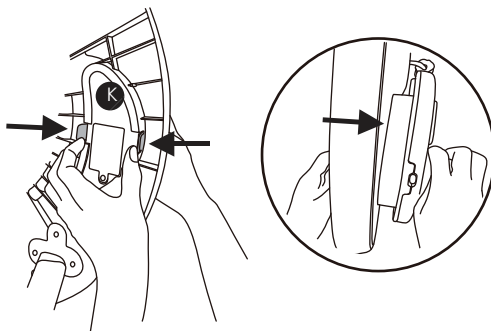

To replace the batteries, use a suitable cross head screwdriver to open the battery compartment cover on the music box. Insert the batteries as indicated and re-secure the battery compartment cover by tightening the screw.

The music box requires 3 x 1.5V AAA Alkaline batteries (not included).

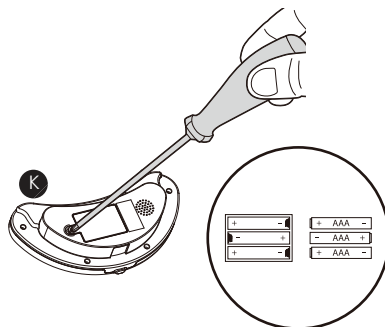


2.2 MUSIC BOX

There are 2 buttons on the music box (K). Press these to play music and to change the tune.

The power switch with volume adjustment is located at the front of the music box under the palm tree.


2 levels of sound volume can be selected by sliding the button.

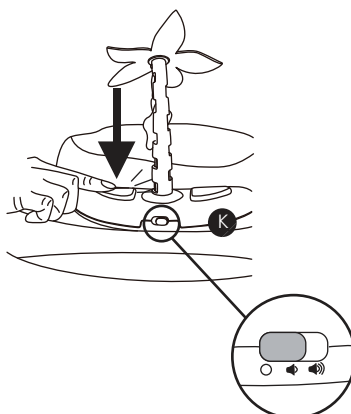



Convert to play table

3.1 CONVERT TO PLAY TABLE MODE

On the underside of the top tray detach each toy base by pressing the connection tabs to release the base and lift off from the top tray.

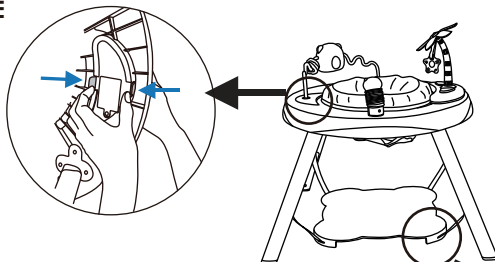


Disconnect the base plate straps from the feet and remove the base plate (D). Remove the straps from the base plate.

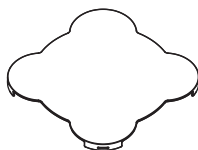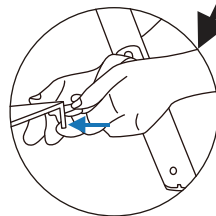


3.2 CONVERT TO TABLE MODE

Attach the base plate (D) to the top tray to convert to table mode.

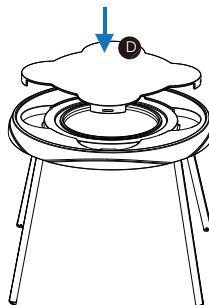

3.3 ADD BUILDING BLOCK BASE

Add the 4 building block bases (C) to the top of the table top to convert to building block play table mode.

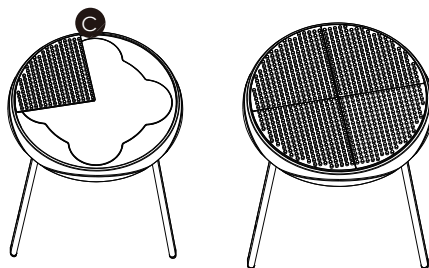

Care and Maintenance

SEAT PAD:

- › Hand wash separately in cold water using mild soap or upholstery shampoo.
- › Do not bleach. 
- › Do not soak. 
- › Do not tumble dry. 
- › Do not dryclean. 
- › Dry flat in the shade thoroughly before reuse and avoid direct heat and sunlight.

ACTIVITY CENTRE:

- › Wipe with a damp cloth and dry immediately with a soft cloth.
- › Do not clean or allow to come into contact with hot liquids, solvents or harsh chemicals such as bleach, ammonia based or spirit type cleaners. Damage may result.
- › Ensure the product is fully dry before use or storage.
- › Always ensure the activity centre is stored in a dry place to prevent mold or mildew developing. Store away from any heat sources and away from sunlight. Prolonged exposure to direct sunlight may cause the fabric to fade.
- › Remove batteries from music box if product is to be left unused for an extended time or when the power of batteries are exhausted.
- › The correct use and maintenance of this activity centre is essential.
- › This product requires regular maintenance to keep it in good working order.
- › Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.
- › Do not use this product if any part is broken, torn or missing.
- › Contact the Customer Service Centre of the entity from which you purchased the product for After Purchase Service.

K: 43-503-773 | T: 70-413-519

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



MADE IN CHINA