

Assembly Instruction

43531950 NATE ENTERTAINMENT UNIT BLACK

CARE INSTRUCTIONS:







 






WIPE CLEAN WITH A SOFT DAMP CLOTH.DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.CHECK AND TIGHTEN ALL PARTS REGULARLY.DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE.KEEP AWAY FROM WATER AND DIRECT SUNLIGHT.STORE IN A DRY PLACE.FOR DOMESTIC USE ONLY.FOR INDOOR USE ONLY.A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON.SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE.



WARNING:

DO NOT STAND OR SIT ON THIS UNIT.DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.DO NOT KNOCK OR DRAG THIS UNIT.USE ONLY ON A FLAT SURFACE. LOAD SHELF EVENLY TO PREVENT FROM TIPPING OVER. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 25KGS FOR TOP, 5KGS FOR SHELF.

Hardware List

	A	6x35mm	2pcs		H	Felt Foot Pad	8pcs
	B	15x10mm	2pcs		I	6x35mm	3pcs
	C	6x30mm	2pcs		J		1pc
	D	4x35mm	3pcs		K	4x12mm	1pc
	E	4x20mm	6pcs		L		1pc
	F	6x18mm	36pcs		M	Paper Cover	36pcs
	G	4mm	1pc				







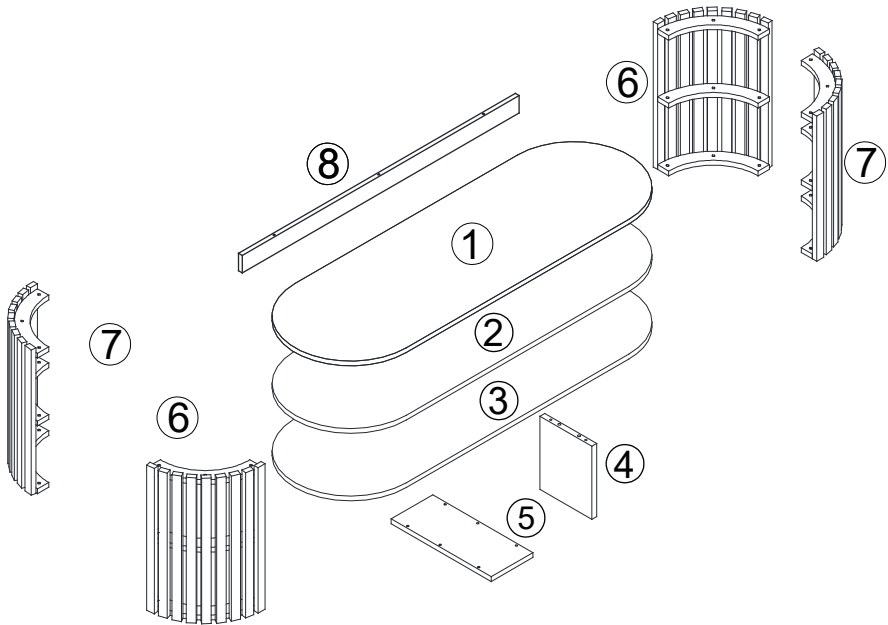 
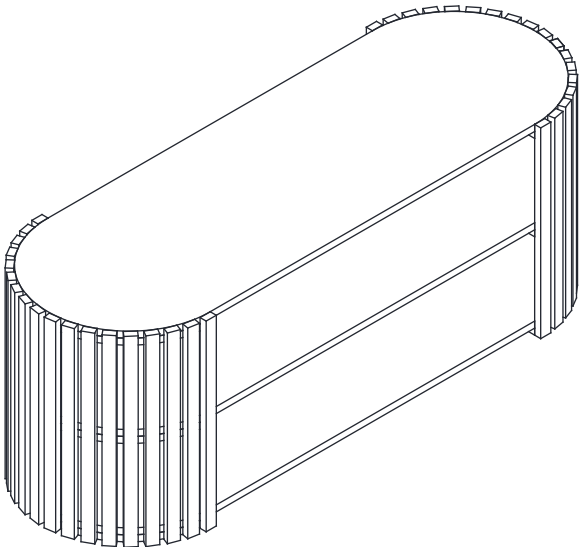 


Tools Required(Not Provided)





Do not tighten the screws fully during assembly.
Fully tighten screws after the final assembly steps.

      
 
 
Part List

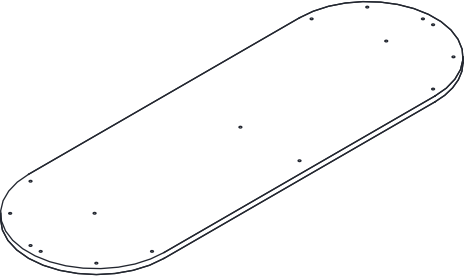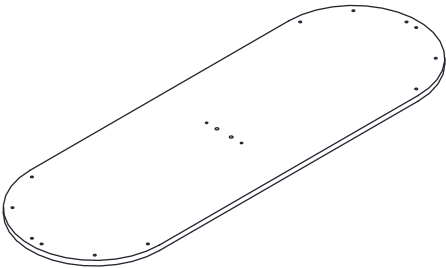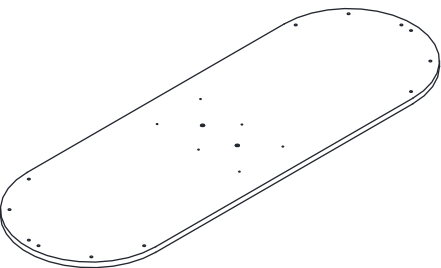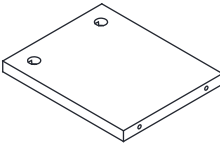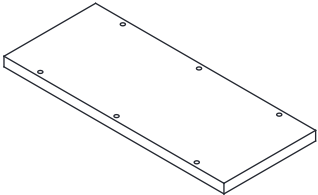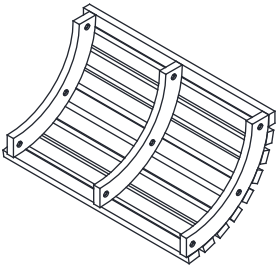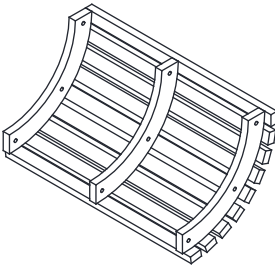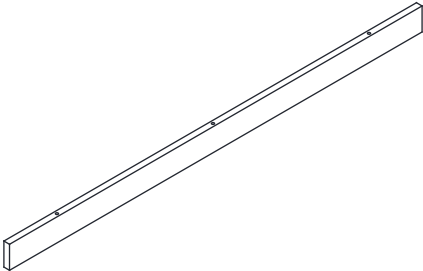							
①	1 PC	②	1 PC	③	1 PC	④	1 PC
							
⑤	1 PC	⑥	2 PCS	⑦	2 PCS	⑧	1 PC

  
Step 1:

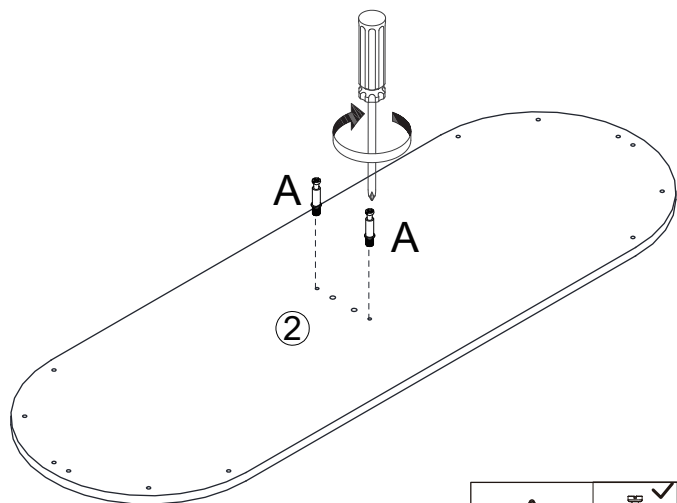

  
 
Step 2:

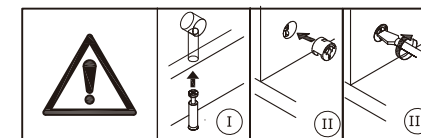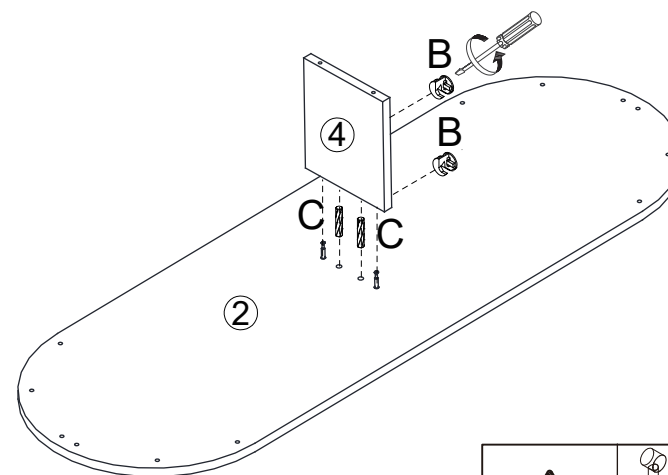


 
Step 3:

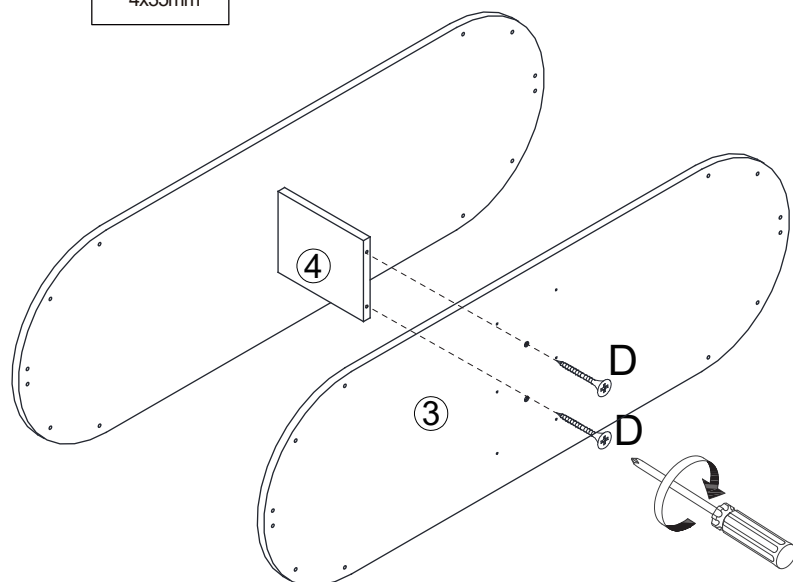

  
Step 4:

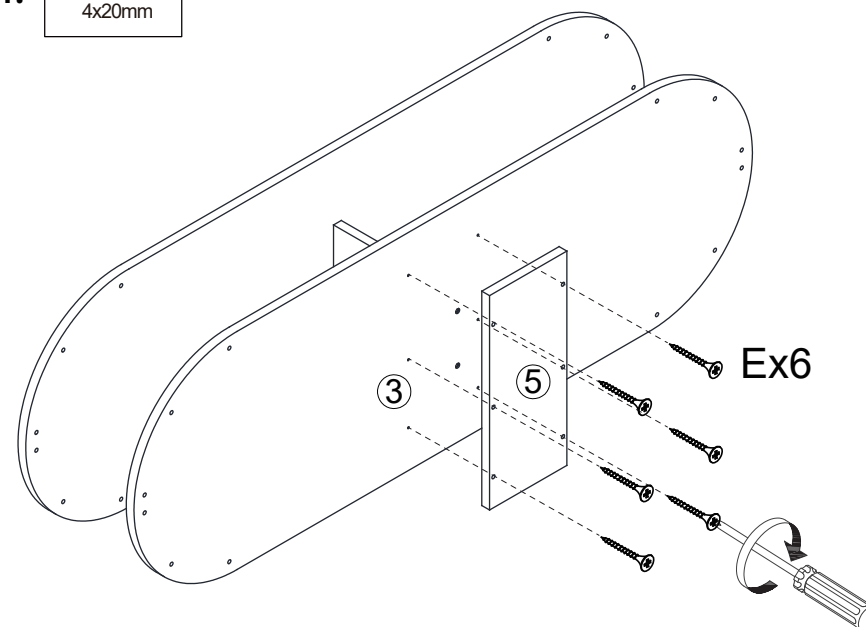

 
 
Step 5:

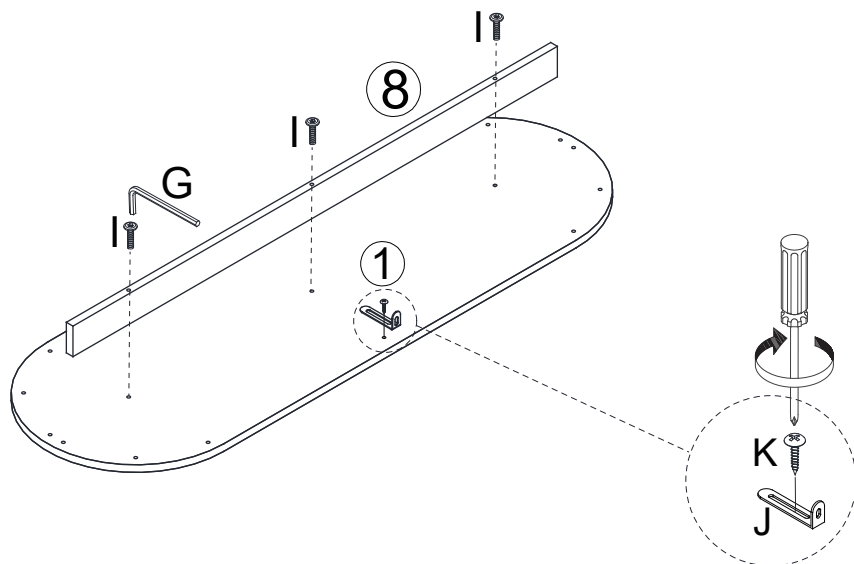



 
Step 6:

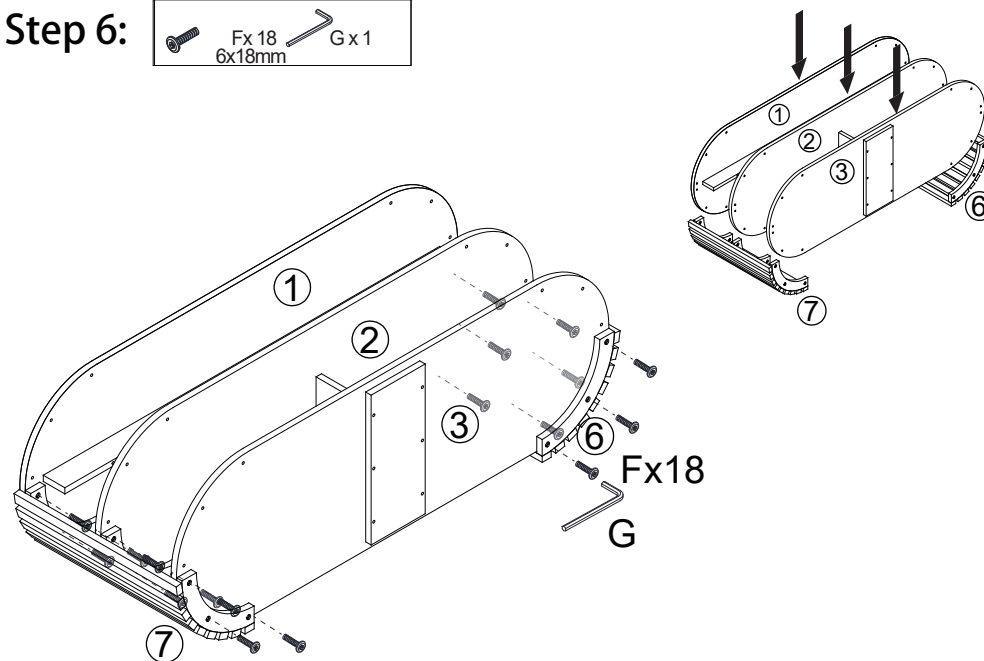

  
Step 7:

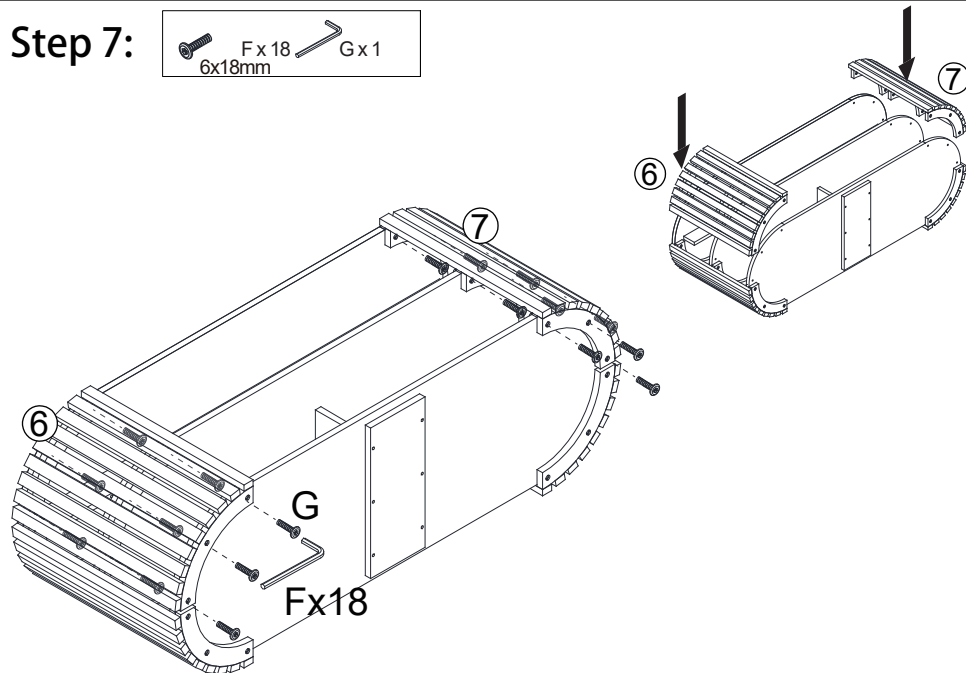

   Step 8:

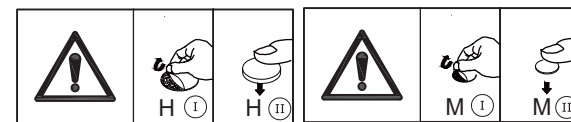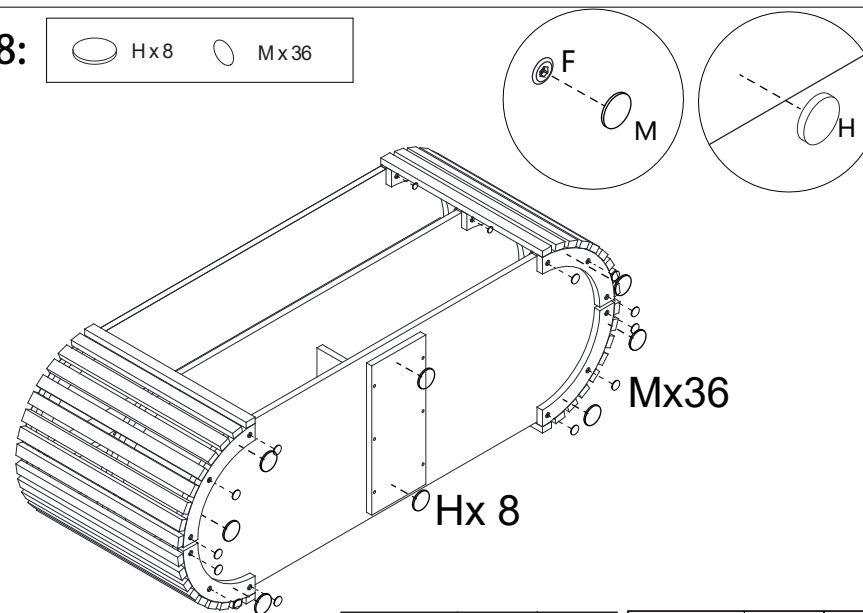

 Step 9:

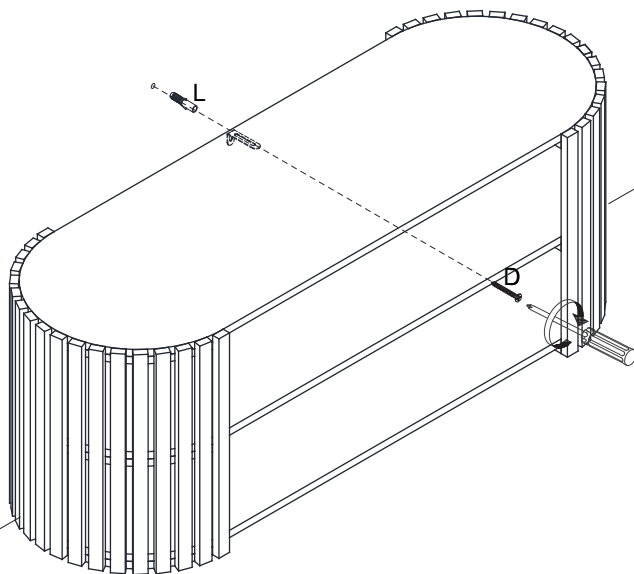

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture.

CAUTION: for your safety when attaching the anchor fixings, please note the following:

 
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



! WARNING

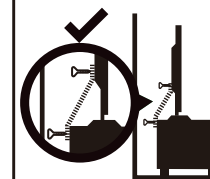

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

**This is a permanent label.
Do not remove!**