 




**Floor Sweeper**  
**SDJ-06Z**  
**User Manual**

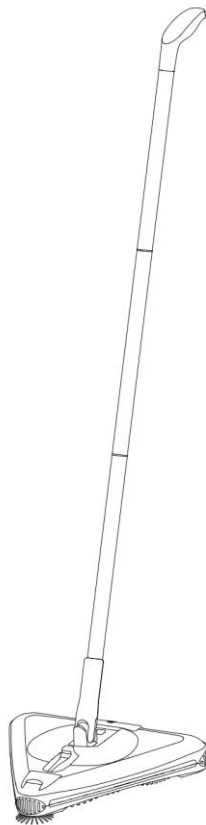

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



## **READ ALL INSTRUCTIONS BEFORE USE.**

1. Read all instructions before using this appliance.
2. Always turn the appliance OFF and disconnect with the USB cable when not in use, before cleaning or storing.
3. Never use the appliance if the cable, main unit or any part are damaged.
4. Do not store this appliance outdoors. Do not charge the battery outdoors.
5. Do not use the appliance outdoors, e.g. on cement or asphalt, as this could damage the bristles.
6. Use of accessories not recommended or supplied with the product may cause fire, electric shock or personal injury.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Do not allow children to play with the appliance.
9. Cleaning and user maintenance tasks may not be carried out by children unless they are supervised.
10. The appliance must only be supplied at safety extra-low voltage corresponding to marking on the appliance.
11. WARNING: Use only an external supply with the following specifications: DC5V, 5W
12. Do not run over electrical supply cords when using this appliance. A hazard may occur if the rotating brush of the appliance run over electrical supply cords.
13. Never immerse the appliance in water or other liquids.
14. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
15. Keep hair, loose clothing and all other parts of the body away from moving parts of the appliance during operation.
16. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
17. Misuse may cause serious injury.
18. Do not use this appliance to clean wet floor.
19. Remove the impediment if the brush is blocked. Turn OFF the appliance before removing impediment.
20. Keep the brushes free of fibers, hairs, and other objects that could impede proper functioning.
21. Ensure that the charging cable is not stretched tightly or kinked.
22. Do not expose the appliance to direct sunlight or high temperatures.

 
23. Keep the appliance away from flammable and explosive substances.
24. The appliance may heat up while it is charging. Place the appliance in a well-ventilated location during the charging process and do not cover it.
25. Switch the appliance off immediately and disconnect any connected cables from the appliance if you hear any abnormal noises, smell fumes or notice any smoke. Have the appliance checked by a qualified specialist before using it again.
26. The sweeper is designed ideally for wood, ceramic, tile and other smooth surface. It can be used on very short hairless carpets.
27. This sweeper is not suitable for carpets with long fibre as carpet fibre may interfere with the brush. If this occurs, the sweeper motor will be turned off automatically. Restart the sweeper after approximately 1 minute.
28. Do not sweep up any burning, smoking or flammable objects.
29. This product is for household use only and not designed for commercial use.
30. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
31. The product is equipped with a lithium-ion battery. Do not throw the rechargeable battery into fire and do not subject it to high temperatures. There is a risk of an explosion!
32. This appliance contains batteries that are non-replaceable.
33. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
34. For cleaning, please refer to CLEANING AND STORAGE section.

## **CAUTION!**

35. The product has built-in lithium-ion batteries. Pay attention to the following:
  - a) Only use and store the product in an environment where the temperature is between -5°C and +35°C.
  - b) If not used for a long time, re-charge every three months to prevent battery damage.
  - c) Charging time may be longer when the room temperature is below 10°C.
  - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
36. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C.
37. Do not expose the product to high temperatures (above +35°C), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS  
FOR FUTURE REFERENCE**

## KNOW YOUR FLOOR SWEEPER

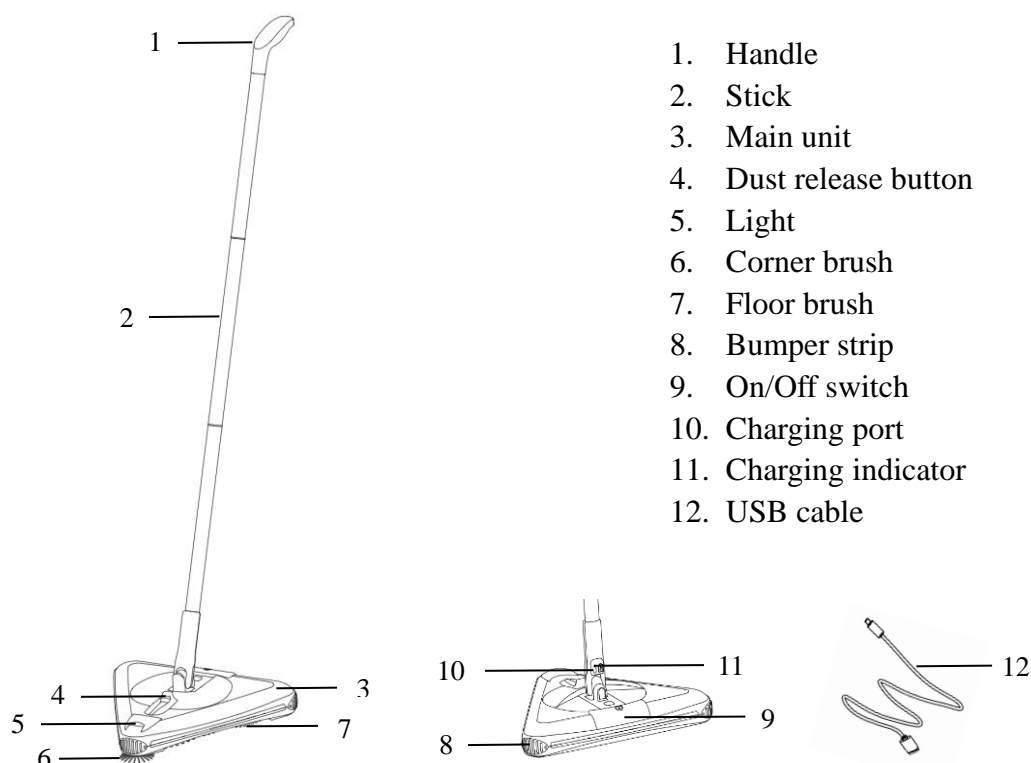

### IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to respective Customer Service Centre.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

### BEFORE FIRST USE

- Fully charge the appliance before first use.
- Switch off the appliance before charging.
- The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 1A specification.

**WARNING: Use only the supplied USB charging cable to charge the appliance.**

- Red indicator lights up when charging, and the light gets green when fully charged.
- The charging time is approx. 4 hours.
- The normal working time is approx. 2 hours after fully charged.

## USE YOUR FLOOR SWEEPER

### Floor sweeper assembly

- Connect the parts together with the main unit.

### Sweep the floor

- Tread on the on/off switch to turn on the appliance. The appliance will start to operate with the power indicator light illuminated.
- Grab the handle and swing the handle towards back side, left or right side for a comfortable working posture.
- Move the appliance to any direction you want to clean the floor.

Notes:

Keep the brushes free of fibers, hairs, and other objects that could impede proper functioning.

**IMPORTANT! Do not use the appliance to sweep up any liquids and do not use it on a moist surface.**

**Do not use it on cement or other rough surfaces.**

**Do not use the appliance to collect strings or fabric fibers.**

**Do not use the appliance to clean carpet fringe or frayed carpets.**

This sweeper performs best on smooth surfaces such as wood, ceramic, tiles and marble. It will also work on low pile carpet, but with reduced performance. Not ideal for use on high pile carpets.

If a brush should fail during operation, tread on the on/off switch to turn off the appliance and remove the blocks.

Allow the appliance to rest for 60 minutes after 15 minutes use.

 
 
- Tread on the on/off switch to turn off the appliance after sweeping, the light will go off.

**IMPORTANT!**

**Switch off the appliance OFF after each use even if the appliance is powered off automatically when the appliance has run out of power.**

### Release the dust

- Position the main unit above a dustbin.
- Push the dust release button, the cover under the main unit will open and the dirt particles will fall out.
- Place the sweeper on flat and smooth floor and slightly push down until you hear a click, the cover is now back in place.

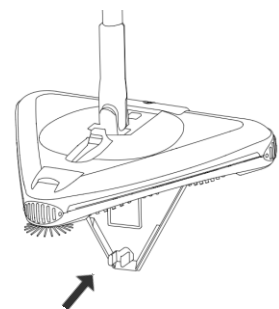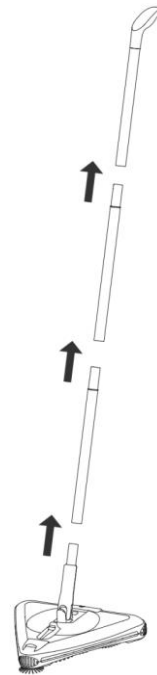

## CLEANING AND STORAGE

- Use a dry cloth to clean the product including the dust bin
- Remove hair and fibers from the bristles.

Do not use abrasive material to clean the appliance.

Do not immerse the appliance in water or any other liquid.

- Ensure the product is clean before storage.
- Store the product indoors.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of  $-5^{\circ}\text{C}$  to  $+35^{\circ}\text{C}$  and a relative humidity of 25% to 75%.

## TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Rated power: 5W

Battery: Li-ion 3.7V 1500mAh

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>