


# anko

## PIZZA MAKER

### Instruction Manual

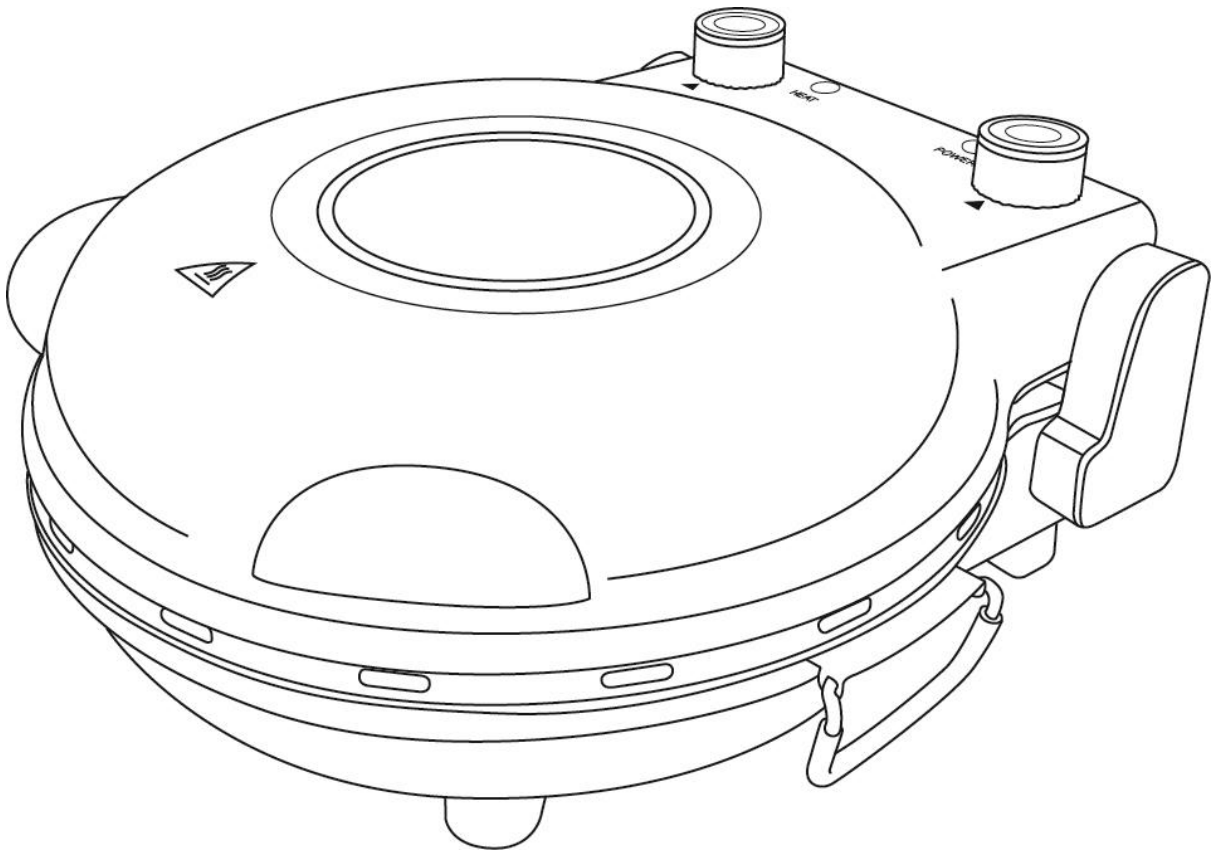

Model No.: APM501

Rev 01

To ensure the proper operation of this device, please read this instruction manual carefully before using the device and keep them for further reference.

# IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this appliance.

## Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



This symbol provides you with useful additional information about assembly or operation.



This symbol identifies that the material used in the product is safe for food contact.



**CAUTION: HOT SURFACE!** The surfaces are likely to get hot during use.

**When using electrical appliances, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:**

- **Usage restrictions:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **Children:** Supervise children to ensure that they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children. Keep the appliance and its cord out of reach of children less than 8 years old.

**Electrical Safety and Cord Handling**

- **Voltage:** Make sure that the outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If it does not match, contact after sales support and do not use the appliance.
- **Exclusive outlet/separate circuit:** Insert the plug securely into a properly earthed mains socket that is within easy reach so that the plug can easily be removed if necessary.
- **No timer:** Do not connect the appliance to an external switching device such as an external timer or a separate remote-control system.



**DO NOT IMMERSE!**

**To reduce the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid. If it falls into water, immediately unplug it from the electrical outlet. DO NOT touch it or reach into the water.**

- **Protect from moisture:** Do not expose the electrical connections to water. Do not use the appliance or touch the plug, with wet or damp hands, on a damp floor or when the appliance itself is wet. Do not spill liquids into the product.
- **Electrical safety:** Do not insert any objects into the appliance.
- **Protect the power cord:** Do not kink, squash, or strain the power cord and protect it from sharp edges and heat. Do not let the cord touch hot surfaces, including the cooking surfaces when it is in use. Do not place anything on top of the cord. Do not wrap the cord around the appliance and never pull the cord to lift, carry or unplug the appliance.
- **Power cord:** A short power cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. If it is necessary to use an extension cord, make sure that it has been approved and has the same or higher electrical rating (voltage and power) as the product (check on the rating label underneath). Arrange the extended cord so it will not drape over the table or bench-top where it can be pulled on or tripped over accidentally.
- **Damage:** check the power cord regularly for visible damage. If it is damaged, do not use the appliance. A damaged cord must be replaced by the manufacturer, its authorised service centres, or a similarly qualified person to avoid any hazards. If winding the power cord, avoid tight bends as this could damage the cord.



### **Do not use when damaged!**

**Do not pick up or operate an appliance with a damaged cord or plug, or after it malfunctions or has been dropped or damaged in any manner. Contact after sales support for advice on repair or return of the damaged product.**

- **Disconnect:** Always turn the power off at the power outlet before you insert or remove a plug. Unplug the appliance before cleaning, servicing, maintenance or moving the appliance, and after use. Grip the plug when disconnecting, do not pull on the cord.
- **After use:** Wait until the appliance is unplugged and has cooled completely before cleaning, maintenance or moving the appliance.

## **Usage Conditions and Restrictions**

- **Domestic use only:** This appliance is intended to be used in households and similar applications such as: staff kitchens areas in shops, offices, and other working environments; farmhouses; by clients in hotels, motels, and other residential type environments; bed and breakfast type environments. Do not use it outdoors.
- **Intended purpose:** Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock, or injury.
- **Accessories:** Do not use accessories that are not supplied with this unit. The use of accessories that are not recommended or sold by the manufacturer can cause fire, electric shock, or injuries.
- **Flammable materials:** Do not use the appliance in the close vicinity of flammable materials such as curtains, drapes, paper, wall coverings, tea towels or clothing. Do not use it under a cupboard or close to a wall as scorching may occur.
- **Work area:** To ensure efficient operation and avoid overturning, always place the appliance on a level and stable, heat and flameproof work surface. Do not use it on an inclined plane or unstable surface. Always ensure there is sufficient free space above and around all sides of the appliance for air circulation.
- **Protect from heat:** Do not place the appliance on or near a hot gas or electric stove/cooktop, or near a heated oven.
- **Keep clear:** Never place anything on top of the appliance while it is in use or still hot.
- **During use:** Do not move the appliance while it is in use. Do not cover it when it is in use. Food may burn, so always monitor it when using the appliance.
- **Utensils:** Only use wooden, silicone or heat resistant plastic utensils to remove foods from the appliance.
- **Storage:** Do not leave any cardboard, plastic, paper or similar in the appliance.
- **Cleaning:** Always remove the plug from the socket before cleaning the appliance and let it cool down until the cooking surfaces are safe to touch.
- **Repair:** The appliance has no user-serviceable parts contained inside. Do not attempt to repair, disassemble, or modify it yourself.
- **Liability:** Misuse or improper installation may result in the risk of fire, electric shock, and/or injury. We assume no liability for any eventual damage or injury caused by misuse of the product or non-compliance with the instructions.

- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- Do not place oil or baking paper directly on the baking stone.
- Do not cover the baking stone or any part of the appliance with metal foil. This will cause overheating of the appliance.



During and after use, the appliance and its accessories are **EXTREMELY HOT**. Always use oven mitts or gloves or other heat protection to touch handles and accessories.



- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture, or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event that the appliance is dropped into water, turn off the power at the power outlet and remove the plug immediately.

**DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.**

- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

## SAVE THESE INSTRUCTIONS




## PLEASE READ ALL THE INSTRUCTIONS THOUGHLY BEFORE FIRST USE

1. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
2. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
3. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
4. **DO NOT PLACE THE APPLAINECE AGAINST A WALL OR DIRECTLY NEXT TO OTHER APPLIANCES. LEAVE AT LEAST 35CM OF FREE SPACE AROUND THE APPLIANCE WHEN IN USE.**
5. **NEVER** leave the appliance unattended while in use.
6. **DO NOT** insert anything in the ventilation slots and do not obstruct them.
7. Intended for countertop use only.
8. **DO NOT** use outdoors. **DO NOT** use in moving vehicles or boats.
9. Ensure that your food is cooked thoroughly prior to eating to avoid illness.
10. **DO NOT** place any of the following materials in the appliance: paper, cardboard, plastic, roasting bags and the like.
11. **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury **ALWAYS** use protective heat pads or insulated oven mitts and use available handles and knobs.
12. Spilled food can cause serious burns. Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.
13. **DO NOT** clean the appliance with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.
14. **DO NOT** use the appliance as a source of heat or for drying.

**CAUTION! DO NOT COVER THE APPLIANCE WHILST IT IS OPERATING.**

## PRODUCT OVERVIEW

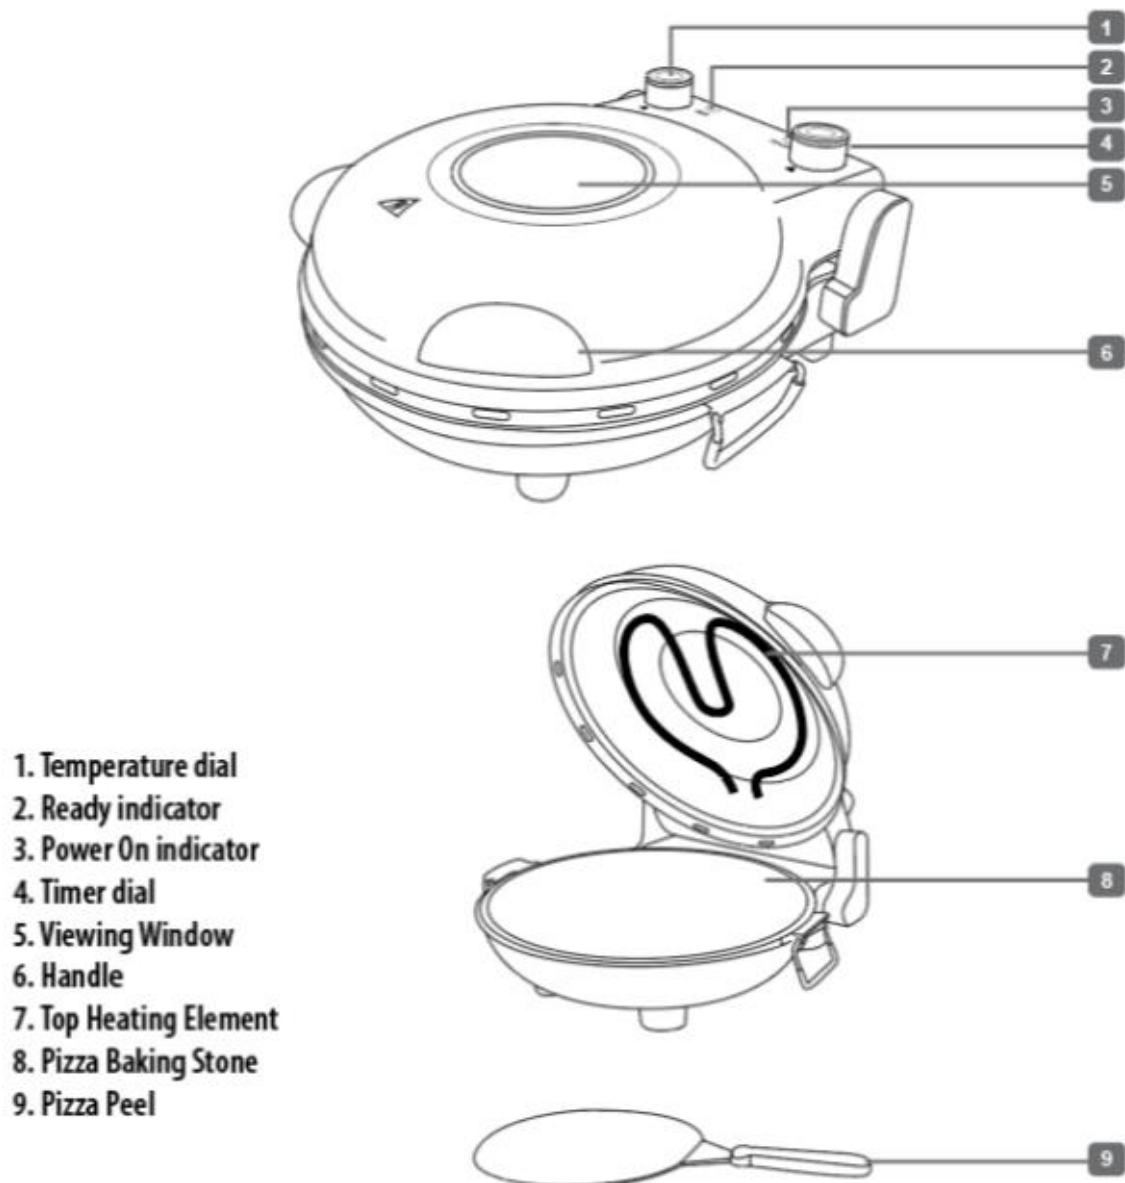

# INSTRUCTIONS

## USING YOUR PIZZA MAKER FOR THE FIRST TIME

Carefully unpack the Pizza Maker and remove any packaging. Check to make sure that all parts are included (see Product Overview) and check whether the product or individual parts are damaged. If this is the case, do not use the product. Ensure to read all instructions carefully and keep them for future use.

### Cooking on the Pizza Stone

Place the appliance on a stable, horizontal, flat and heat-resistant surface.

**IMPORTANT! To prevent heat damage, place the appliance on a heat-resistant surface only. Not recommended to use directly on laminated / vinyl bench top or any surfaces sensitive to heat. Placing the pizza maker on an insulated heat pad is recommended.**

**CAUTION!** The pizza baking stone and handles will be extremely hot. Ensure to use heat proof oven mitts to protect your hands when lifting the lid. **DO NOT** touch the baking stone while it is warm or hot.

- Ensure that the timer dial is in the “OFF” position and check the inside of the pizza maker to ensure that there is nothing on the baking stone.
- Connect the supply cord plug into a mains power outlet socket.
- Pre-heating the pizza maker prior to use, will help with the baking results. Turn the Temperature dial to the maximum heat setting and the Timer dial to 5 minutes. Both indicator lights will illuminate indicating that the pizza maker is pre-heating.
- While the pizza maker is pre-heating, prepare your pizza.

**NOTE:** It is not recommended to top your pizza too heavily or densely as this will affect the cooking process. The toppings should always be below the height of the top heating element to avoid burning.

**NOTE:** If you intend to add frozen toppings to your pizza, these should be defrosted first to ensure that they are cooked through.

**NOTE:** Once pre-heated, it is recommended to lightly dust the baking stone with some plain flour to help for an even cook, and crisp base.

- Once the pizza maker is preheated, carefully lift the lid and slide your pizza onto the heated stone.

**CAUTION!** The pizza baking stone and handles will be extremely hot. Ensure to use heat proof oven mitts to protect your hands when lifting the lid. **DO NOT** touch the baking stone while it is warm or hot.

- Close the lid of the pizza maker and leave the Temperature dial at maximum setting. Most pizzas will bake in approximately 10 minutes.

**NOTE:** Cooking times depend on the thickness of the pizza crust and/or topping. Ensure to monitor the cooking process, avoid toppings rising too high, and touching the heating element during cooking.



- View through the window or carefully open the lid, to check the pizza cooking status. If your pizza is ready, carefully remove it from the baking stone, if it requires a longer cooking time, gently and carefully close the lid and allow the cooking process to continue.
- If the pizza is cooking unevenly, using the pizza peel, insert it under the pizza dough and gently rotate it. If large air bubbles form in the dough, it is recommended to use a fork to prick and flatten the bubbles before closing the lid.
- If you are cooking with a frozen pizza base, allow the dough to thaw before cooking. Once thawed, slide the pizza directly onto the pre-heated baking stone.

**NOTE:** Do not attempt to bake a sticky dough on the baking stone. If the dough is sticky, flour the stone before placing the dough directly on the stone.

- When cooking is complete and the pizza is cooked, turn both dials to the OFF position.
- **Unplug the Pizza Maker.**
- Open the lid, use the pizza peel to remove the pizza from the stone and place it on a plate or a cutting board.
- Let the pizza cool slightly and use a pizza cutter to cut the pizza into slices. Never cut the pizza directly on the baking stone as this will cause damage.



**Extreme caution is needed when opening the lid as a build up of steam may be quickly released. Heat resistant gloves or oven mitts are recommended when opening the pizza maker to ensure safety.**

## CLEANING AND MAINTENANCE

### NOTICE!

Improper handling of the product may result in damage.

**NOTE:** Ensure that the product is disconnected from the power outlet and cooled before cleaning.

**IMPORTANT:** Never submerge the pizza stone into water. This can permanently damage or crack the pizza stone. Do not use any soap or detergent on the stone.

- Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers and the like as they may damage the appliance.

### Cleaning and care of the baking stone

- To maintain the longevity of the baking stone, it is recommended to complete routine cleaning. Make sure the stone is completely cool before handling. For stuck-on food, gently scrape it off. Store the baking stone in the appliance when not in use.
- Never submerge the baking stone into water. This can permanently damage or crack the baking stone.
- Never use oil or detergent directly on the baking stone: the baking stone is porous and will absorb the detergents.
- Never use a knife or pizza cutter on the stone as this could damage the stone. Remove the pizza from the stone prior to cutting.
- Avoid extreme temperature changes to the stone. (EG. Hot to Cold)
- The stone is fragile and can break if bumped or dropped.
- The stone is very hot during use and stays hot for a long time after use.
- Do not cool the stone with water or use it when damp.
- To clean off burned food marks, wait until the stone is cool, use two hands to carefully take it out of the appliance, remove any loose or large debris.

**NOTE:** The structure of the stone is porous, and stains will remain after use even after cleaning, this is normal. This will not affect the performance of the stone.

**IMPORTANT:** Never submerge the pizza stone into water. This can permanently damage or crack the pizza stone. Do not use any soap or detergent on the stone.

## STORAGE

All parts must be completely dry before being stored.

- Always store the product in a cool and dry environment.
- Keep the product out of direct sunlight.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The top of the pizza is burnt.	The temperature has been set too high.	If you feel that the top is cooking faster than the bottom, when you check the pizza, turn the appliance setting back to 4 and let the pizza to continue cooking without the thermostat light on. Alternatively, leave the lid open for a few minutes so that you can watch the pizza as it bakes.
The bottom of the pizza is burnt.	The temperature has been set too high.	Make sure that the pizza maker is preheated to level 5. When the light goes out, let the stone rest for a few minutes before putting the pizza in. If you are cooking several pizzas in succession, it is best to leave the lid open for a few minutes between the cooking and then return the pizza maker to setting 4.
Pizza stone is dirty	Humidity on the stone/bench.	Don't worry if the pizza stone has marks This may enhance the flavour of the pizza. Scrape off the excess food with a scraper or a stiff-bristled brush and wipe it off with a paper towel or clean tea towel.
The READY indicator light goes on and off.	This is an automatic thermostat light.	The lights stay on until the appliance has reached the desired temperature setting.

## TECHNICAL DATA

MODEL: APM501  
SUPPLY VOLTAGE: 220-240V~, 50-60Hz  
POWER CONSUMPTION: 1200W

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>



# Stains on Pizza Stone are normal



**NO!** SOAP OR  
DETERGENTS



**NO!** DISHWASHER



## CLEANING TIPS:

- Scrape off any leftover residue with a plastic scraper.
- Clean with a brush and water only (may use baking soda).

### NOTICE:

The structure of the stone is porous and stains will remain even after cleaning. That will not affect the performance of the stone.

### WARNING:

Do NOT use any kind of Soap or Detergents to prevent unpleasant odours during use.