


INSTRUCTIONS

3+
years

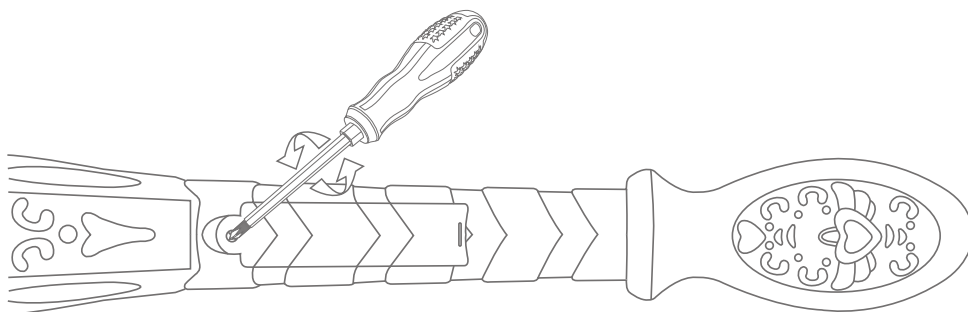

STEP 1: USE A CROSS SREWDRIVER TO OPEN THE BATTERY COVER.



STEP 2: MOVE THE PLASTIC SLIDE TO THE BOTTOM AND PUT THE BATTERY TOWARDS THE TOP.



STEP 3: MOVE THE PLASTIC SLIDE TO BATTERY.




STEP 4: PUT THE BATTERY TOWARD THE BOTTOM.



STEP 5: MOVE ONE PLASTIC SLIDE TO THE TOP BATTERY AND KEEP ONE ON THE BOTTOM.



STEP 6: SETTLE THE LAST BATTERY IN THE MIDDLE.

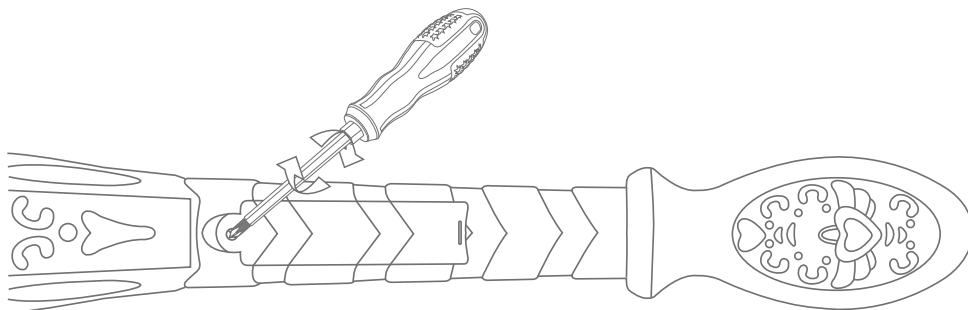

STEP 7: CLOSE THE BATTERY COVER AND SCREW IT TIGHTLY.



PLEASE KEEP THE INSTRUCTION FOR FUTURE REFERENCE.

K: 43-539-260 | T: 71-016-788

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.