

43541850 INFLATABLE RIDE ON HORSE COSTUME



Instructions:

Components	Step 1: Take out the fan and twist off the top cover.	Step 2: Put the fan in the round hole of the costume.	Step 3: Twist the top cover to secure the fan.
	<p>Step 4: Put the battery case into the pocket of the costume and plug in the USB</p> <p>Battery installation: Have an adult use a small Phillips® screwdriver to remove the battery compartment top. Insert '4 x 1.5V AA size' batteries following polarity markings. Recommend using alkaline batteries. The batteries included are for demonstration purpose and should be replaced by an adult to improve performance.</p>		<p>Step 5: Put on the costume and switch fan on.</p>

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE PRODUCT WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

- 1) THE FAN AND THE BATTERY COMPARTMENT SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, USB, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.
- 2) THE COSTUME SHALL ONLY BE USED WITH THE FAN AND BATTERY COMPARTMENT SUPPLIED BY THE MANUFACTURER. NOT TO BE CONNECTED TO MORE THAN RECOMMENDED NUMBER OF THE FAN AND BATTERY COMPARTMENT SUPPLIED.
- 3) THE FAN IS NOT A TOY, PLEASE USE AS INTENDED, ADULT SUPERVISION IS REQUIRED.
- 4) THE COSTUME LIABLE TO BE CLEANED WITH LIQUIDS ARE TO BE DISCONNECTED FROM THE POWER SUPPLY BEFORE CLEANING. REMOVE THE FAN AND BATTERY COMPARTMENT AND USB BEFORE CLEANING.

CAUTION: NEVER IMMERSE FAN, BATTERY COMPARTMENT AND USB INTO WATER AND NEVER GET THEM WET.

43541850

Size: 150x250mm